


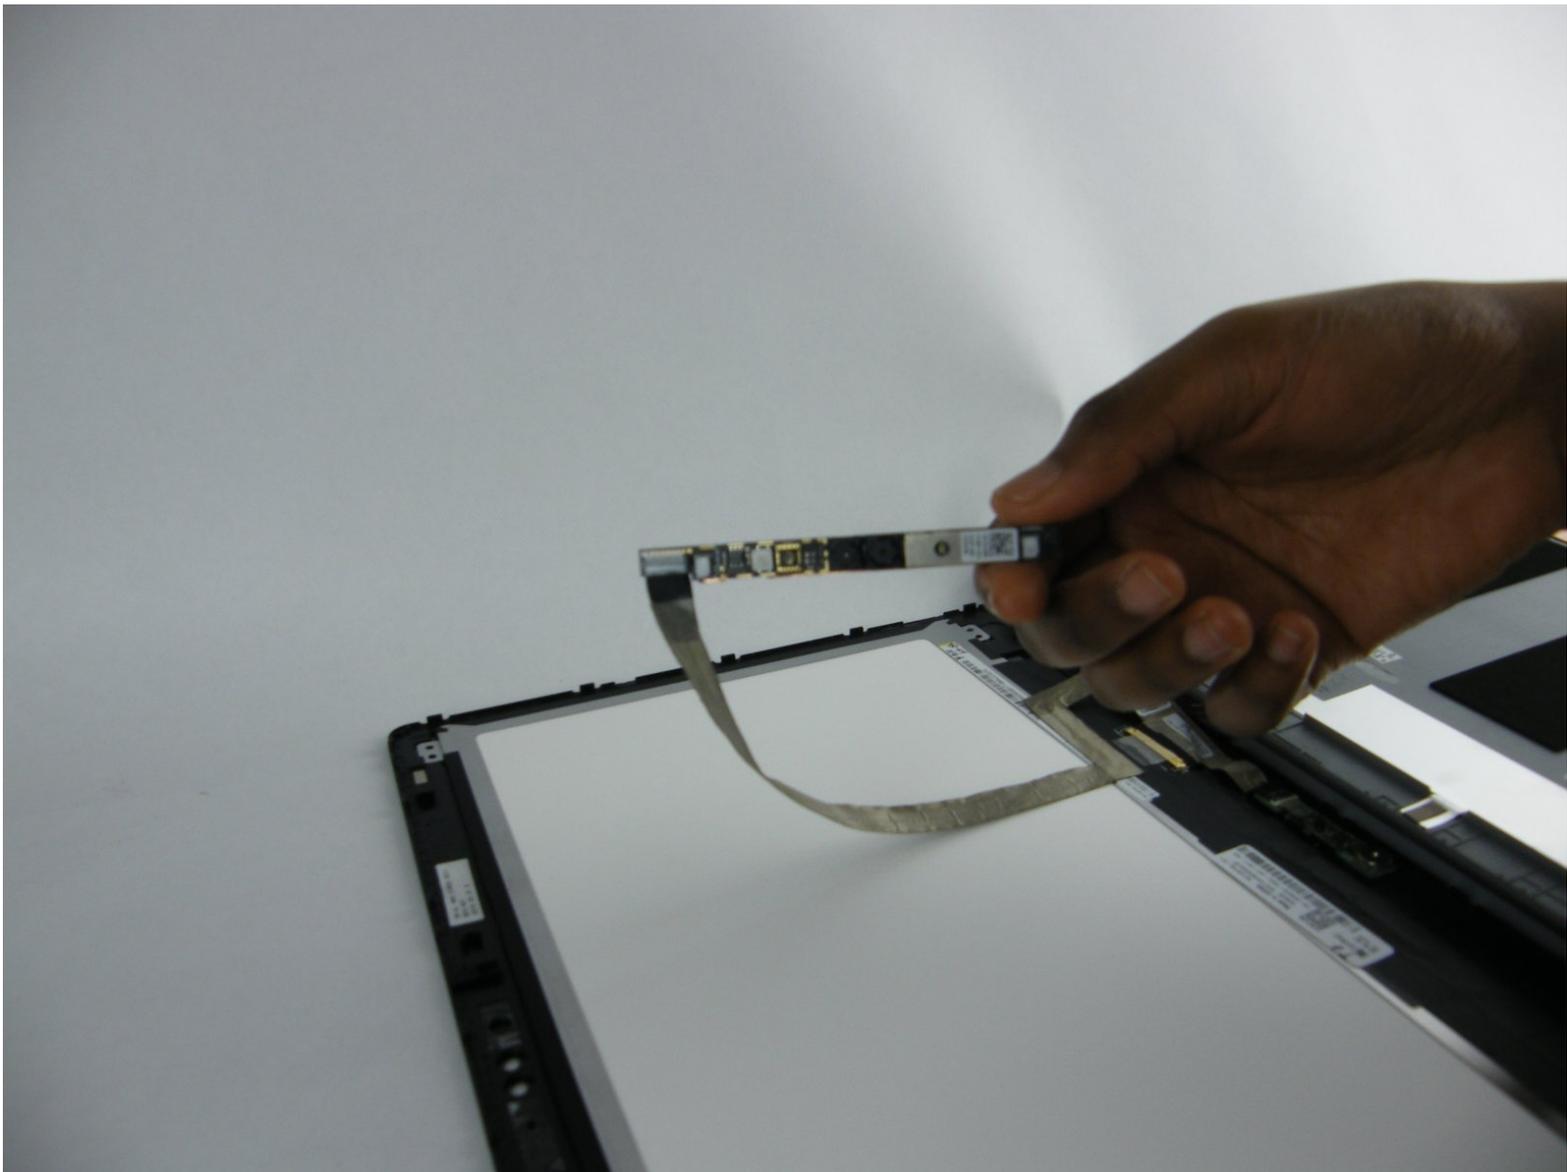

Dell Inspiron 13-5368 Webcam Replacement

A simple guide on how to remove and replace your Dell Inspiron 13-5368 Webcam.

Written By: Matt Sugrim





INTRODUCTION

This is a simple step-by-step guide on how to remove and replace a webcam for a Dell Inspiron 13-5368. You will need a Phillips Head J-0 screwdriver and a pry tool in order to perform this task. This task requires a great amount of care because you are working with glass and will take approximately 15 minutes to complete.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

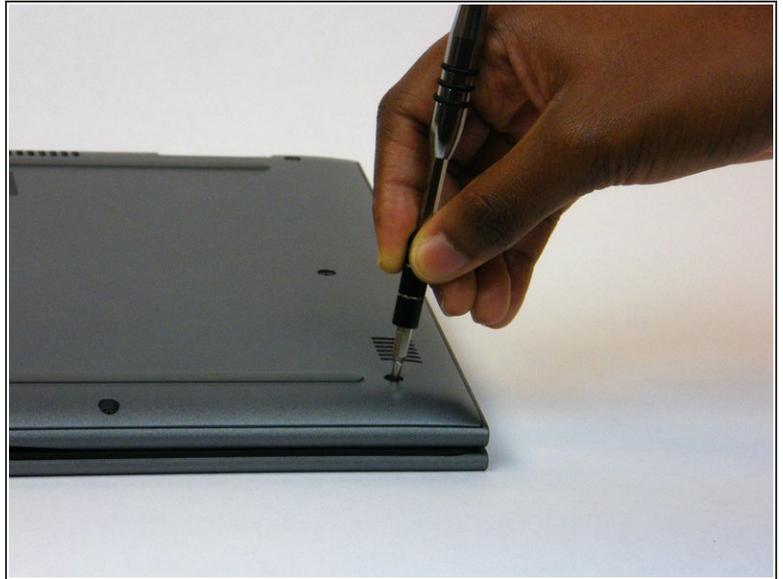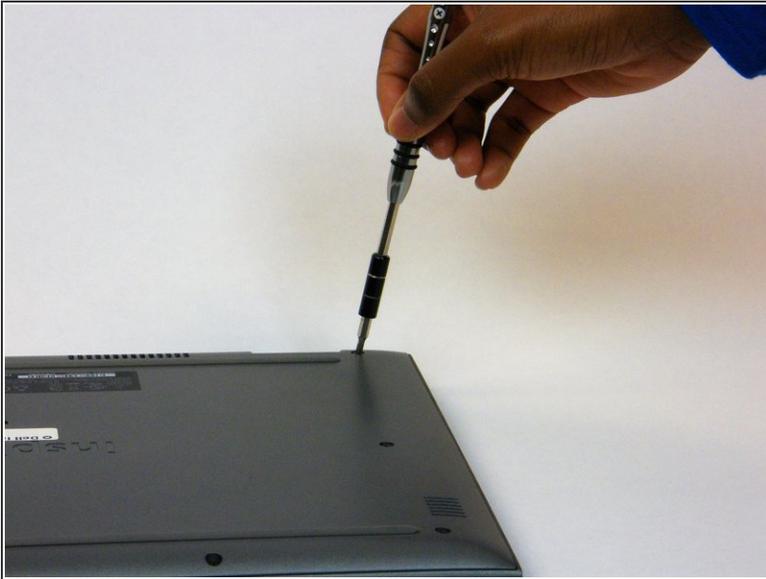


- Remove the nine 6mm Phillips #0 screws that secure the back cover of the laptop.

Step 2

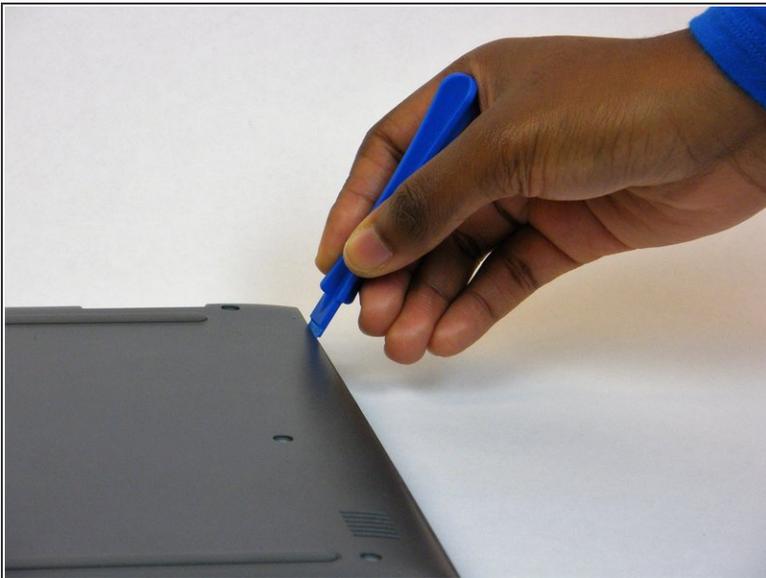


- Use a spudger to pry up and remove the back cover.

Step 3

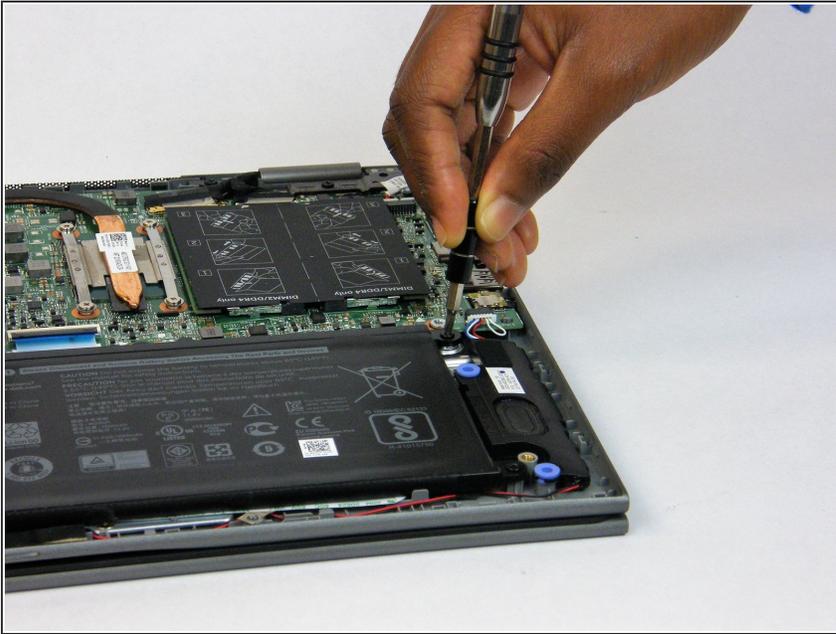


- Remove the four 3mm Phillips #0 screws at the corners of the battery that secure it to the laptop.

Step 4

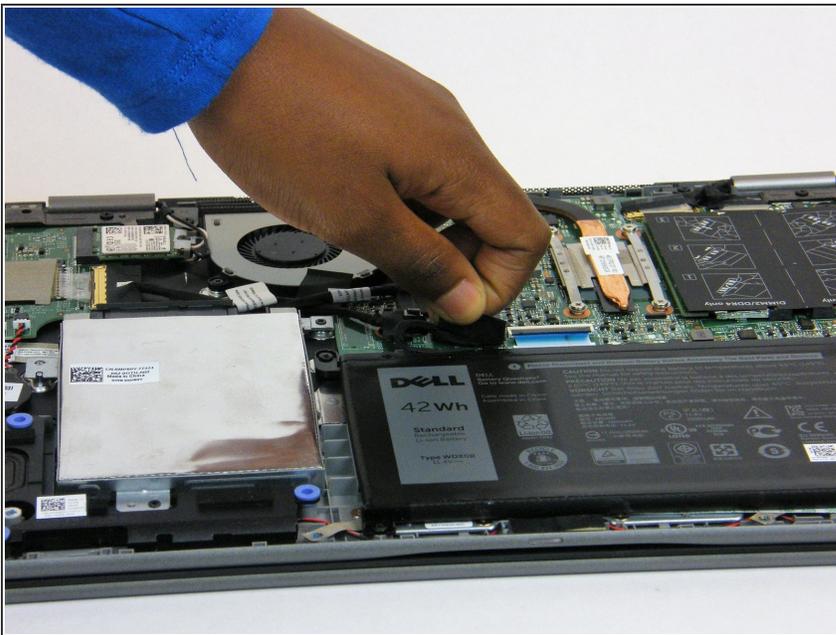


- Pull the battery cable's black tab towards the battery to disconnect it from the motherboard.
- ⚠ Pull the tab parallel to the motherboard, not straight up.

Step 5

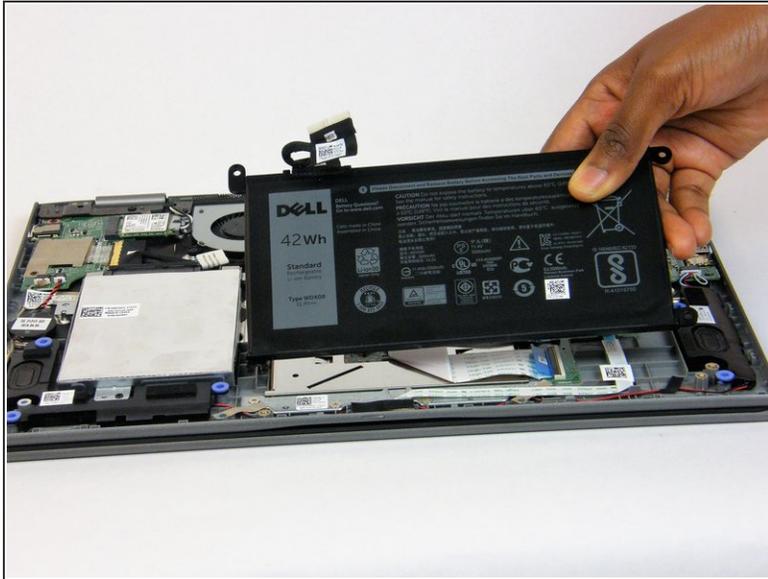

- Remove the battery.

Step 6 — Screen Display

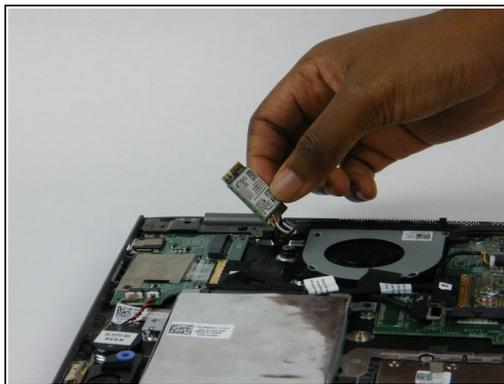


- Unscrew the 2mm screw that holds the WLAN card. Then carefully remove the WLAN card from the motherboard.

Step 7




- Detach the black and white antenna cables from the WLAN card.

Step 8

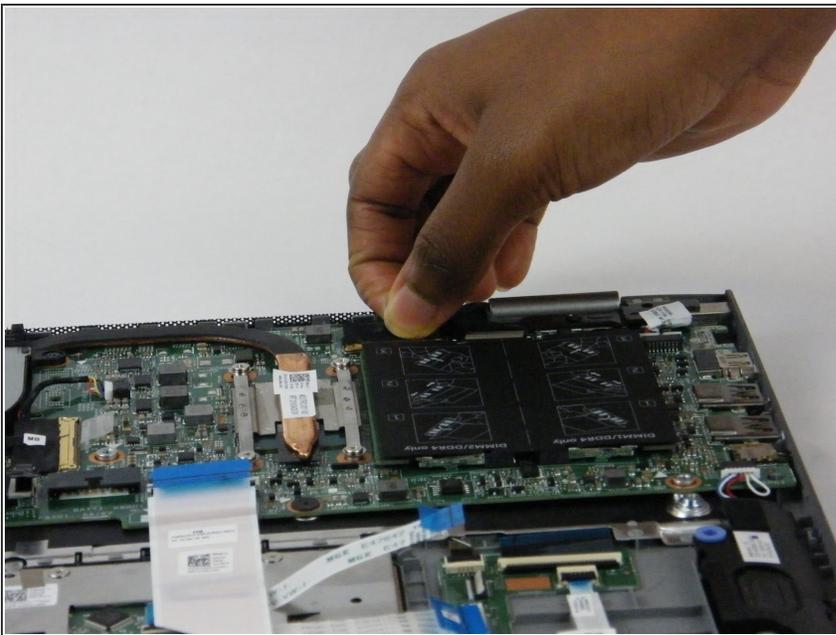


- Unplug the two display cables.

Step 9

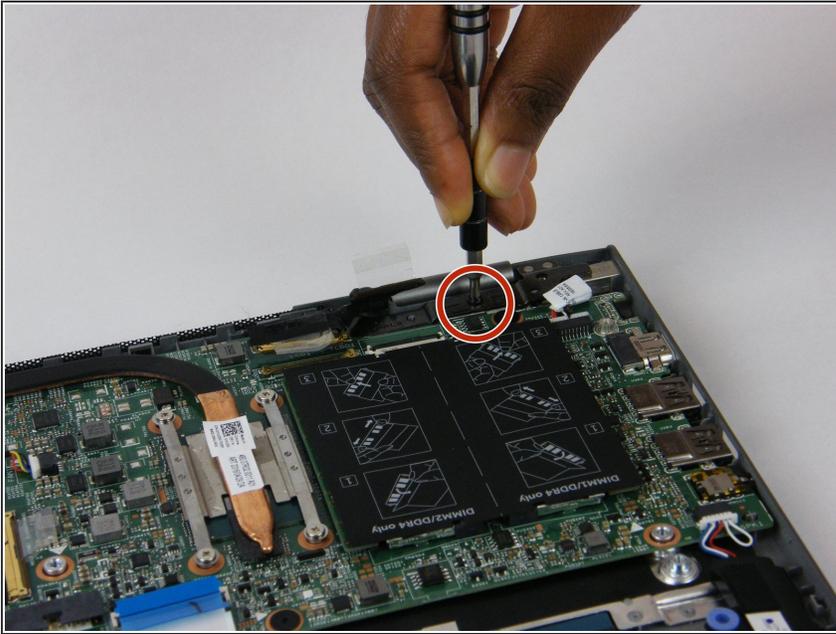

- Unscrew the screws that are securing the laptop's hinges.

Step 10

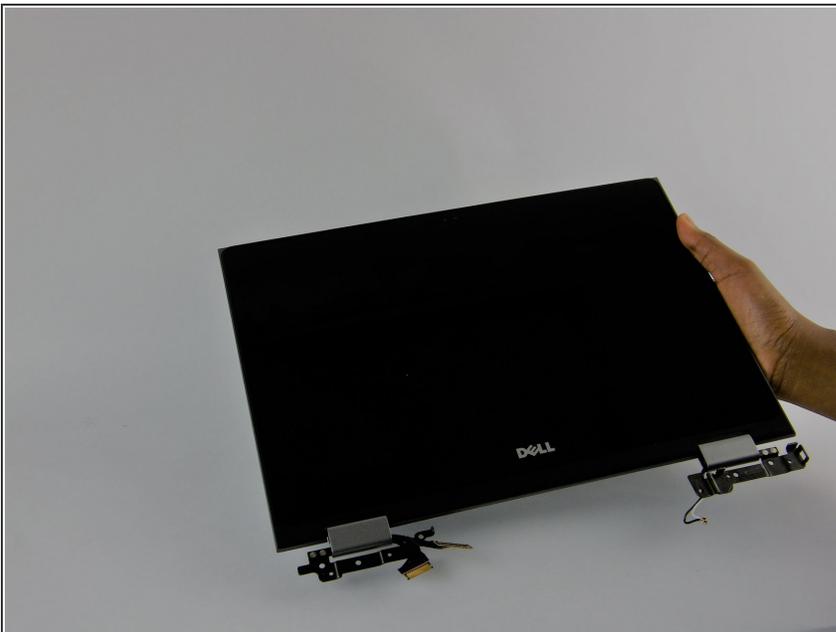



- Detach the display from the base.

Step 11 — Webcam



- Use your plastic opening tool to pry the LCD back cover from the display panel.

Step 12

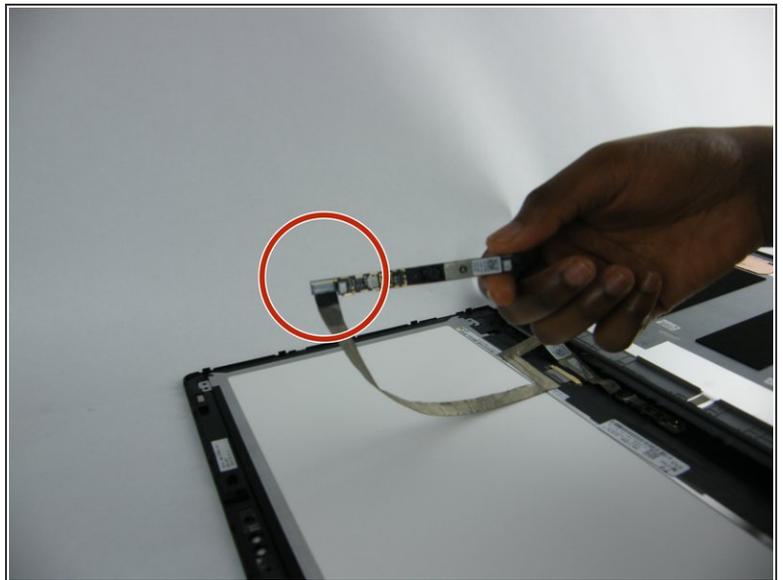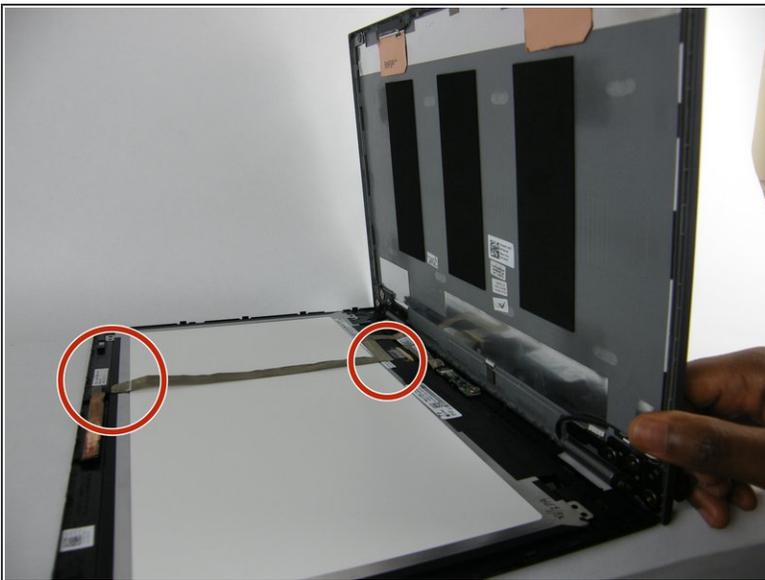

- Carefully separate the back cover from the LCD screen.
- Carefully remove the ribbon cable that holds the webcam to the screen, then unplug the webcam from the ribbon cable.

To reassemble your device, follow these instructions in reverse order.