


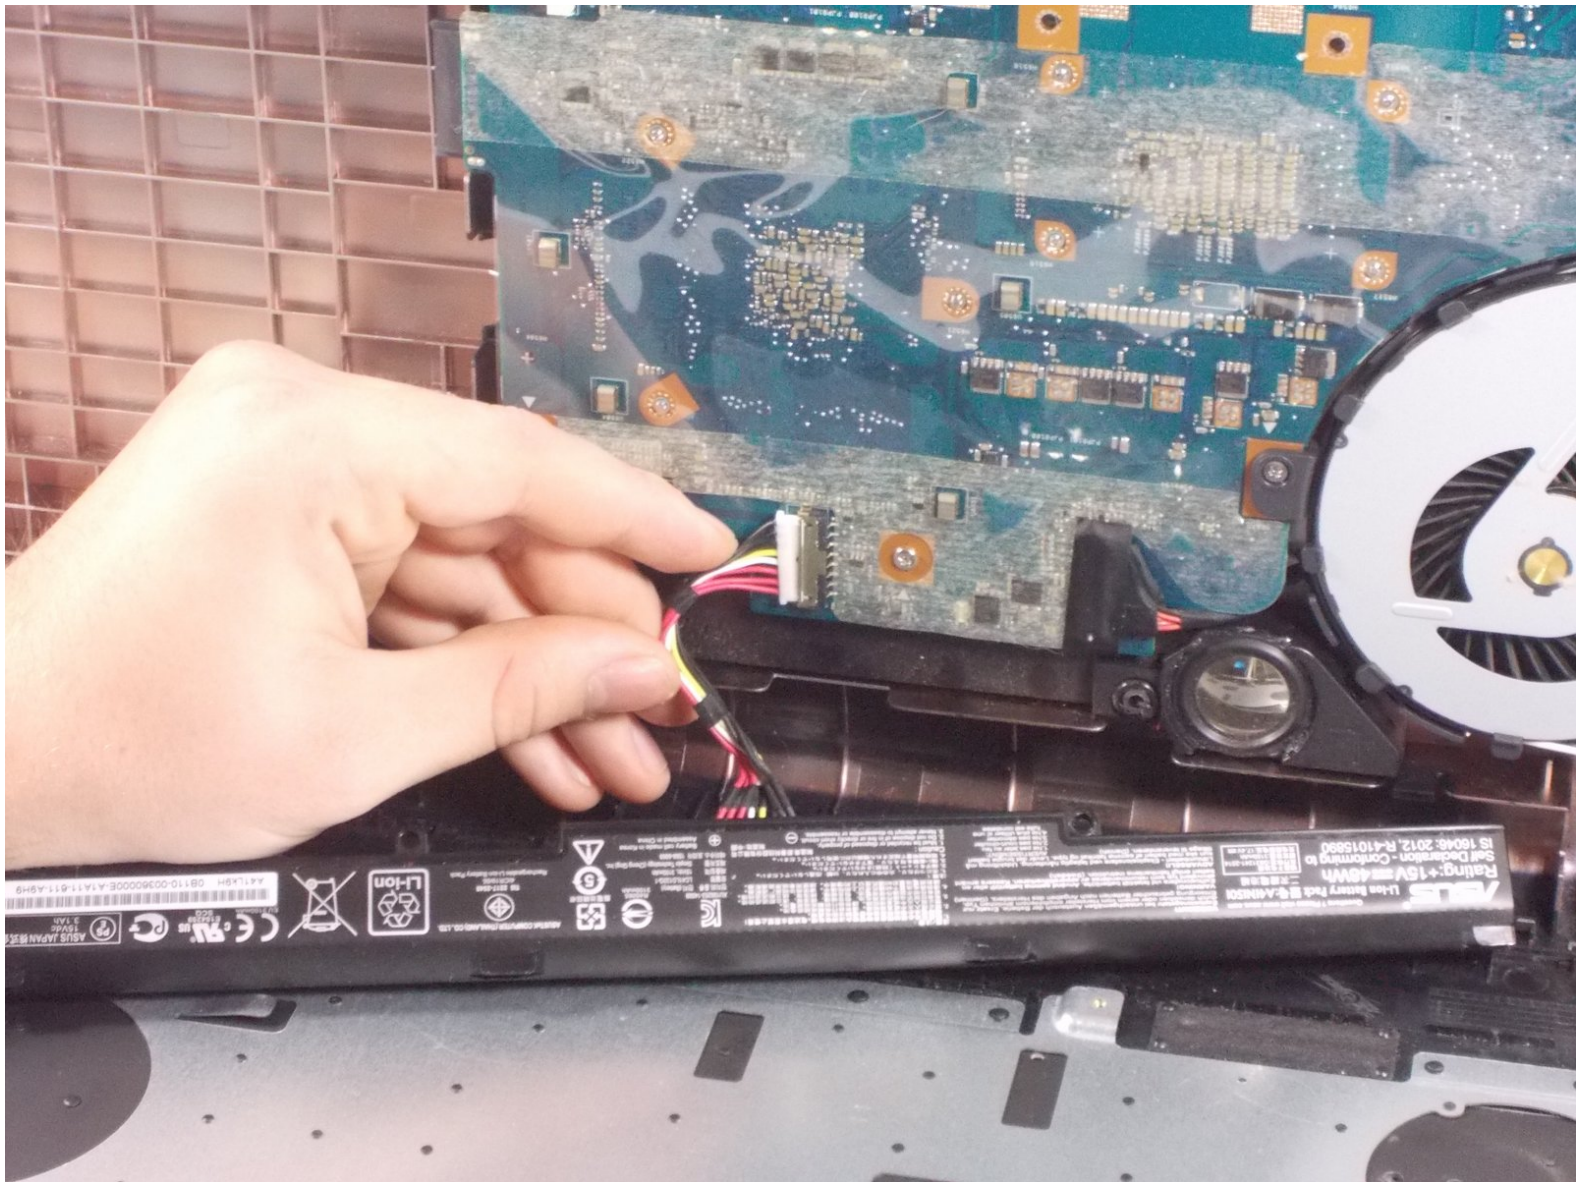

# ASUS GL752VW-DH74 Battery Replacement

This guide provides instructions for the...

Written By: Maxwell Seibert



# INTRODUCTION

This guide provides instructions for the replacement of the Asus GL752VW-DH74 battery.



## TOOLS:

- [Spudger](#) (1)
- [SIM Card Eject Tool](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



## PARTS:

- [Asus A41N1501 Replacement Battery](#) (1)

## Step 1 — Optical Drive



- Begin by putting the needle into the hole in the disk tray.

## Step 2



- Use the spudger to help ease out the disk drive.



### Step 3




- Pull out disk tray entirely.

### Step 4 — Battery




- Remove the 3 small screws located underneath the disk drive.

## Step 5

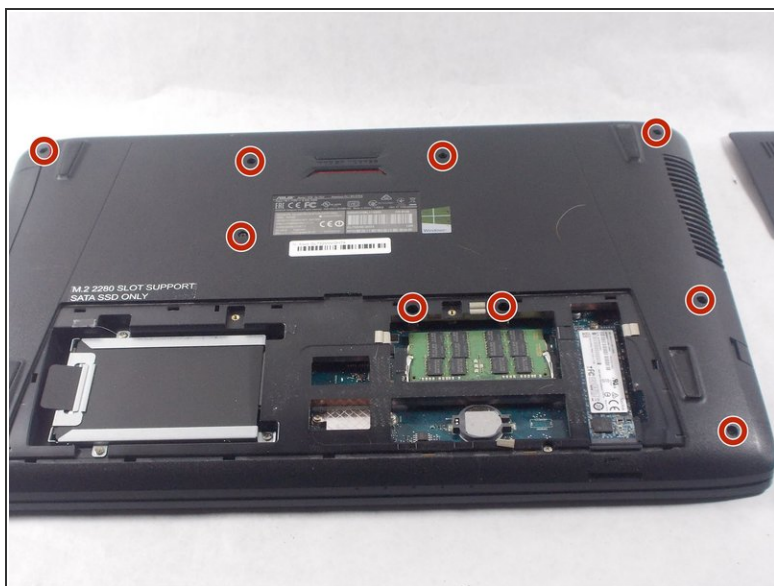

- Unscrew the nine remaining 8 mm Phillips-head screws on the back of the device.

## Step 6

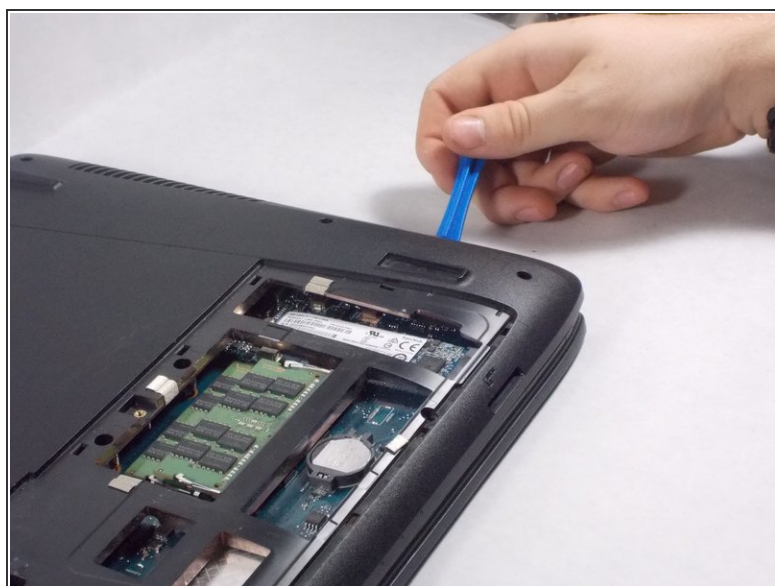

- Use the opening tool to pry the back of the laptop case from the top




## Step 7




- Disconnect the 3 cables connecting the motherboard to the keyboard.

## Step 8

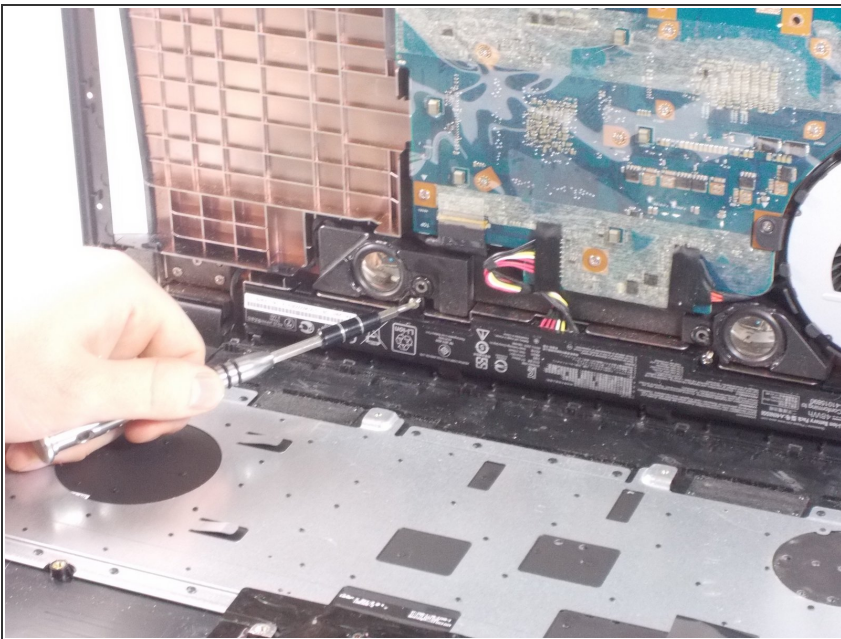

- Unscrew the two 8mm screws attached to the battery

## Step 9

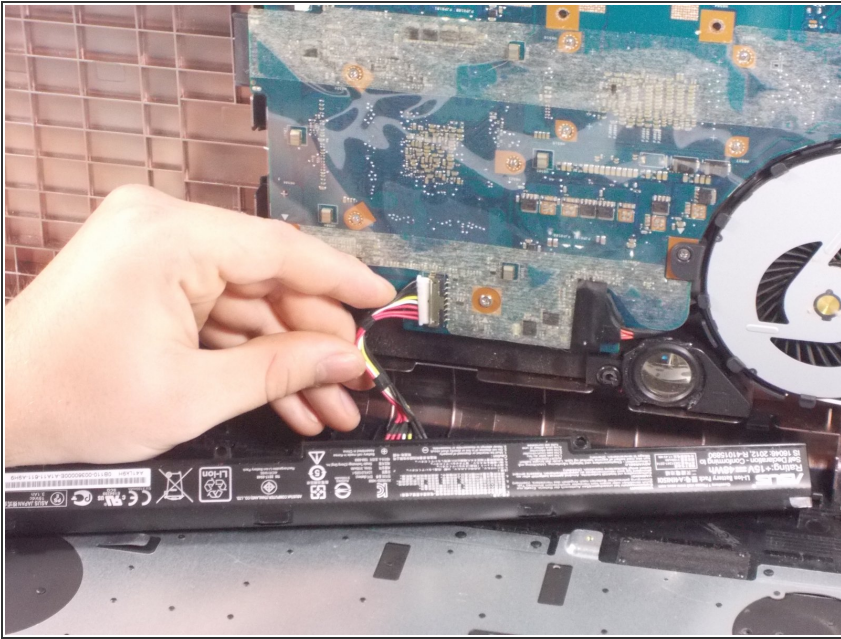

- Disconnect the bundled cable connector and remove the battery.

To reassemble your device, follow these instructions in reverse order.