


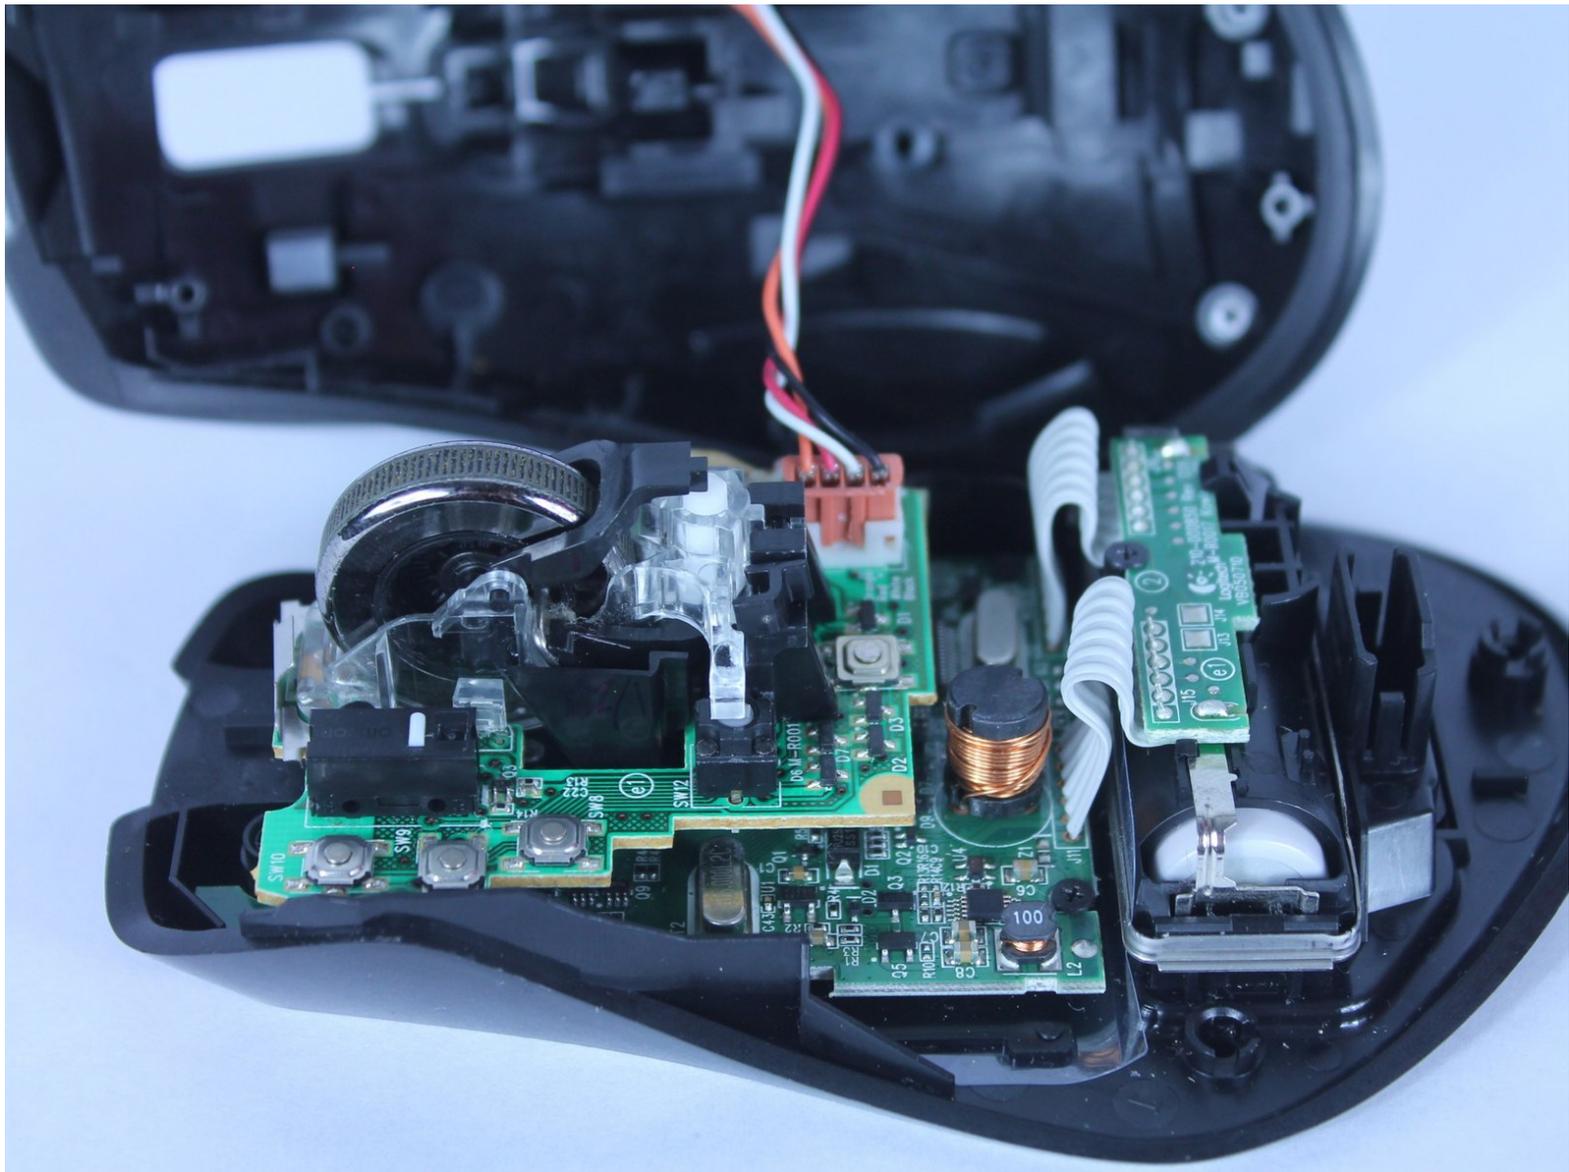

Logitech G700s Top Case Replacement

This guide will instruct you on opening and replacing your G700s top case.

Written By: Chase Tisinger



INTRODUCTION

This guide will show you how to open the logitech G700s, this is necessary for cleaning, replacing the scroll wheel and replacing the left and right click switches.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Top Case Replacement



- Remove the batteries from the mouse.
- Use a plastic opening tool to peel up the four mouse feet.

Step 2



- Remove the five 5.5mm Phillips #00 screws found underneath the mouse feet.

Step 3



- Pull the top of the mouse off of the bottom half.
 - ⓘ There's a wire connecting the two halves.
- Unplug the programmable buttons from the motherboard.
 - ⓘ The white pin housing on the motherboard may come off while unplugging. In that case, use tool to pry between at location indicated to separate them and insert the housing back onto the motherboard.

To reassemble your device, follow these instructions in reverse order.