



Dell Inspiron 1521 Battery Replacement

Your laptop battery stores power for your laptop allowing you to continue using it while not having it plugged in.


Written By: Nikolaus Powell



INTRODUCTION


This guide will show you how to remove and replace the battery in your laptop.

Step 1 — Battery

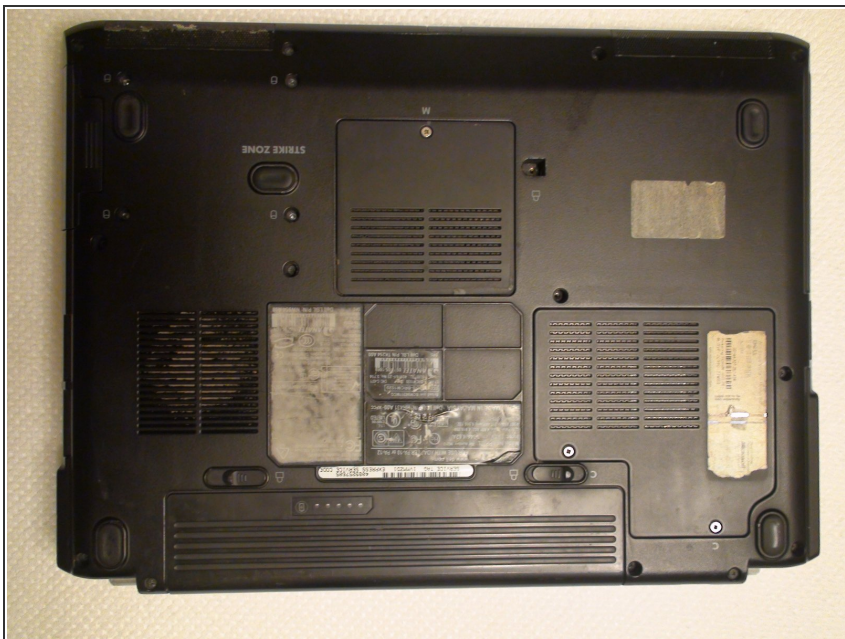

- Rotate the laptop so its bottom is facing up.

Step 2

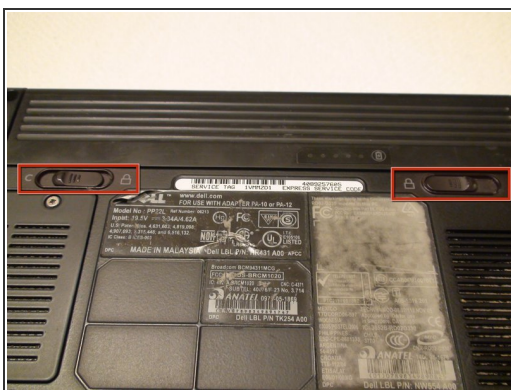

- Identify the lock mechanisms holding the battery in place.
- Slide each button outward with your fingers to disengage the battery.
- Pull the battery off with your hand to separate it from the laptop.

To reassemble your device, follow these instructions in reverse order.