



Bendix Magneto Woodruff Key

Steps to remove the Woodruff key.

Written By: Kelsi English





INTRODUCTION

This guide will show you how to remove the Woodruff key. A bad Woodruff key will cause the drive to rotate without the magneto moving.

TOOLS:


- [9 16 wrench](#) (1)
 - [Large Needle Nose Pliers](#) (1)
-

Step 1 — Impulse Coupling

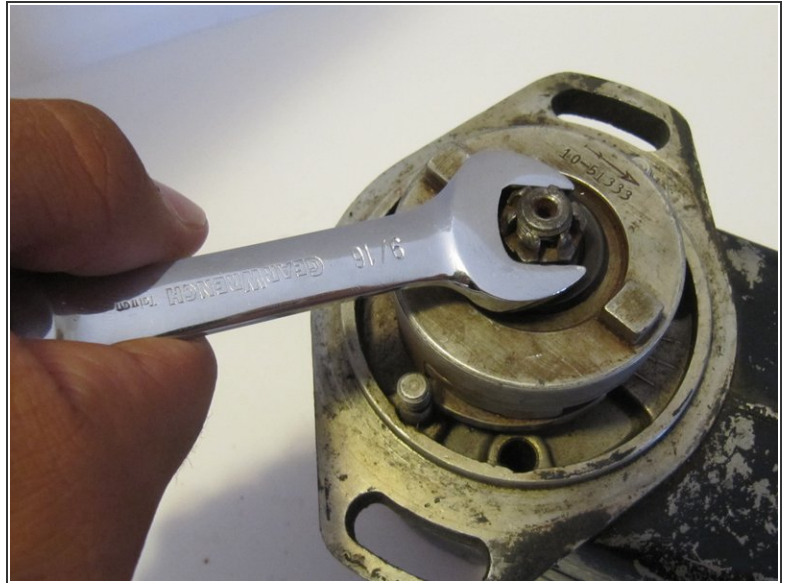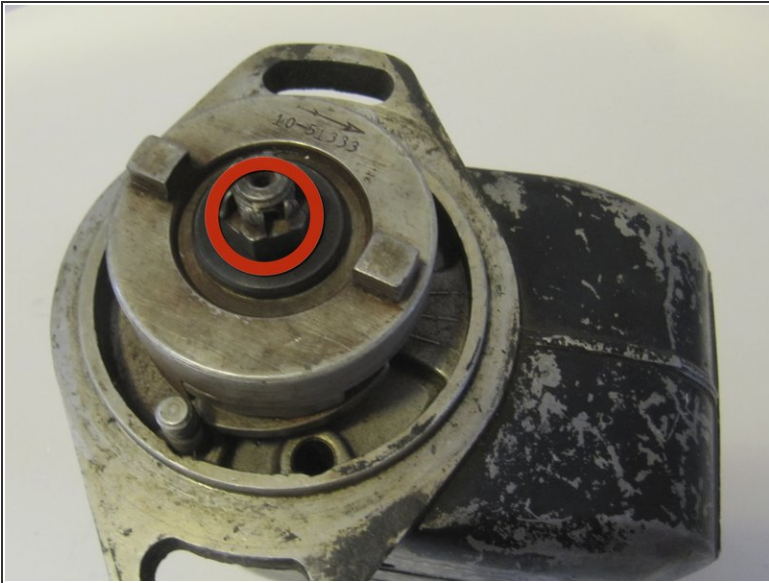



- Use a 9/16 wrench to unscrew the nut on the drive shaft.

Step 2

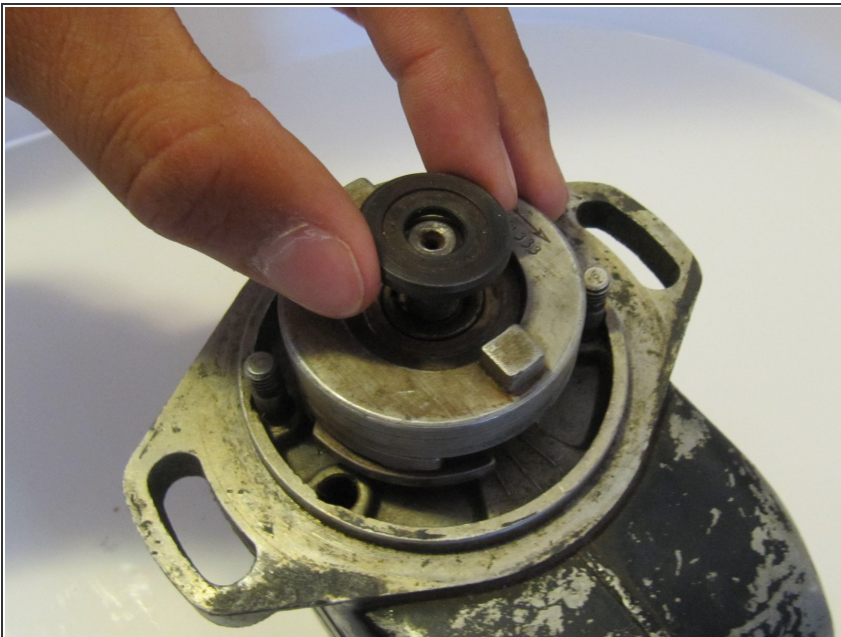

- Remove the lock washer underneath the nut.

Step 3

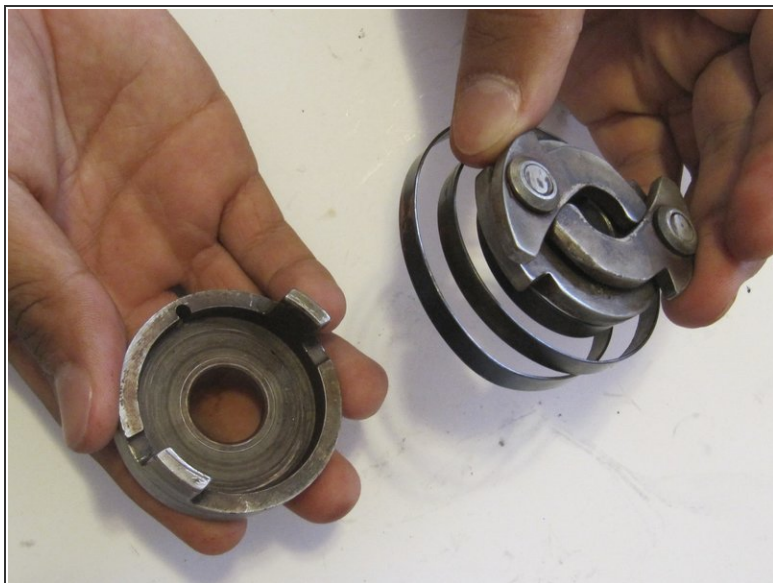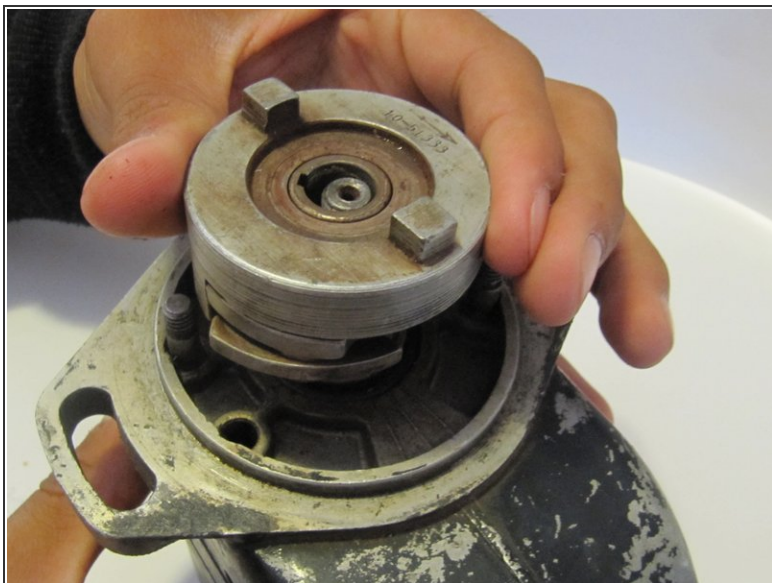

- Pull away the impulse coupling.

Step 4 — Woodruff Key



- Use a pliers to remove the Woodruff key.
- ⓘ If the key seems stuck, use a #2 Flathead screwdriver to unjam the key.

To reassemble your device, follow these instructions in reverse order.