



# iPhone 7 Plus Speaker Replacement

Prerequisite-only guide for removing the speaker.

Written By: Jeff Suovanen



## INTRODUCTION

Prerequisite-only guide for removing the speaker. [Click here for the full speaker replacement guide.](#)



### TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [iOpener](#) (1)
- [Suction Handle](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Spudger](#) (1)
- [Tri-point Y000 Screwdriver](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [iPhone 7 Plus Loudspeaker](#) (1)
- [iPhone 7 Plus Loudspeaker Gaskets](#) (1)
- [iPhone 7 Plus Display Assembly Adhesive](#) (1)

## Step 1 — Speaker

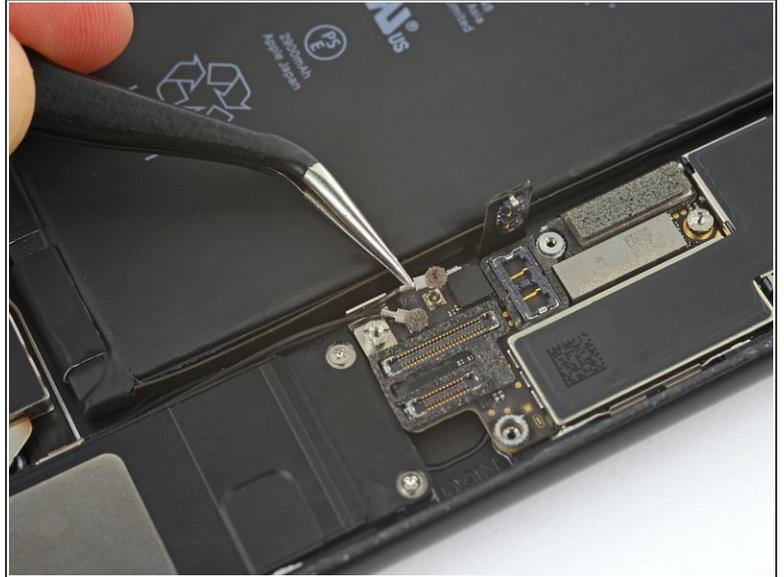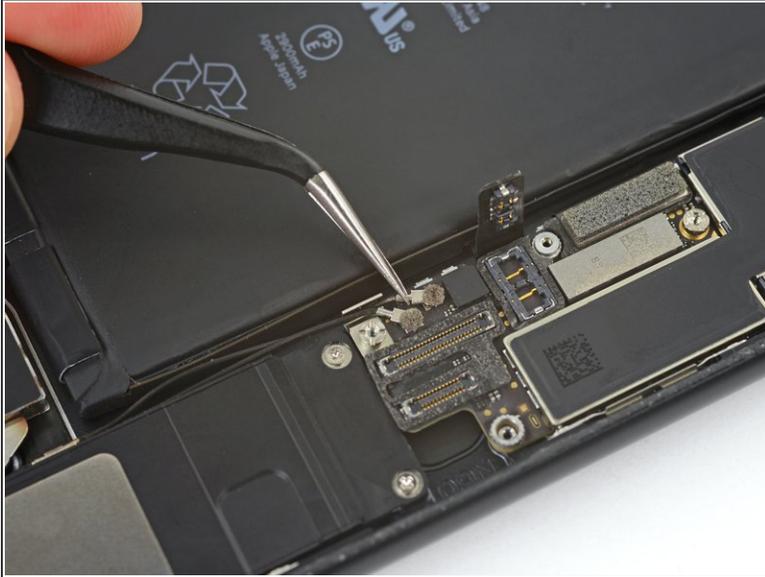

- Use a thin pry tool or tweezers to carefully pry up and disconnect the upper coaxial cable connector from the logic board.
- ⓘ There are two coaxial connectors in close proximity. Disconnect the one nearest the battery connector.
- ✎ During reassembly, this can be tricky to reconnect. Hold the connector in place over its socket and press down with the flat of your spudger. The connector should snap into place.

## Step 2




- Carefully de-route the coaxial cable you just disconnected from the small metal clip holding it to the logic board.

## Step 3




- Use tweezers or the point of your spudger to pry both coaxial cables out of the metal clip holding them on the side of the speaker.

## Step 4

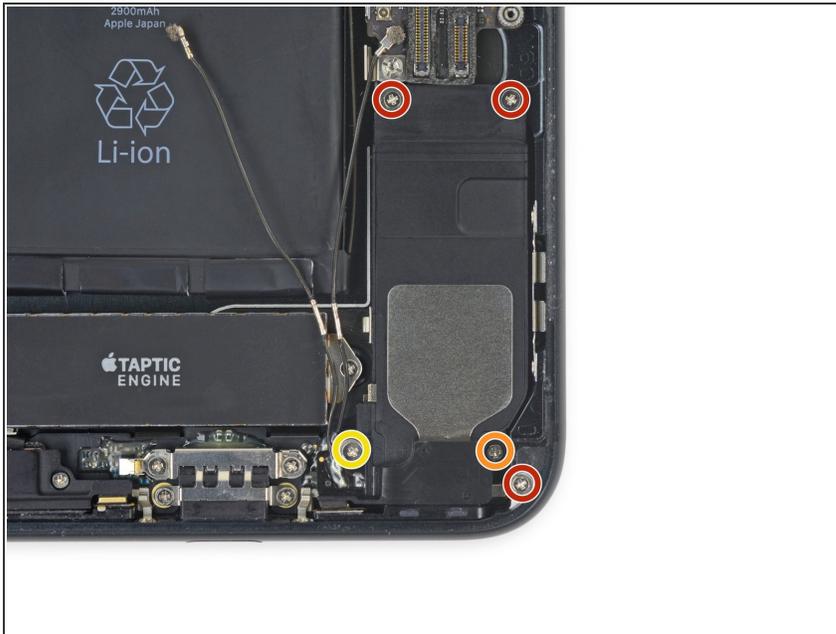

- Remove the five Phillips screws securing the speaker:
  - Three 1.3 mm screws
  - One 2.3 mm screw
  - One 3.3 mm screw

## Step 5

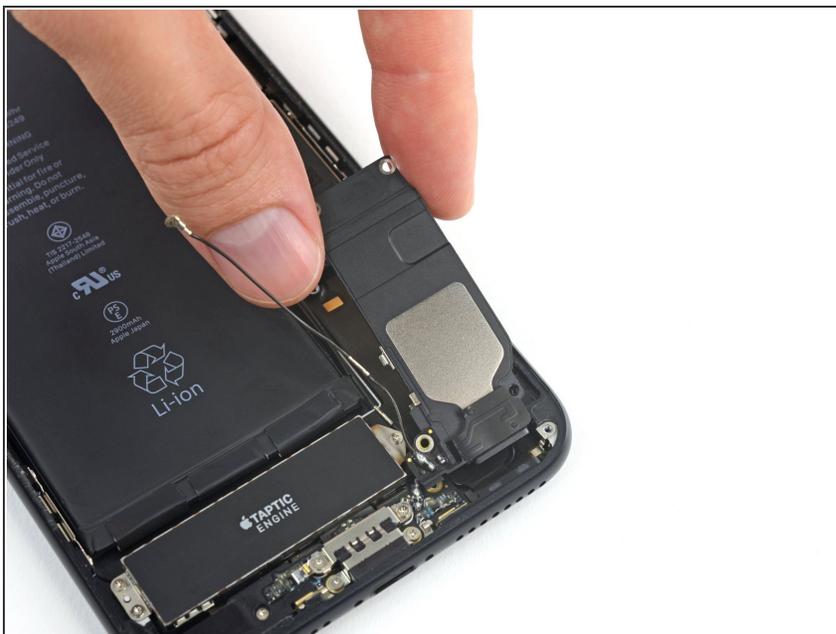

- Remove the speaker.
- ★ Inspect the [gasket around the speaker opening](#) for damage, and replace it if necessary before installing your new speaker.

To reassemble your device, follow these instructions in reverse order.