


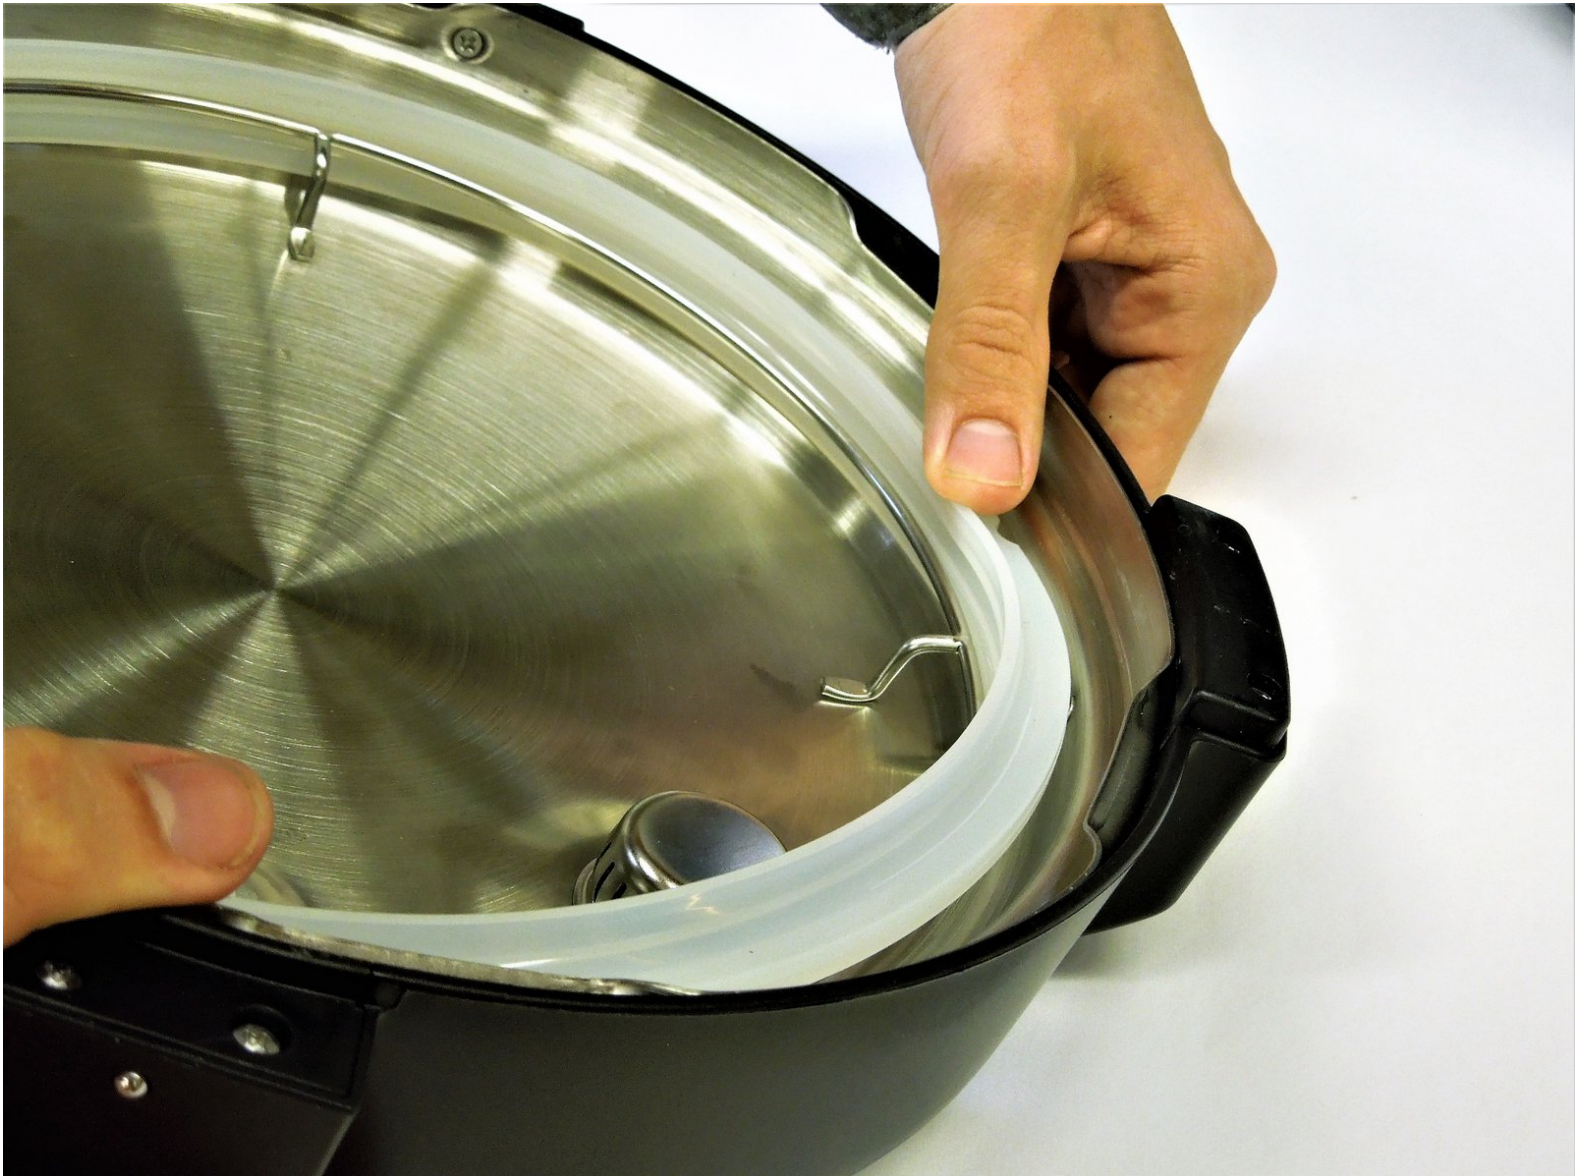

# Crock-Pot Express Crock Multi-Cooker Sealing Ring Replacement

How to replace the sealing ring in your Crock-Pot Express Crock Multi-Cooker.

Written By: William Kelly



## INTRODUCTION

The sealing ring allows the pot to pressurize and seal properly. A missing or damaged sealing ring can lead to device failure. Use this quick and easy replacement guide to fix any problems pertaining to the sealing ring in your Crock-Pot Express Crock Multi-Cooker.



### TOOLS:

- [iFixit Opening Tools](#) (1)



### PARTS:

- [Crock-Pot Express Crock Multi-Cooker Sealing Ring](#) (1)

## Step 1 — Power Cord



- Remove the power cord from the wall outlet first, disconnecting power from the device.


## Step 2



- Orient the device with with the LED facing away from the user allowing access to the input jack of the power cord.



### Step 3

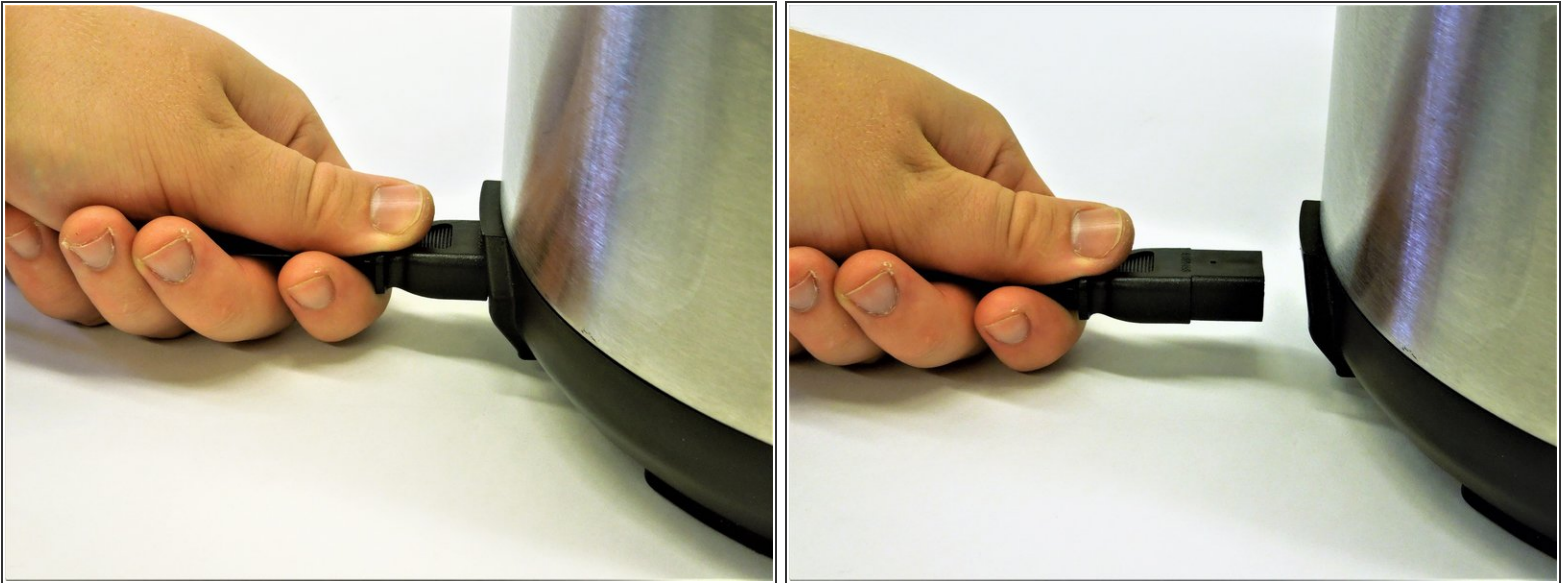

- Grasp the power cord input connector firmly with forefinger and thumb.
- Without tugging, apply pulling force until the connector is free from device

### Step 4 — Lid



- Orient the crock pot where the lid locked and unlocked icons are visible.
- Grasp the handle firmly and turn the lid clockwise until the arrow and the lid unlocked icon are facing each other.
- Remove the lid.

## Step 5 — Sealing Ring



- Flip the lid over, exposing the underside and sealing ring.

## Step 6



- Using a plastic opening tool, work your way in between the metal and sealing ring.
- Continue to rotate and pry with the plastic opening tool until the sealing ring separates from the top.

To reassemble your device, follow these instructions in reverse order.