

 


MerchSource the Black Series Boat Racer

Battery Cable Replacement

This guide will cover how to replace the battery cable in the remote controller.

Written By: Monica Reece

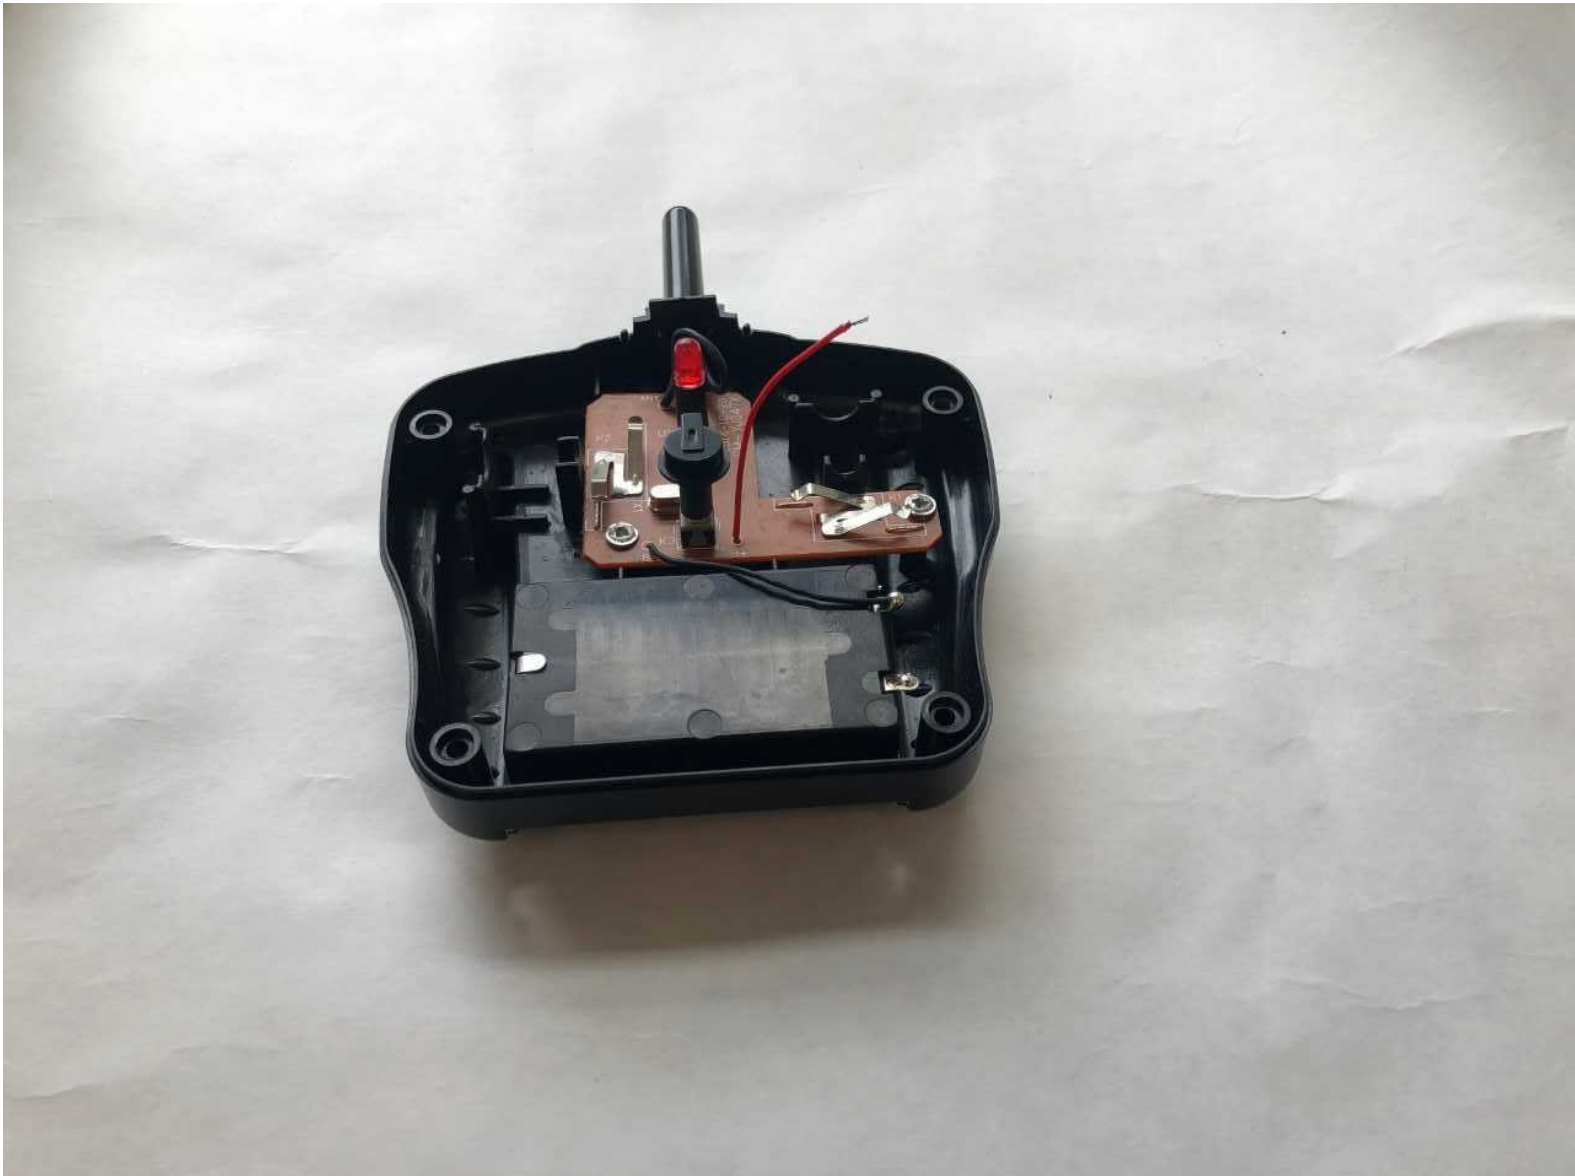

INTRODUCTION

This repair guide will show you how to replace the cable that connects the positive battery terminal to the circuit board within the remote controller for the MerchSource the Black Boat Series Boat Racers Device.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Battery Cable



- Turn the remote controller over to the back.

Step 2



- Slide the battery cover off.

Step 3



- Remove both AA-batteries.

Step 4



- Use a Phillips #1 screwdriver, remove the four screws located in the four corners of the back of the remote controller.

 
ⓘ Screw length is 6 mm.

Step 5



- Separate the two halves of the remote controller.

Step 6

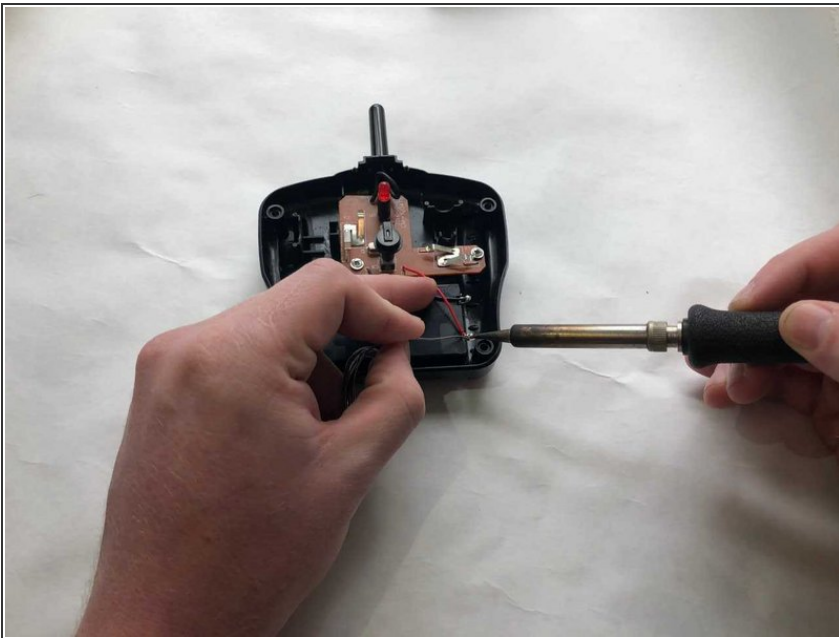

- [Solder](#) the wire to reconnect it.

To reassemble your device, follow these instructions in reverse order.