




Hover-1 Chrome Battery Replacement

Replace your faulty battery to power your Hover-1 again.

Written By: Nick McGuire

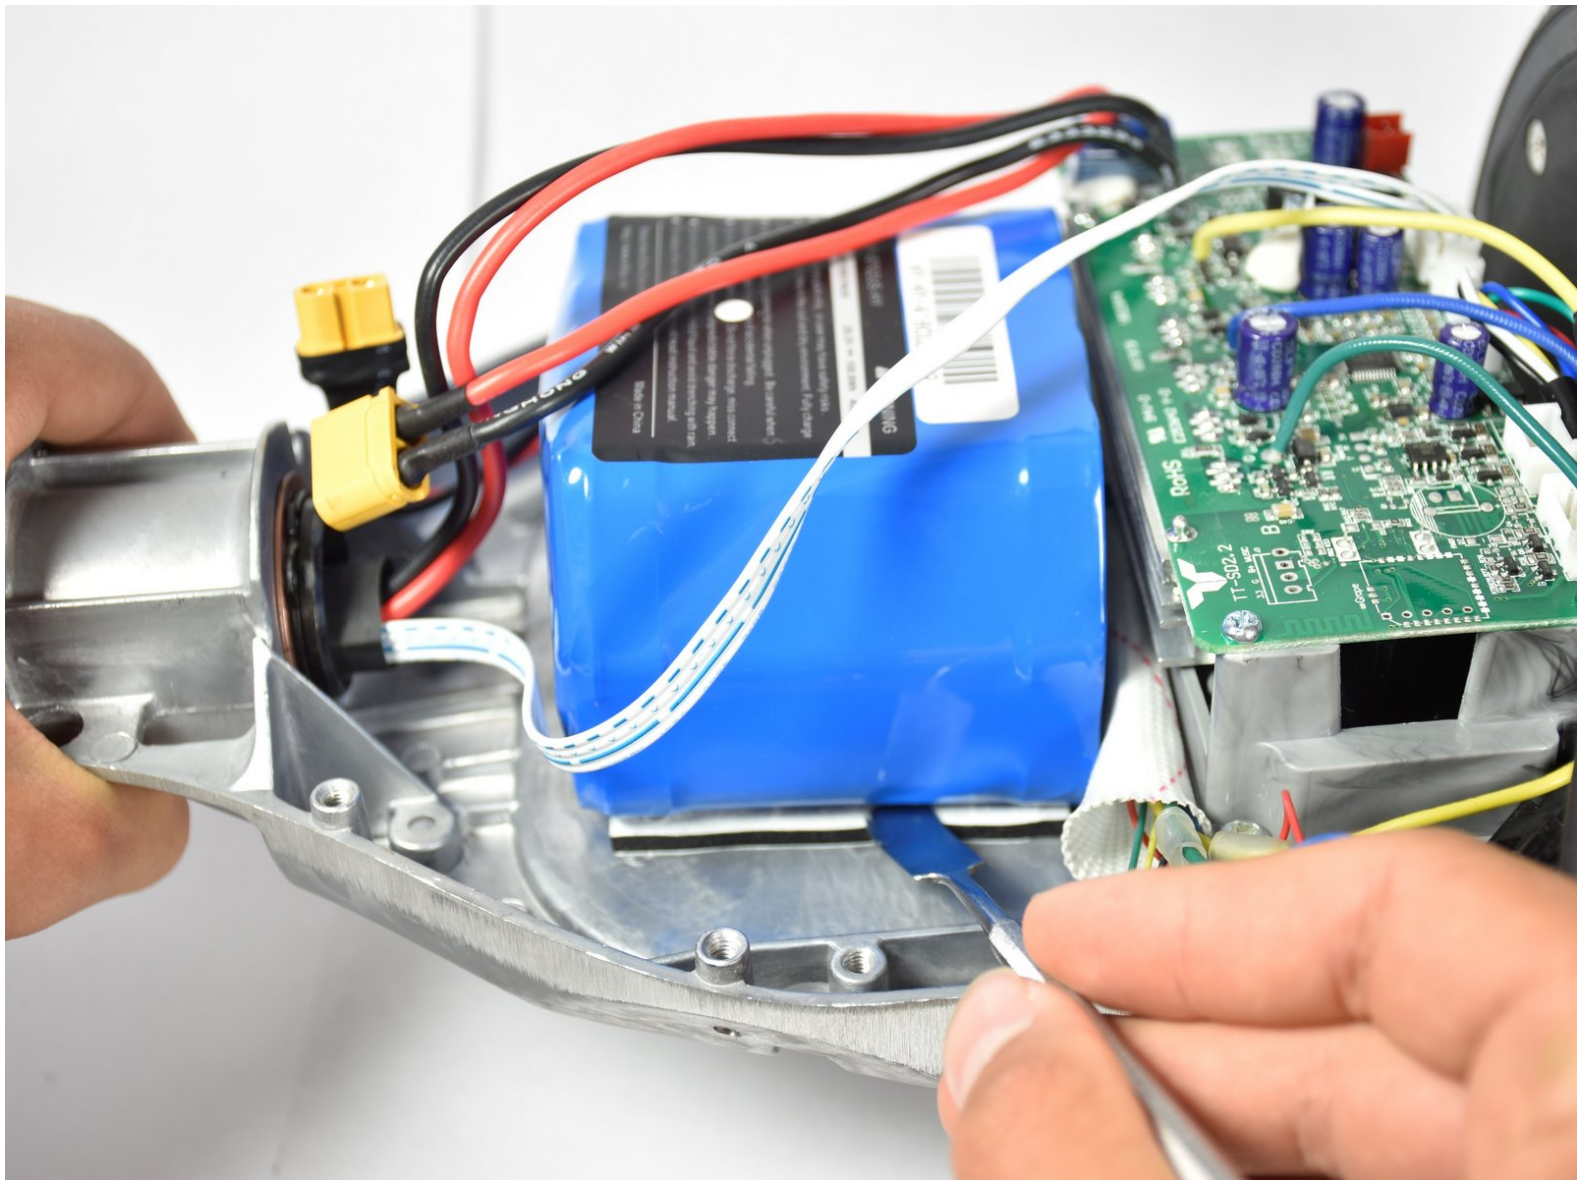

INTRODUCTION

Learn how to replace the battery with this guide. Any power related problems may need a battery replacement. For this guide, you will need a Phillips #2 screwdriver and a metal spudger.

TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Hover-1 Chrome Disassembly




- Flip the Hover-1 Chrome upside down.
- Use a Phillips #2 screwdriver to remove the fourteen 14 mm screws from the bottom of the Hover-1.
- Break the two black tape circles, and remove the two 15 mm Phillips screws underneath.

Step 2

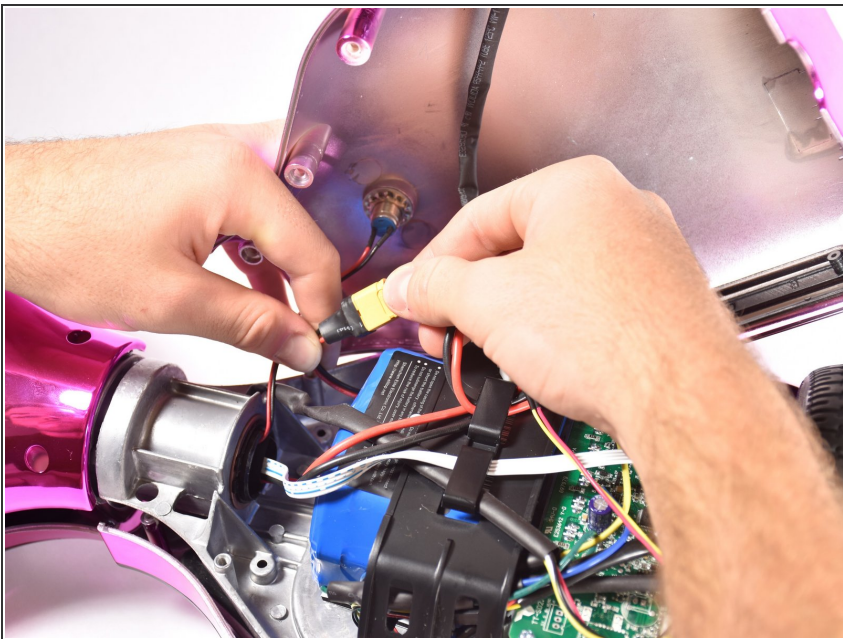


- Lift the shell without the speaker grille and unplug the battery.

Step 3

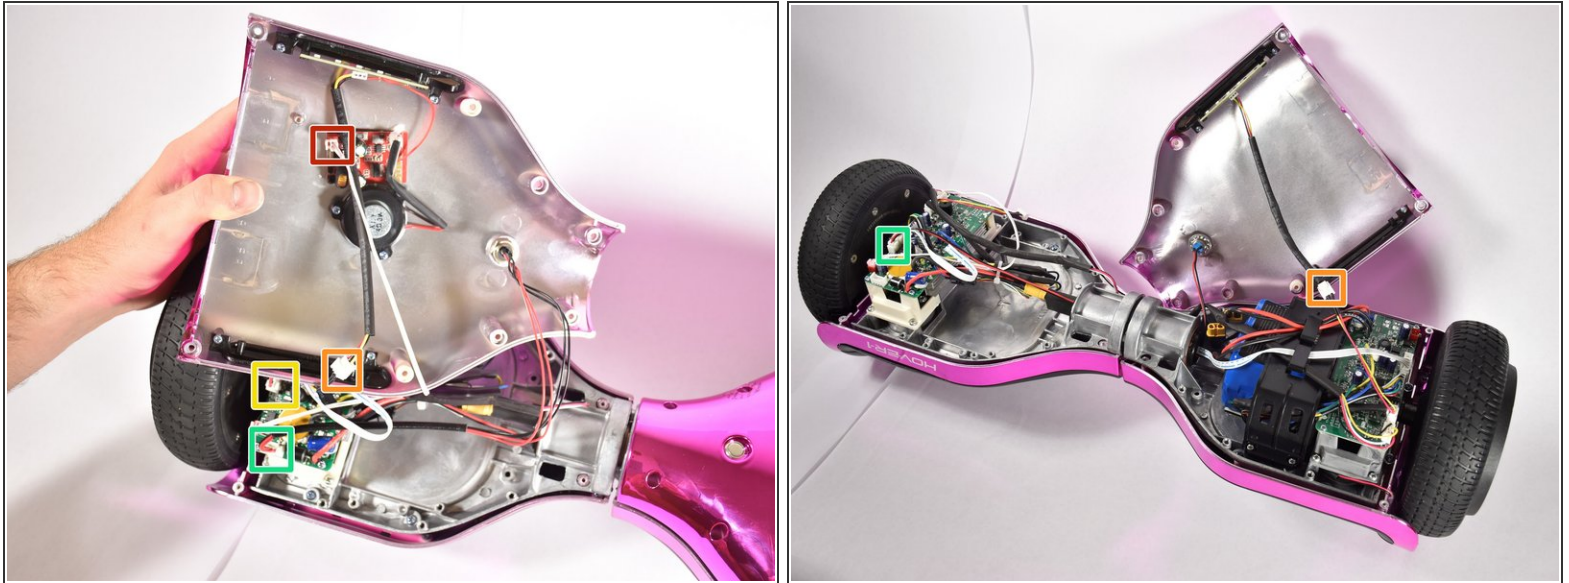



- Lift the shell with the speaker grille.
- Unplug the speaker.
- Unplug the LEDs.
- Unplug the power button
- Unplug the charging port.

Step 4 — Battery

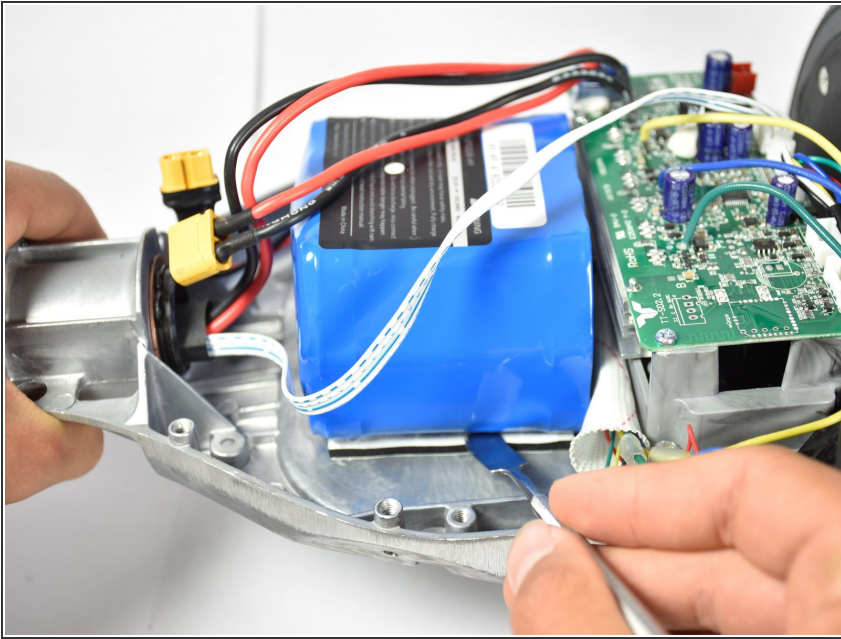

- Place the metal spudger end between the blue battery and the adhesive pad that attaches it to the metal body.
- ⓘ Use the metal spudger only as a last resort if the adhesive is too strong for either your hands or other plastic prying tools.
- Use the spudger to pry the battery loose from the adhesive.

Step 5

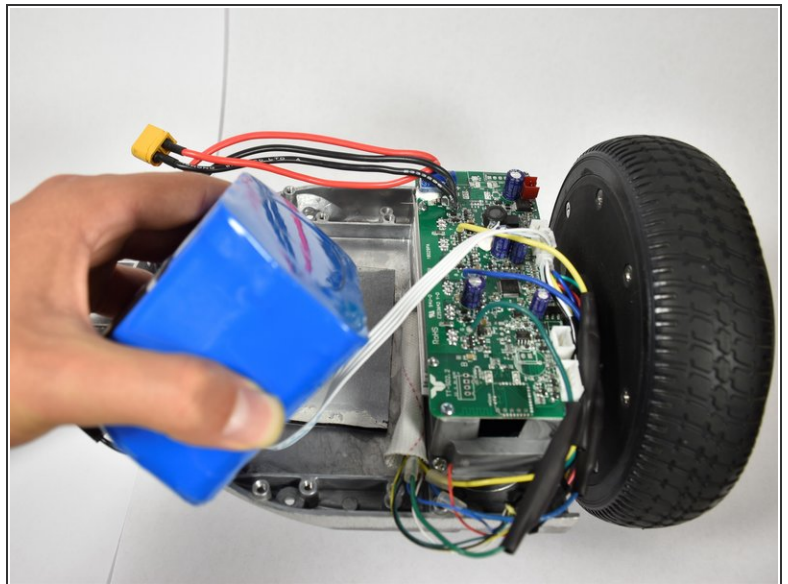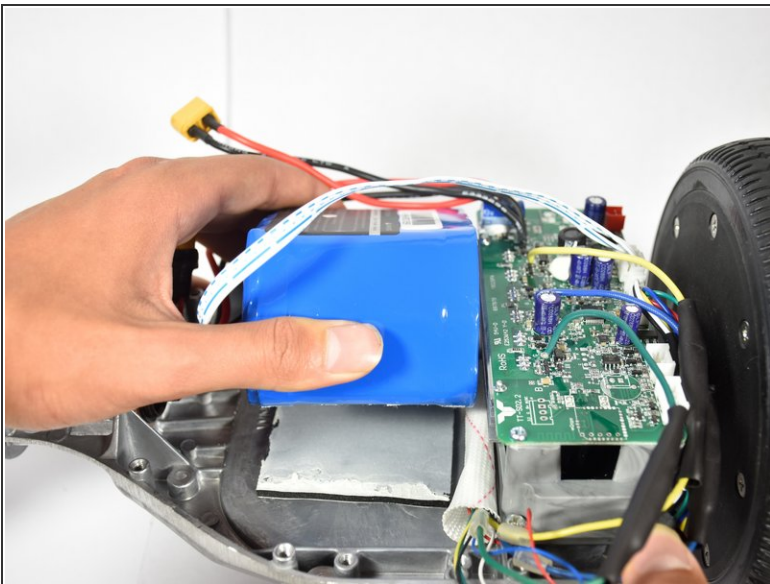

- Pull and wiggle the battery completely off of the adhesive using your hands.
- Remove the battery from the body.

To reassemble your device, follow these instructions in reverse order.