



# CyberpowerPC Fangbook HX6 Screen Replacement

How to quickly and easily replace the screen in a CyberpowerPC Fangbook HX6.

Written By: Eric Box



---

## INTRODUCTION

This guide will show you how to replace the screen in a CyberpowerPC Fangbook HX6 with minimal difficulty.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Screen




- To replace the screen you will need a screwdriver (a size zero was used in this guide), and a tool that can be used to pry off the screen covering (a spudger was used in this guide).

## Step 2





- Insert the spudger gently into the seam that connects the front plate to the rest of the device.
- Move the tool carefully around the screen and apply a small amount of pressure. You are trying to undo several clasps holding the front plate on.
- Do this on all sides of the face plate except for the bottom. The bottom will have a strip of adhesive you will need to carefully pull off to separate the face plate from the bottom of the screen.

## Step 3

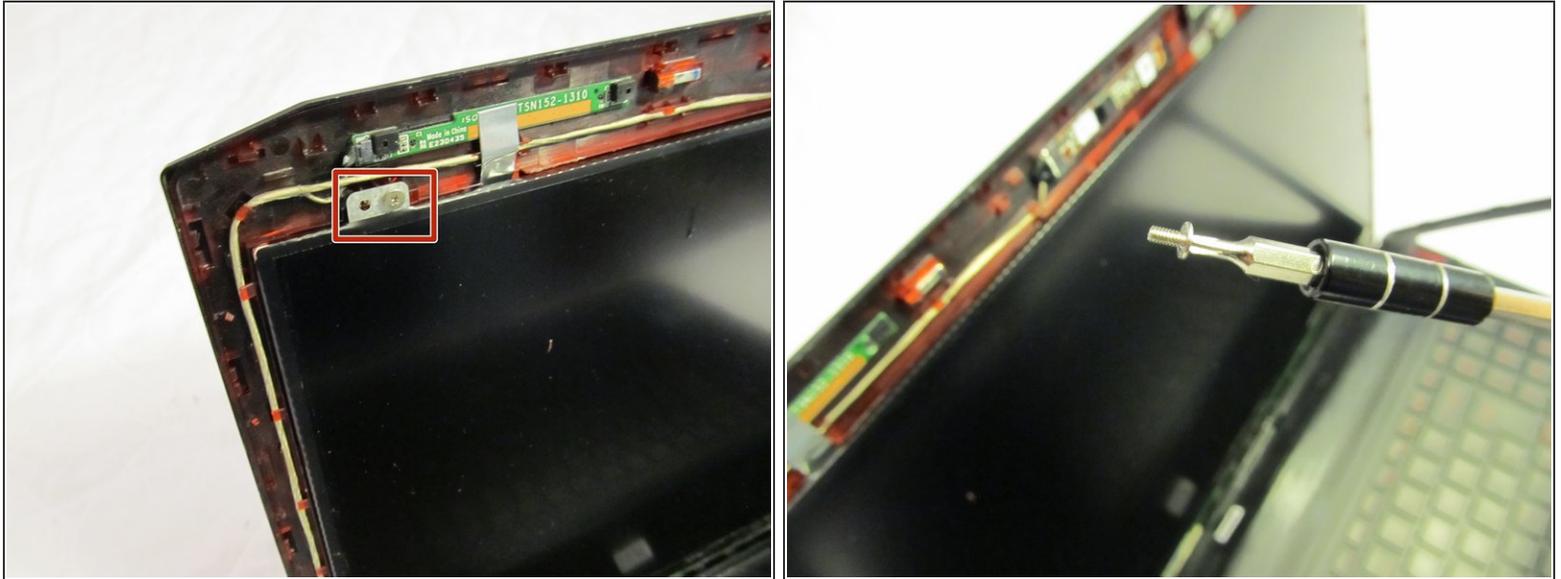

- Remove the two 4mm silver screws on both sides of the top of the screen.
- Once you have removed them, gently pull the screen off of the aligning dials (the small plastic pieces to the left of the screws).

## Step 4

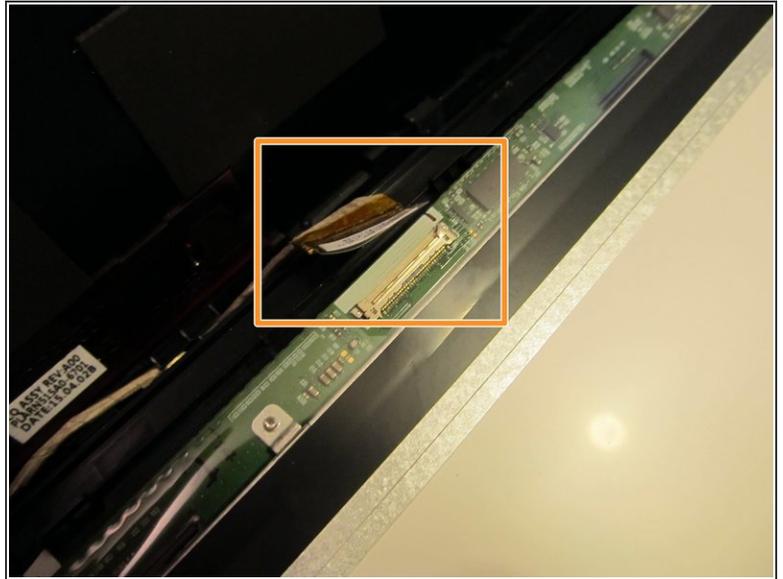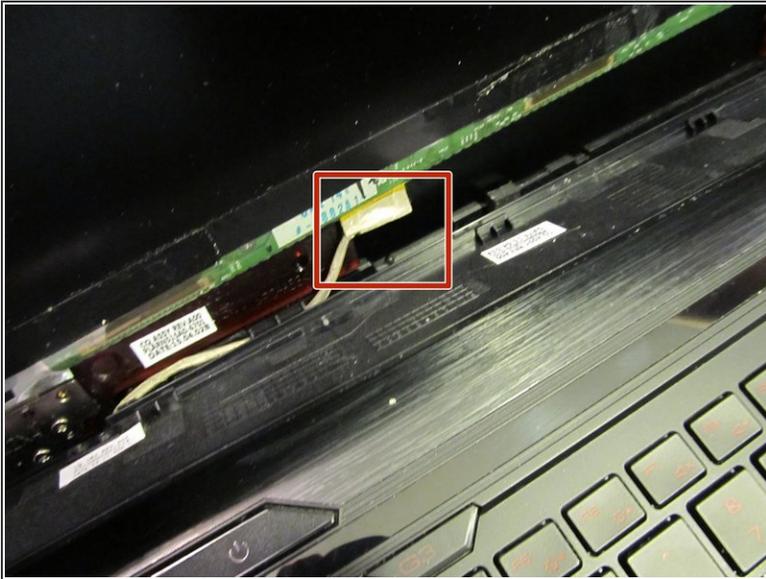

- At this point the only thing keeping the screen attached to the laptop is this small wire and connector shown here.
- Gently pull the screen out and turn it over so that you can see where the connector is attached.
- Carefully remove it. Once this is done you have successfully removed the screen from your laptop.

To reassemble your device, follow these instructions in reverse order.