

ASUS X42J Keyboard Replacement

This guide will articulate the process for replacing the keyboard.


Written By: Robert Martinez





- Metal Spudger (1)
- Nylon Tipped Tweezers (1)

Step 1 — Keyboard

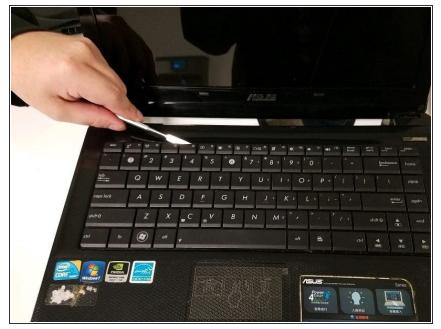

- (i) Make sure your device is unplugged and turned off before proceeding.
 - Using a <u>Spudger</u>, gently pry up the keyboard.

Step 2





- Rotate the keyboard to face downward.
- Pull out the blue wiring connection. Use <u>tweezers</u> to make it easier to remove.

To reassemble your device, follow these instructions in reverse order.