



HP 17-bs049dx Hard Drive Replacement

Replacement of hard drive in your HP 17-bs049dx.

Written By: Logan McCarty



INTRODUCTION


Use this guide to replace the hard drive in your HP 17-bs049dx.



TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

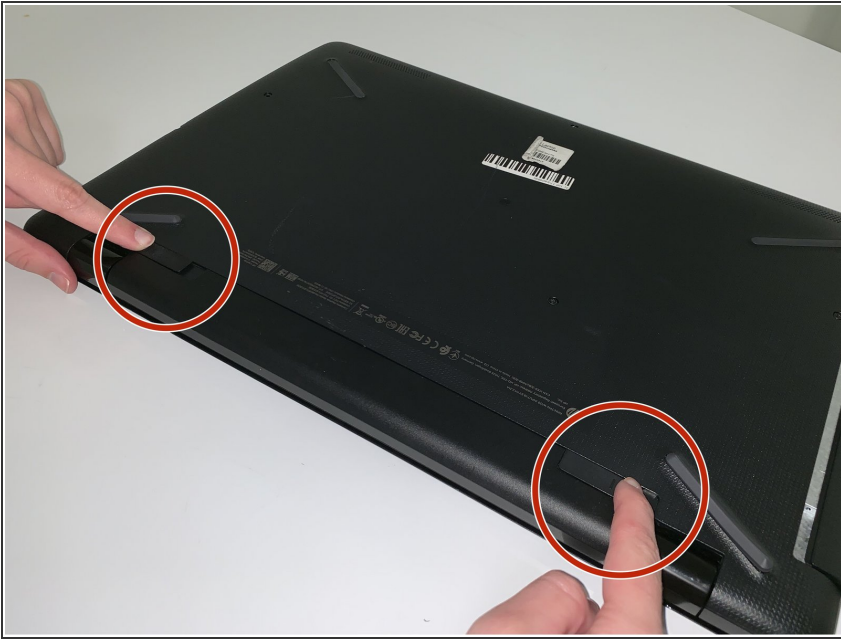


- To remove the battery, simply push the tabs towards each other.
- ⚠ The battery will come out with force, be sure to keep anything fragile away from the laptop during this process.

Step 2 — Back Panel



- Remove the four screws (13.7mm) with a Phillips #0 screwdriver.
- Be sure to lift all four rubber tabs to access screws (7.51mm) underneath.
- ⚠ Rubber tabs will require force to access screws.

Step 3

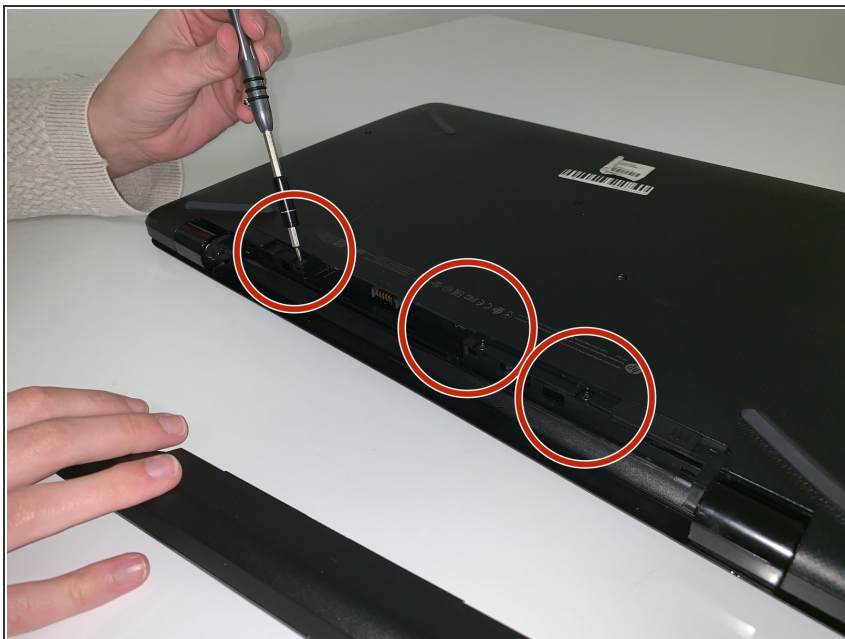

- Use the Philips 0 screwdriver to unscrew the screws (7.51mm) that were underneath the battery.

Step 4



- Pull outwards on the disk reader to remove from main frame.


⚠ This removal will require force.

⚠ All screws must be removed before removing disk reader.


Step 5



- Lift back panel to access internal components.


 You will need to use force to pry it open.

Step 6 — Hard Drive

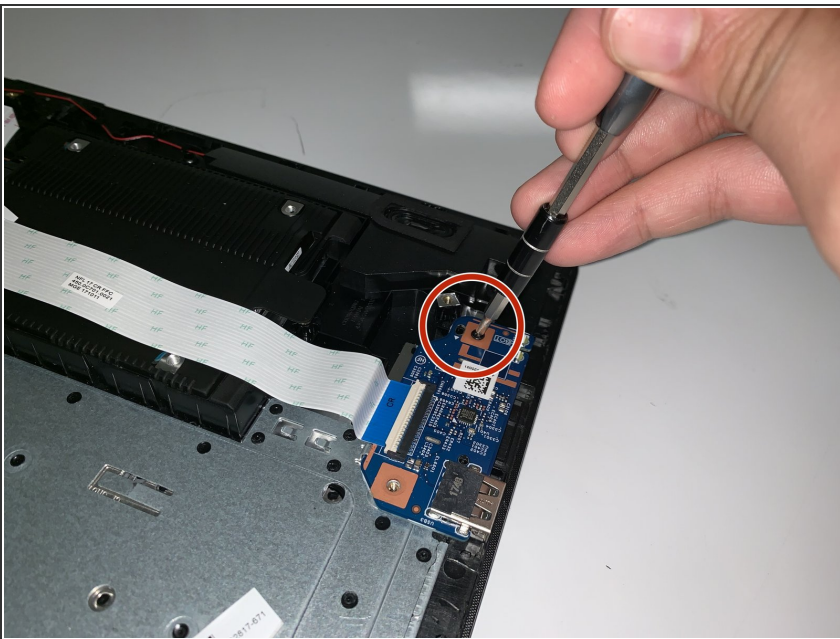

- Remove screw (7.51mm) on USB port with "Phillips 0 Screwdriver".
- Lift the USB port over and away from hard drive.

Step 7

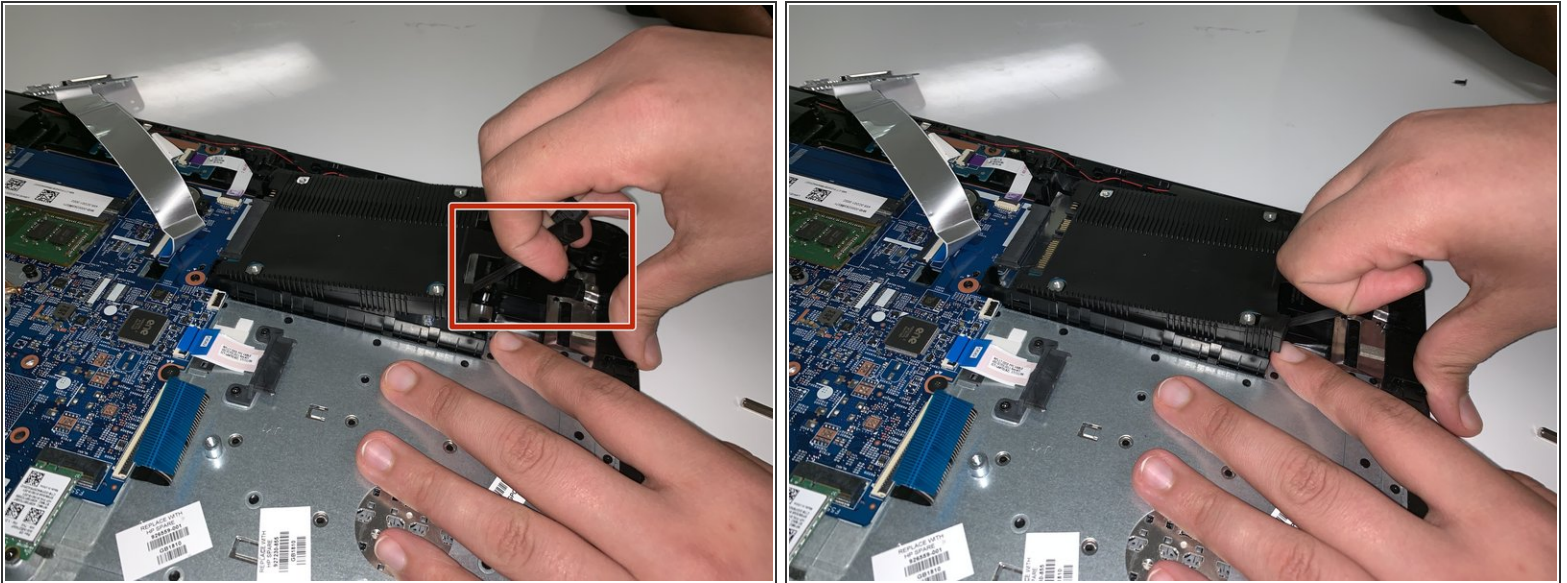

- Lift rubber black tabs located on the hard drive upwards.
- Disconnect hard drive from motherboard by pulling towards you.

To reassemble your device, follow these instructions in reverse order.