



# HP Mini 210-2070NR Battery and Service Access Cover Replacement

This is a step by step guide showing how to remove the HP Mini 210-2070NR battery and service access cover.

Written By: Sean Kuster



## INTRODUCTION

Use this guide to remove the battery and the back cover of your HP Mini 210-2070NR laptop in order to repair or install new parts.

## Step 1 — Battery and Service Access Cover





- i Before beginning, make sure that your computer is turned off and all external power cords are disconnected.
- Close the laptop and turn it over so that the underside is up and the silver battery bay is facing towards you.

## Step 2



- The battery locking latch is on the bottom right corner; slide it inward to unlock the battery.
- Slide the battery release latch inwards.
- Pull the battery towards you to remove it.

## Step 3

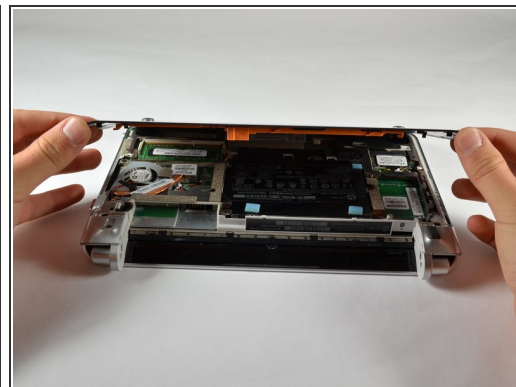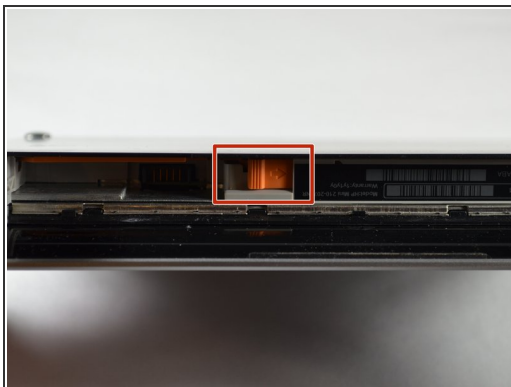

- Slide the service access cover release lever to the right.
- While holding the lever to the right, lift up the laptop's bottom cover gently and remove the cover.

## Step 4



- Orient the computer as shown in the picture.

To reassemble your device, follow these instructions in reverse order.