




# HP Notebook 15-ba018ds RAM Replacement

This guide will help assist you in replacing the RAM component in your HP Notebook 15-ba018ds.

Written By: Terrell Bradford

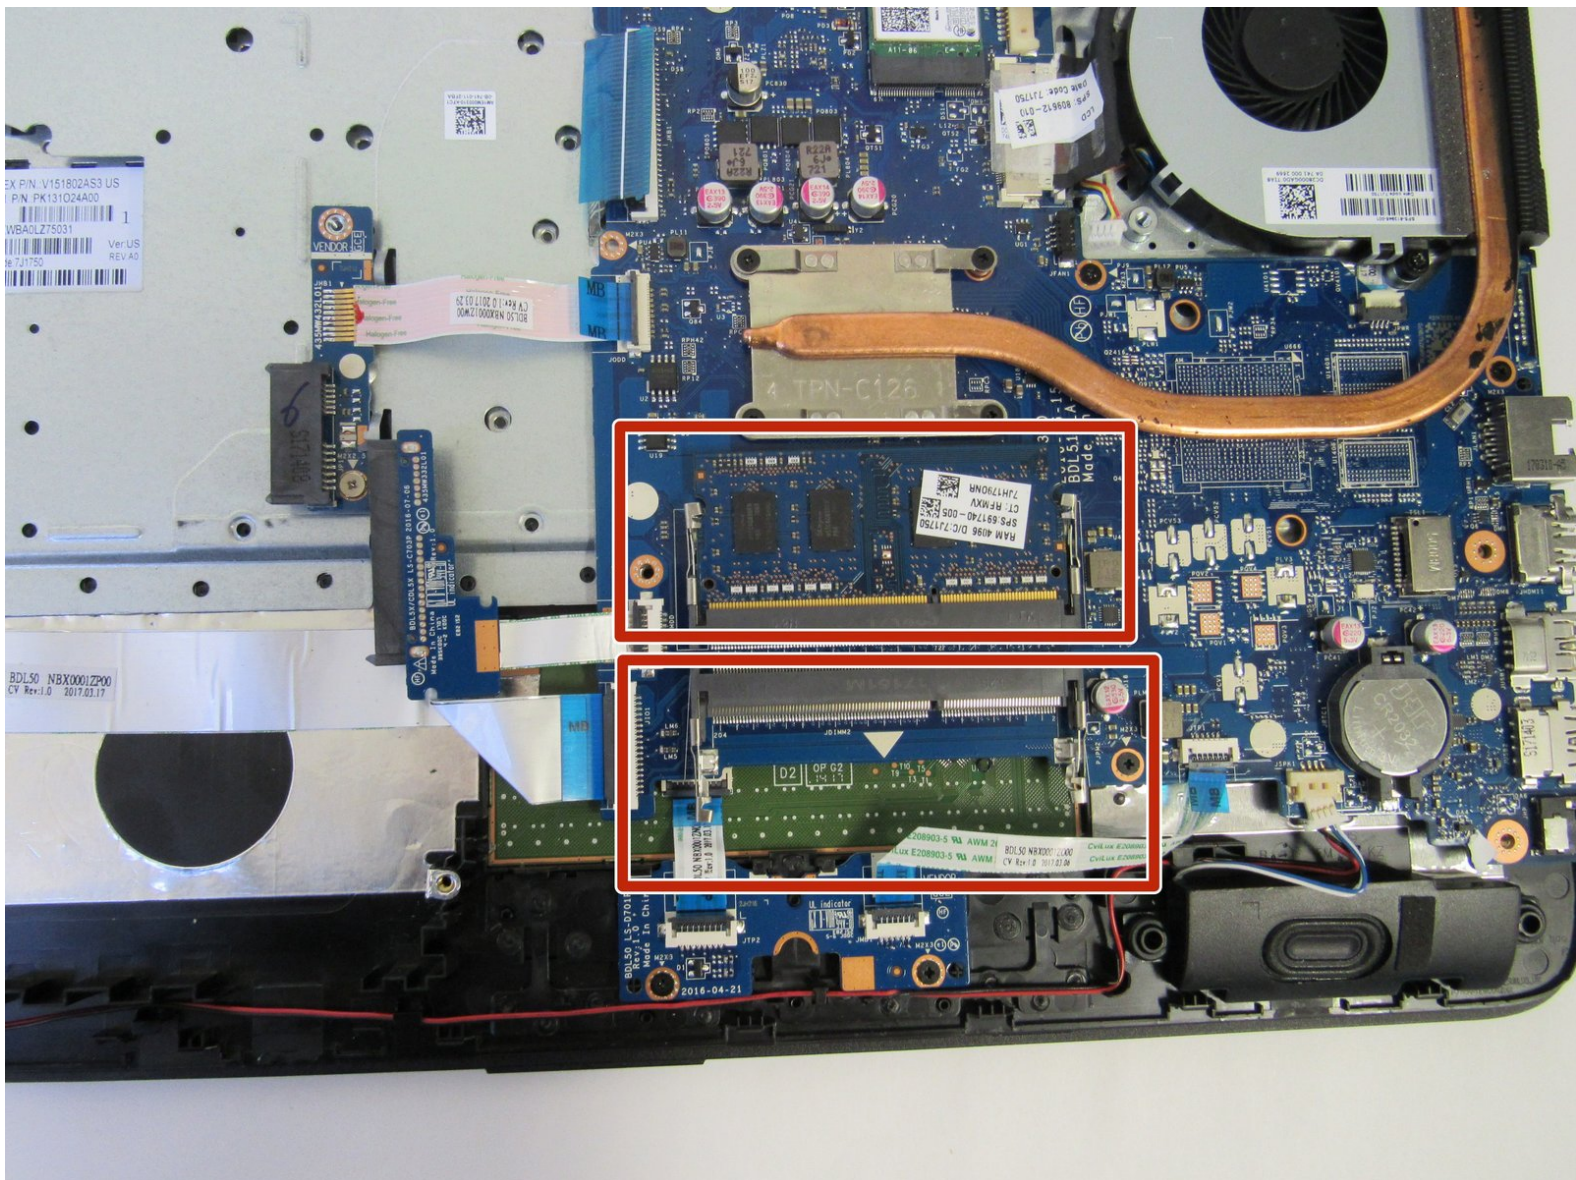

## INTRODUCTION

This guide will help assist you in replacing the RAM component in your laptop. Use this guide if HP Notebook 15-ba018ds is having low storage space. Beware of all the wires that may get damaged during this process.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Metal Spudger](#) (1)
-

## Step 1 — Battery



- ⚠ Before beginning, make sure the laptop is completely turned off by pressing the off button and waiting for the screen to turn black.
- Flip the laptop over so the battery is exposed which will be next to the hinges on the top left and right.


## Step 2



- Place your thumbs on the slide locks that are next to the hinges and simultaneously push them toward each other to unlock the battery.
- While still holding onto the slide locks, push the battery away from the laptop with your index fingers.



## Step 3 — RAM

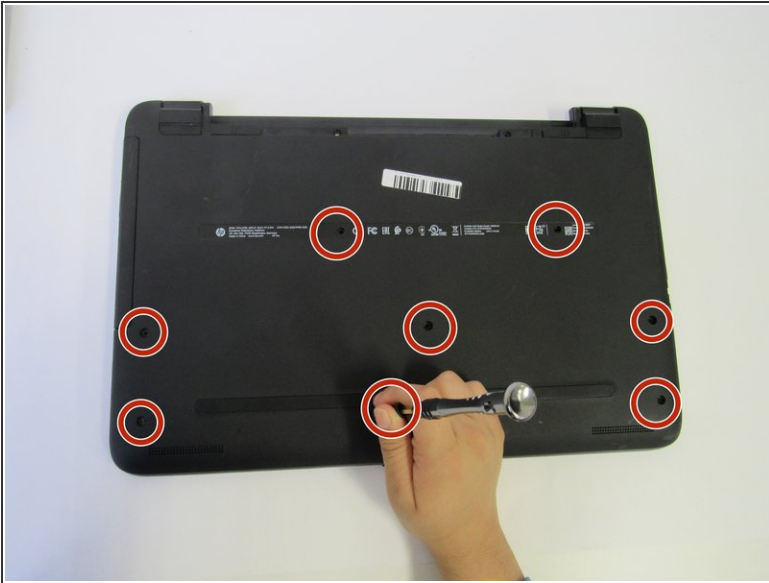



- Unscrew the 8 screws on the back cover.
- There are also two screws in the battery area that you unscrew.


## Step 4



- Use an opening tool and wedge it under the edge and go around the whole laptop to help remove the back cover.
- ❗ On the side of the laptop, you can see where it can be separated into two parts.

## Step 5

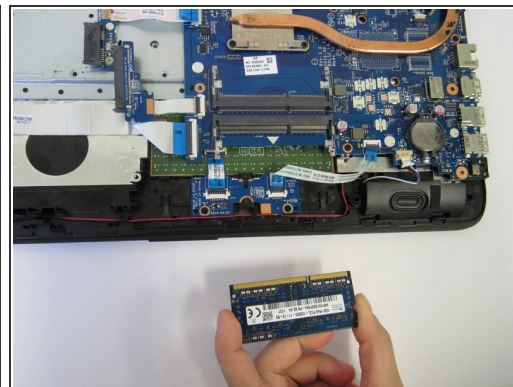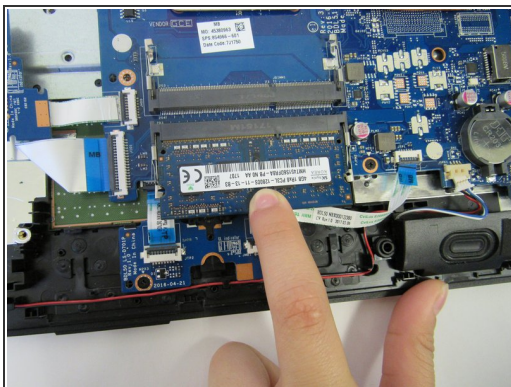

 This laptop has one RAM.

- Gently pull out the RAM from the socket.

To reassemble your device, follow these instructions in reverse order.