




Lenovo IdeaPad U410 Solid State Drive Replacement

Guide on how to replace the Solid State Drive (SSD) from the Lenovo IdeaPad U410 laptop.

Written By: Edric An

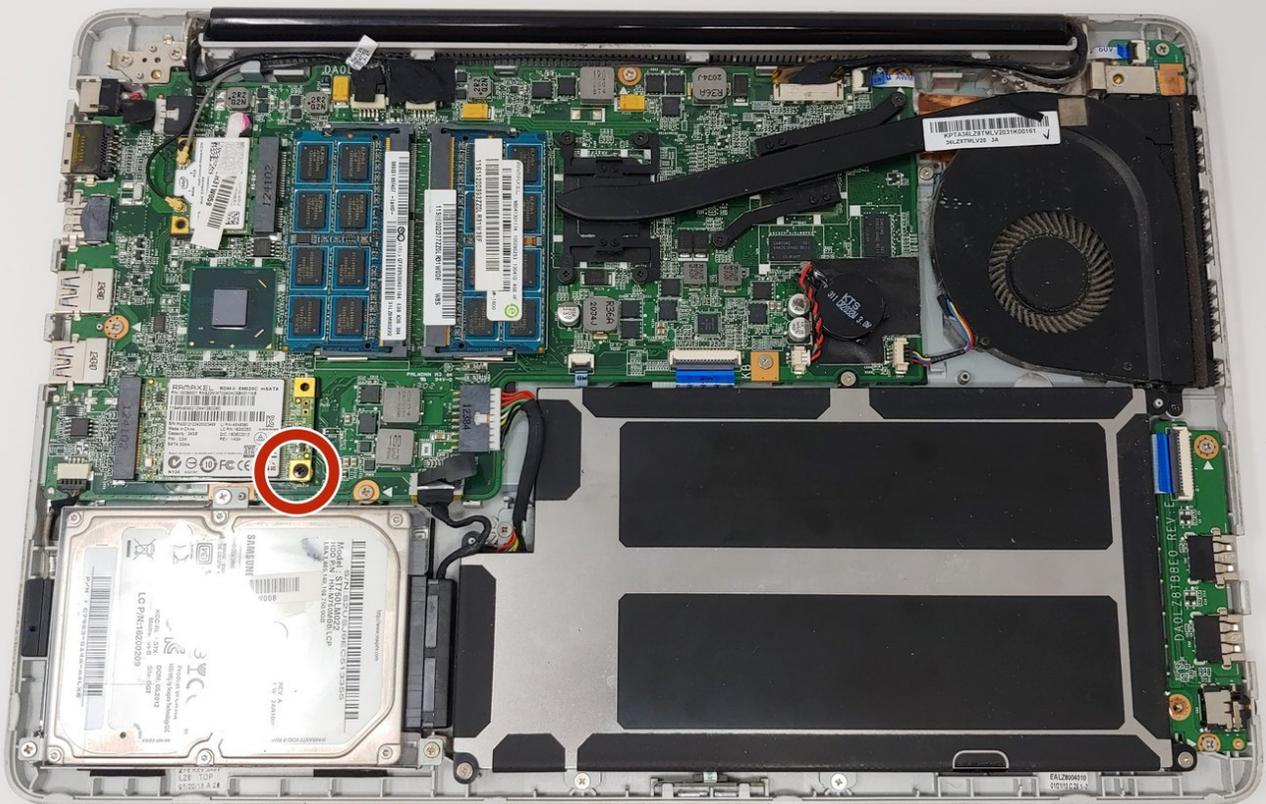

INTRODUCTION

This guide will take 5 minutes and will require you to follow a prerequisite guide on how to remove the back cover. The solid state replacement will require a Phillips #1 screwdriver and a metal spudger.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Metal Spudger](#) (1)



PARTS:


- [Solid State Drive](#) (1)

Step 1 — Bottom Cover



- Using the metal spudger, remove all the rubber squares on the bottom of the laptop.

Step 2

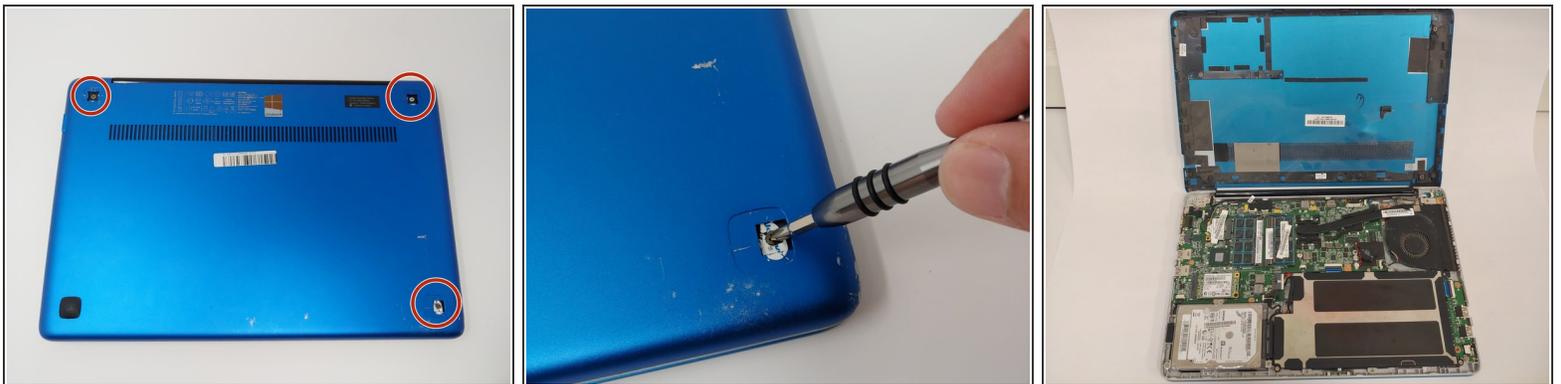

- Remove the three 6 mm Phillips #1 screws holding the panel on the laptop.
- Pry the panel from the laptop using your hands or the metal spudger if necessary.


Step 3 — Solid State Drive



 Make sure your laptop is powered off.

- Use a Phillips #1 screwdriver to remove the 3 mm screw holding the SSD in place.

Step 4

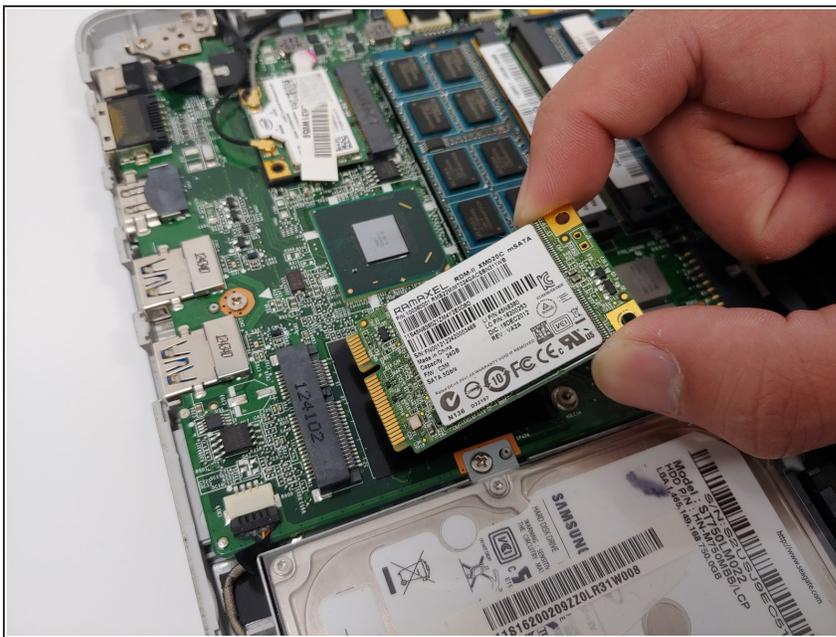

- Grab the SSD and pull it out from the mSATA slot.

To reassemble your device, follow these instructions in reverse order.