



Canon EOS Rebel XS 35mm Bottom Cover and More Replacement

This is a necessary procedure for replacing...

Written By: [christiansvezia](#)



INTRODUCTION

This is a necessary procedure for replacing certain parts on the bottom of the Canon EOS Rebel XS 35mm camera (after removal of the bottom cover). This guide details how to remove these parts and put them back in, whether they're the same parts now fixed, or a new parts. The parts include two small metal plates, washers, screws, and gears.

TOOLS:

54 Bit Driver Kit (1)

Just a PH000 screwdriver bit and screwdriver are necessary.

Tweezers (1)

Not absolutely necessary.

Step 1 — Bottom Cover




- Remove 6 screws using a PH000 Screwdriver.
- Remove 1 (7mm) screw
- Remove 5 (4mm) screws

Step 2




- With your fingers, push on the bottom cover with a horizontal force until it clicks and separates.

Step 3

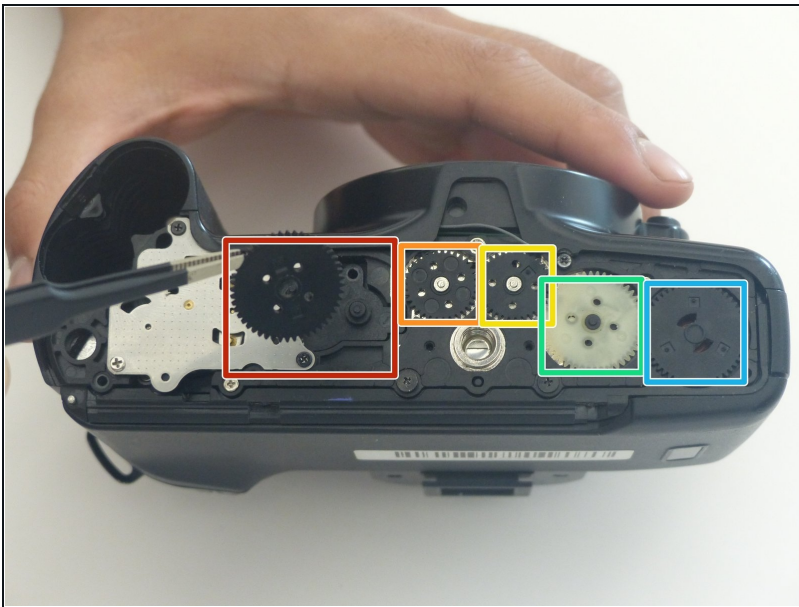


- With [tweezers](#) - although you can also use your fingers - you may remove these 5 gears (shown with colored squares around them) and place them somewhere else for the time being. They fall out easily while you're working, so this will help you stay organized.

Step 4 — Bottom Cover and More

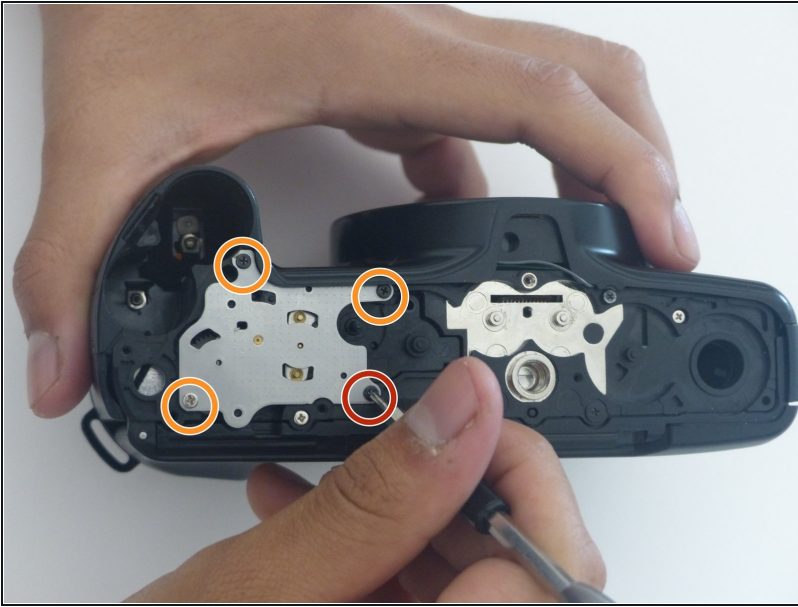

- Remove the 5mm silver Phillips #000 screw.
- Remove three 4mm Phillips #000 screws.

Step 5

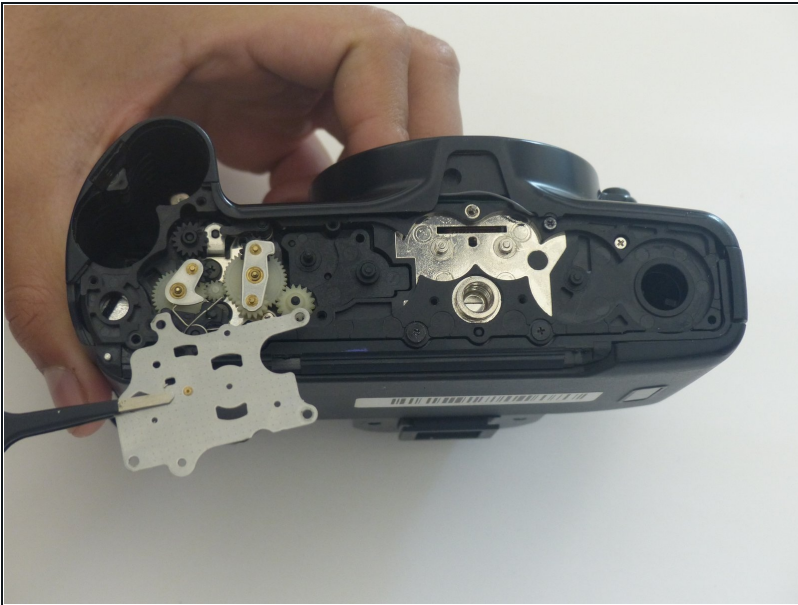

- Remove the silver plate with [tweezers](#) or fingers.


Step 6



⚠ Be mindful of the spring attached to the plastic piece. Do not lose it.


- Remove the plastic black part.

Step 7

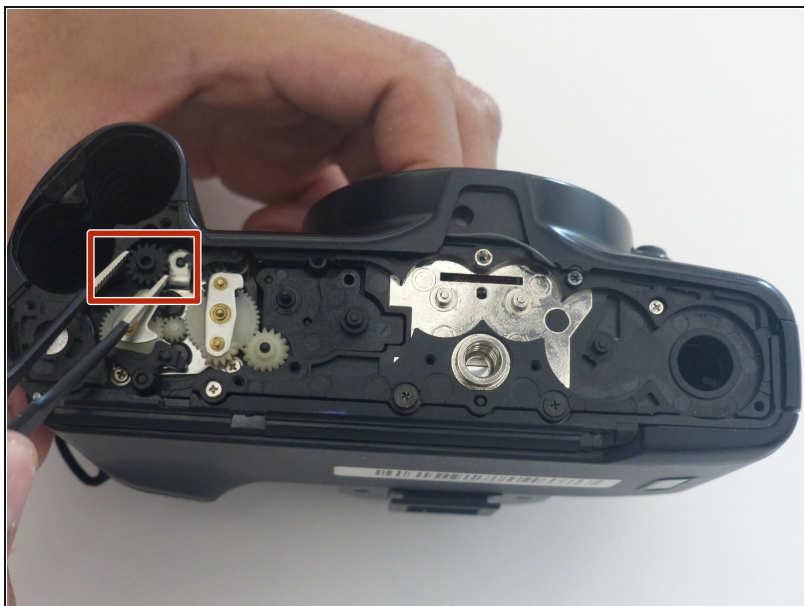


- Remove the black gear with tweezers or fingers.

Step 8

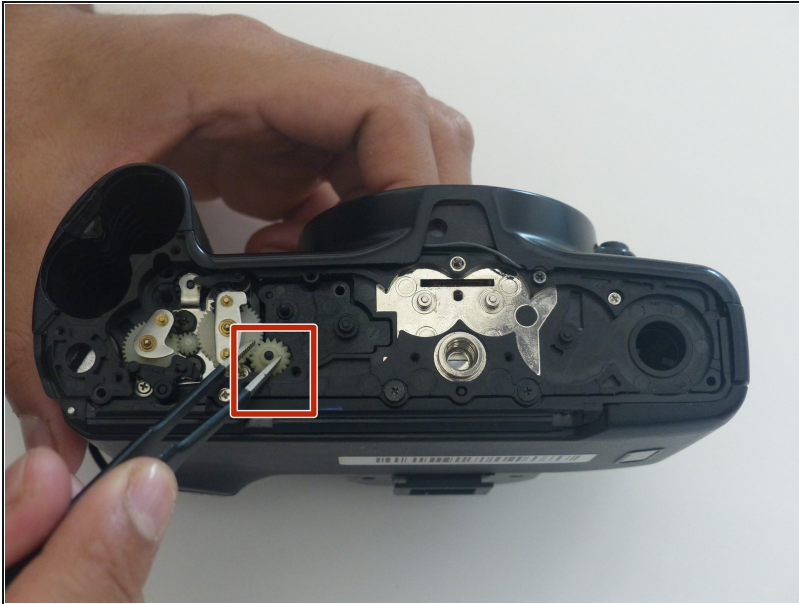


- Remove the gear with tweezers or fingers.

Step 9

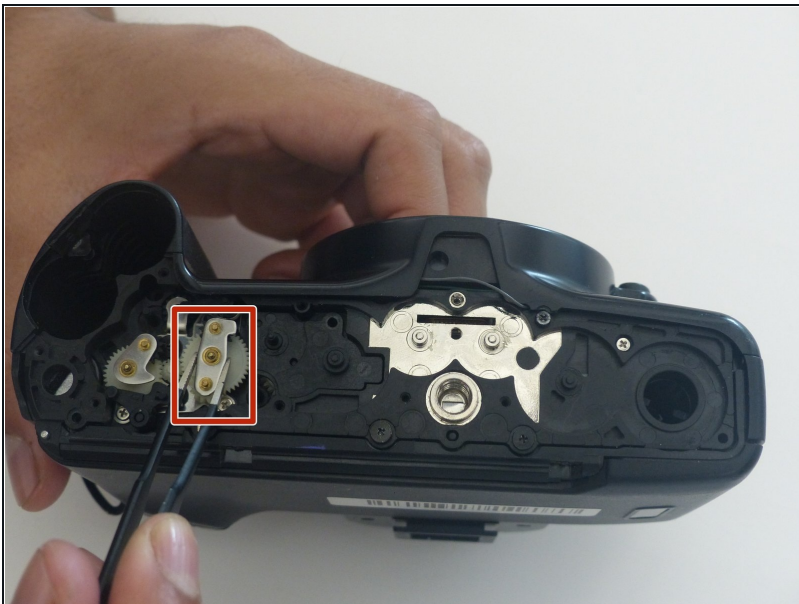


- Remove the part indicated in the picture with tweezers or fingers.

Step 10

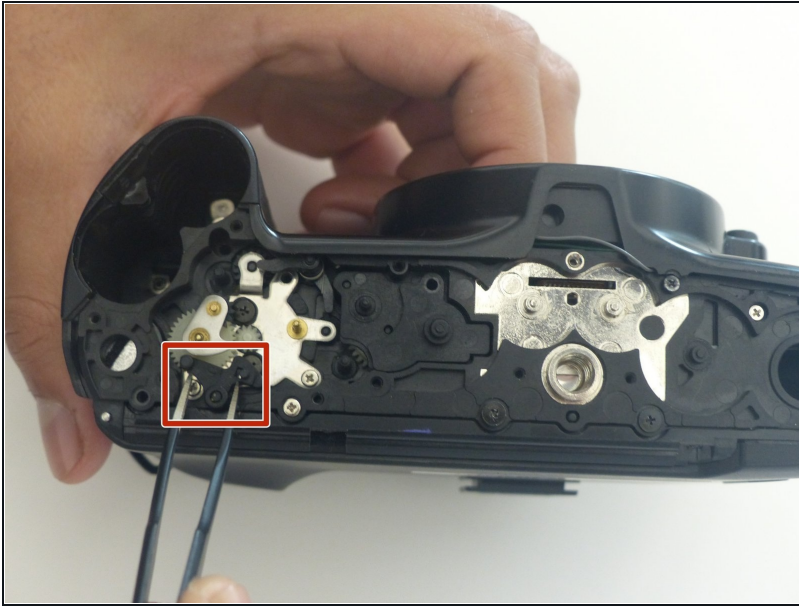

- Remove the part indicated in the picture with tweezers or fingers.

Step 11

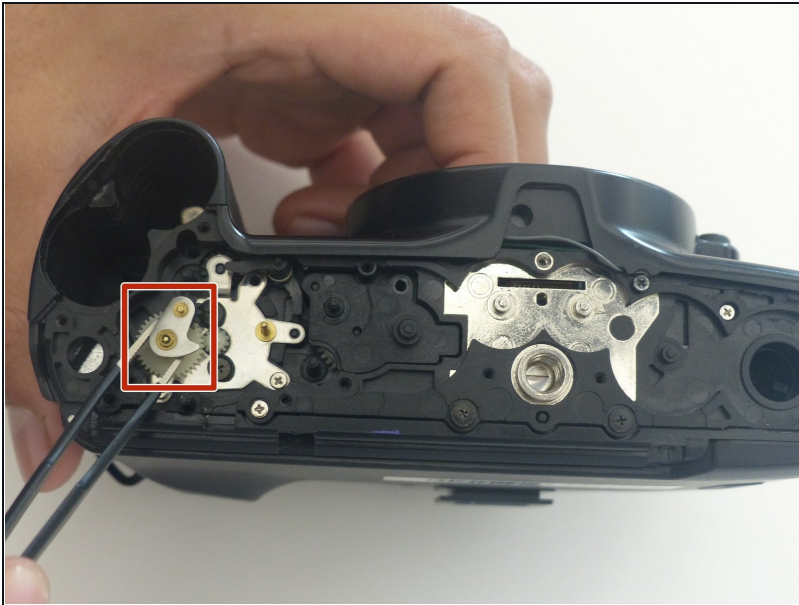

- Remove the part indicated in the picture with tweezers or fingers.

Step 12



- Remove two 3mm Phillips #000 screws.
- Remove two silver 3.5mm Phillips #000 screws.

Step 13



- Remove the second silver plate using tweezers or fingers.

To reassemble your device, follow these instructions in reverse order.