




DJI Phantom 4 Advanced Remote Controller Back Buttons Replacement

Written By: Angel Cortez

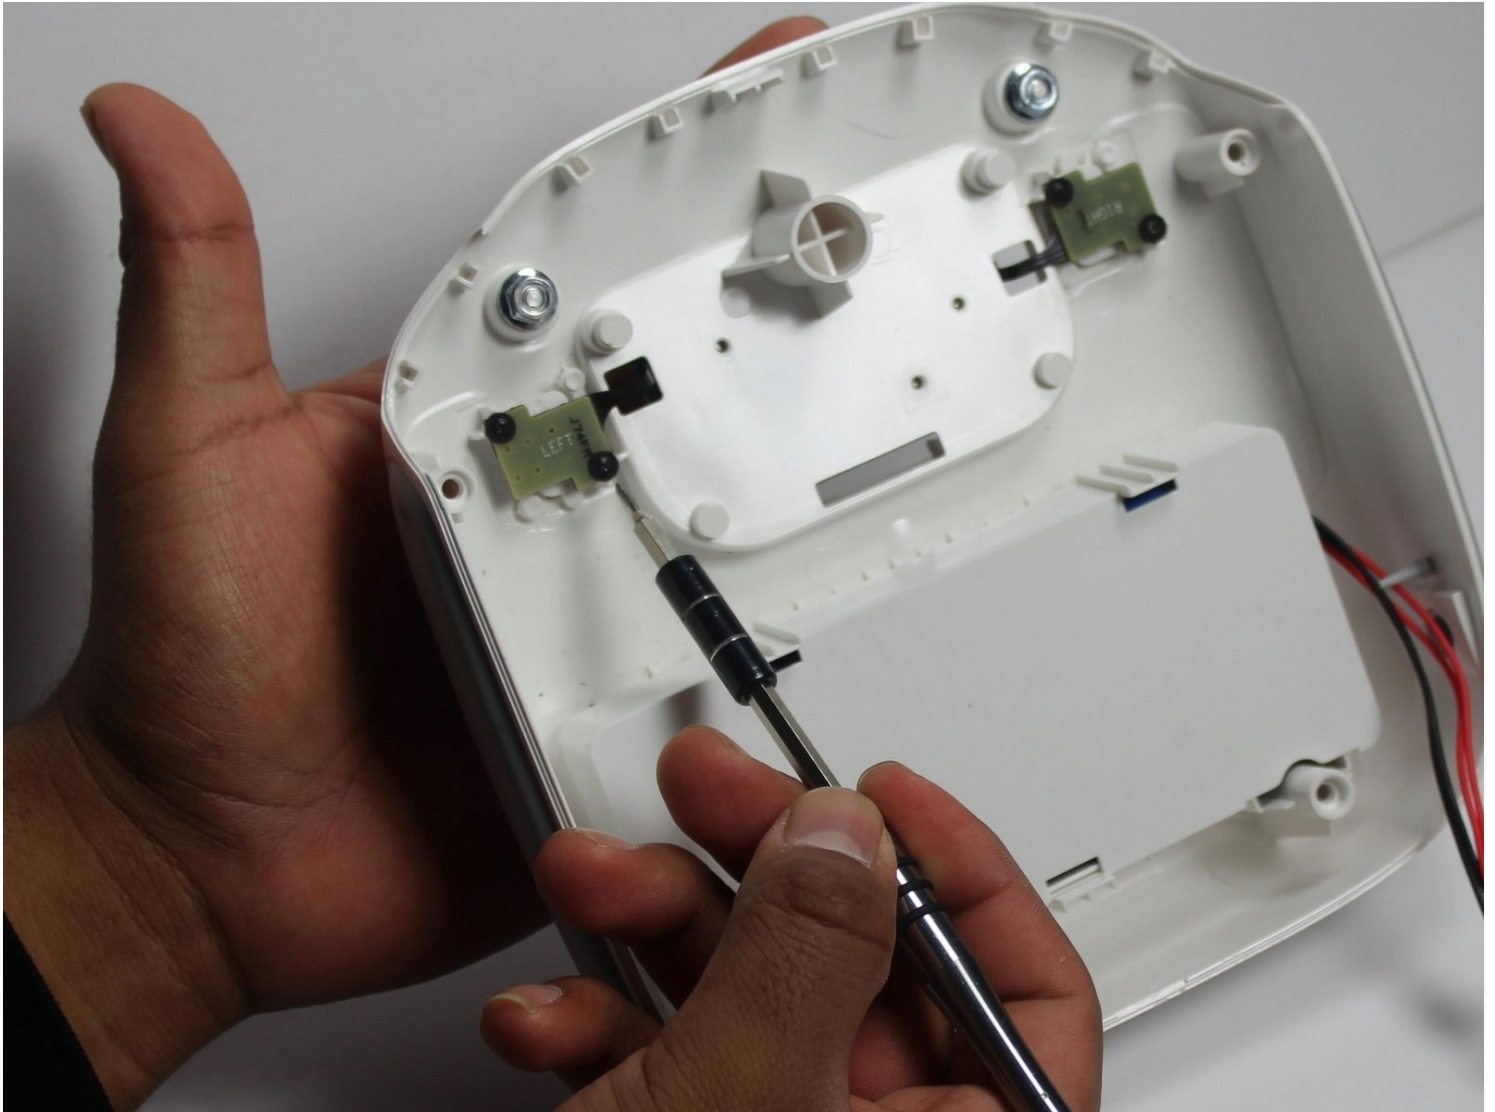

TOOLS:

Spudger (1)

TR8 Torx Security Screwdriver (1)

Phillips #0 Screwdriver (1)

Phillips #00 Screwdriver (1)


Tweezers (1)

Step 1 — Back Panel



- Remove the four screws with a Torx T8 screwdriver to access the back con board.

Step 2


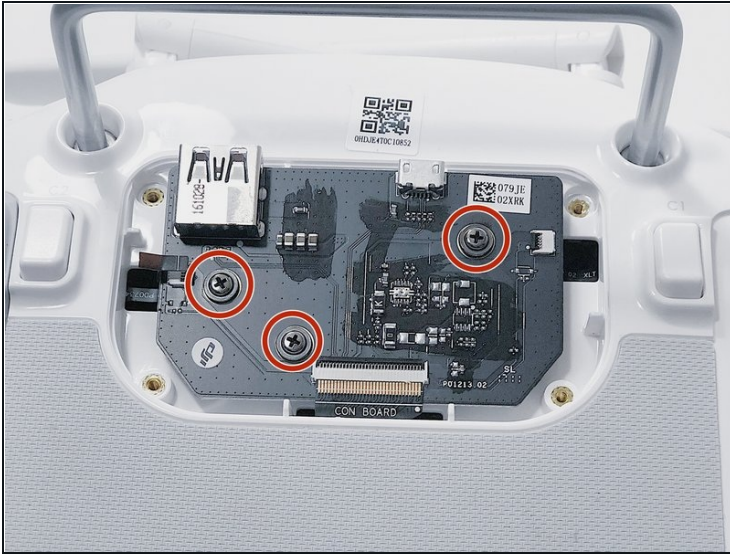


Phillips #00 screwdriver.




- Remove three screws using a Phillips #00 screwdriver.

Step 3

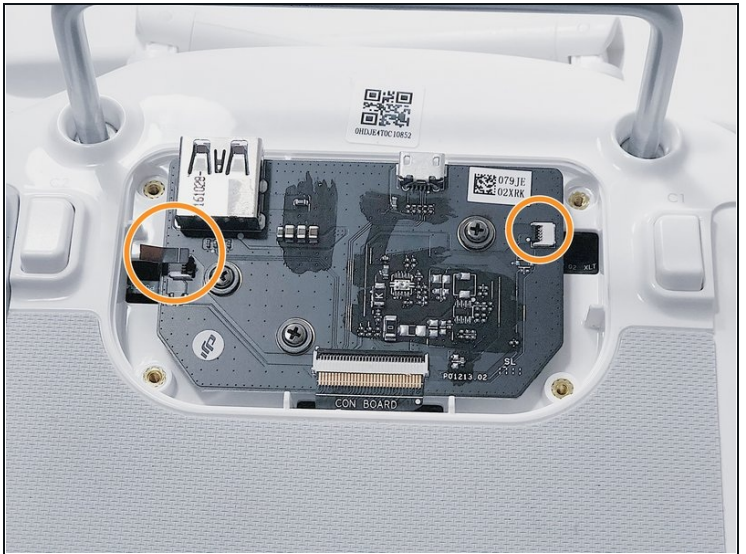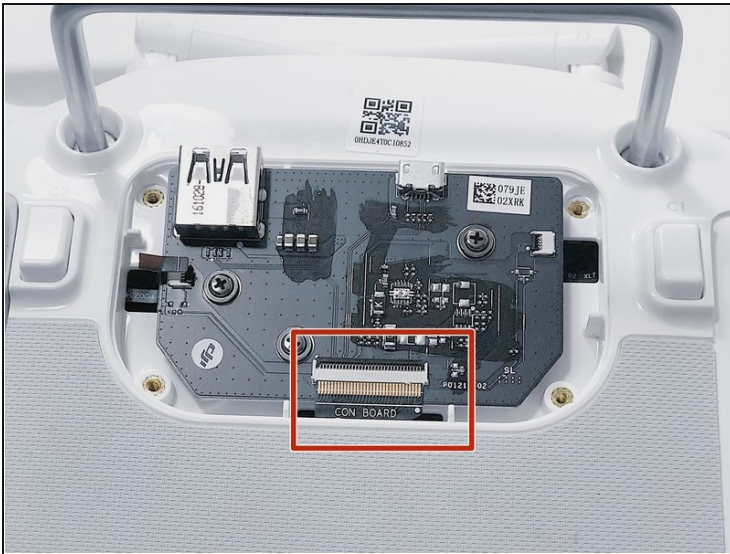


- With [tweezers](#), gently remove the large con board tab.
- Use your hands to remove the two small clips. Pull out from the socket, in a horizontal direction.

Step 4

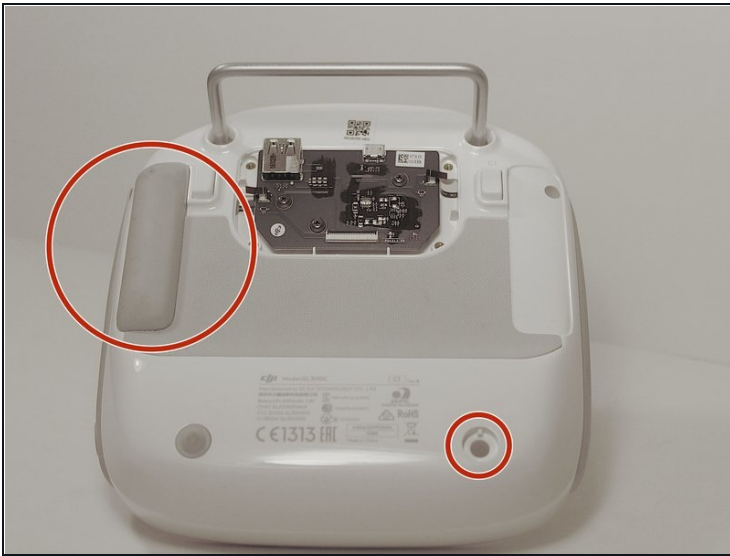



- Peel off the rubber grips to access the screw holes.
- ⚠ Make sure to save your grips and do not to get them stuck to anything, you are going to want to save the adhesive.
- Remove the back board and set it aside.

Step 5

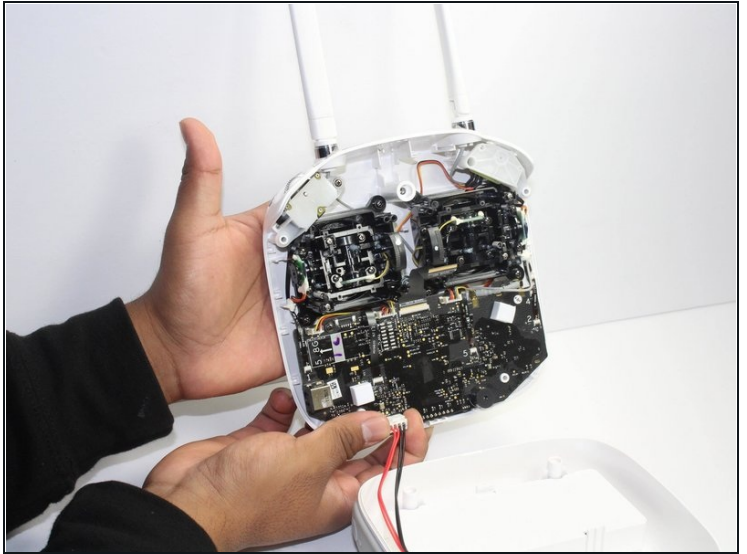


- Pull apart the back plastic panel.
- ① Recommended tool for this would be the metal spudger, but not required.
- Once the back panel is off, you will have access to the motherboard.

Step 6 — Back Buttons

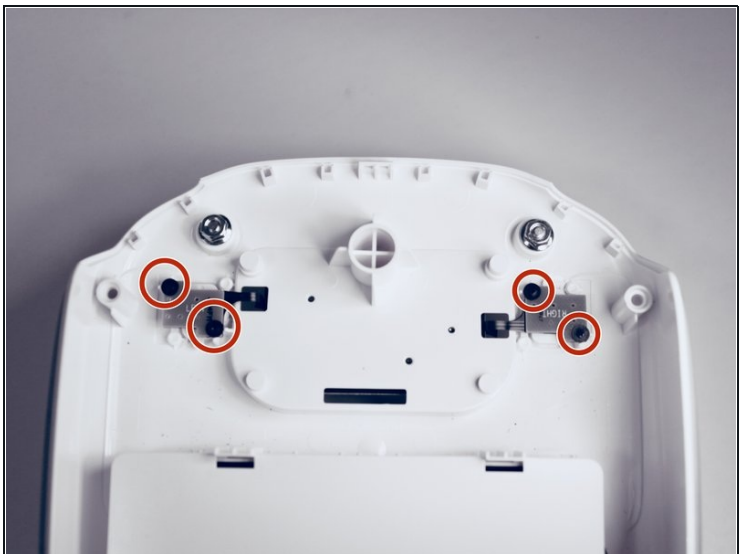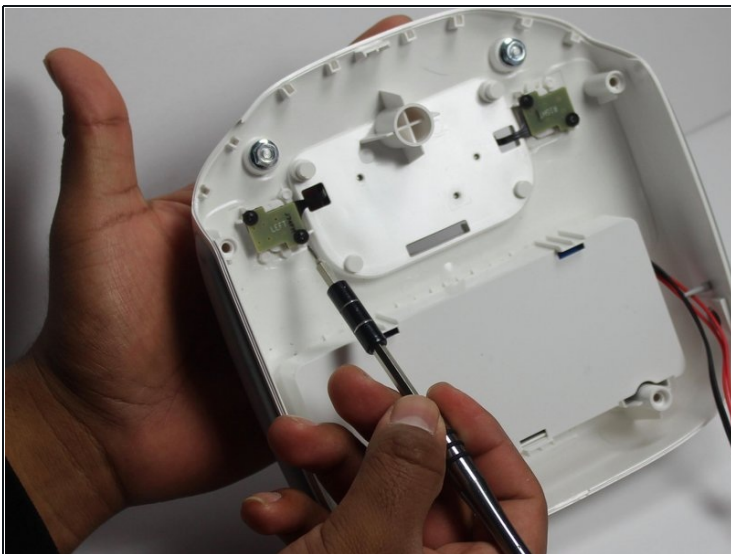

- Using a Phillips #00 screwdriver, remove the four screws on the inside of the panel. That will allow you to remove the buttons by gently lifting them with your hands.

Step 7

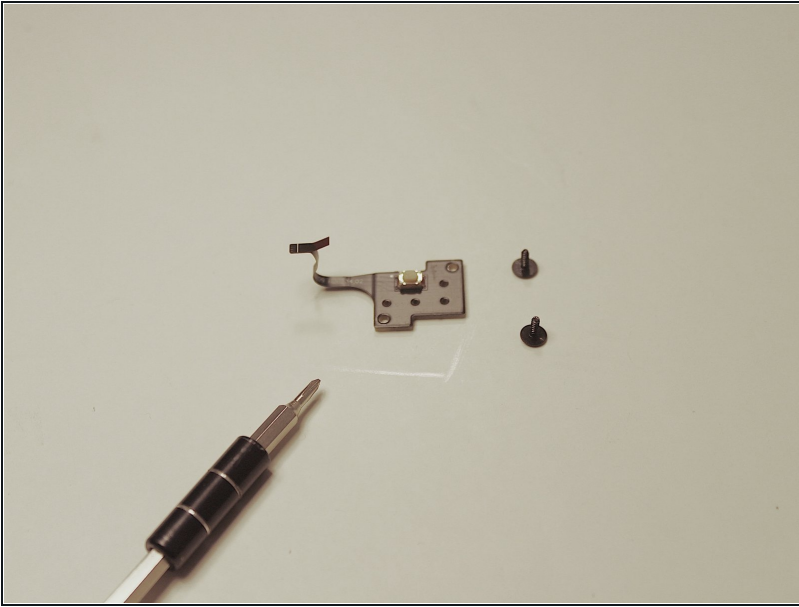

- Remove back buttons and replace with new ones.

To reassemble your device, follow these instructions in reverse order.