 




# BLU Vivo 5 Mini SIM Card Replacement

Use this guide to replace your BLU Vivo 5 Mini SIM Card.

Written By: Kymari

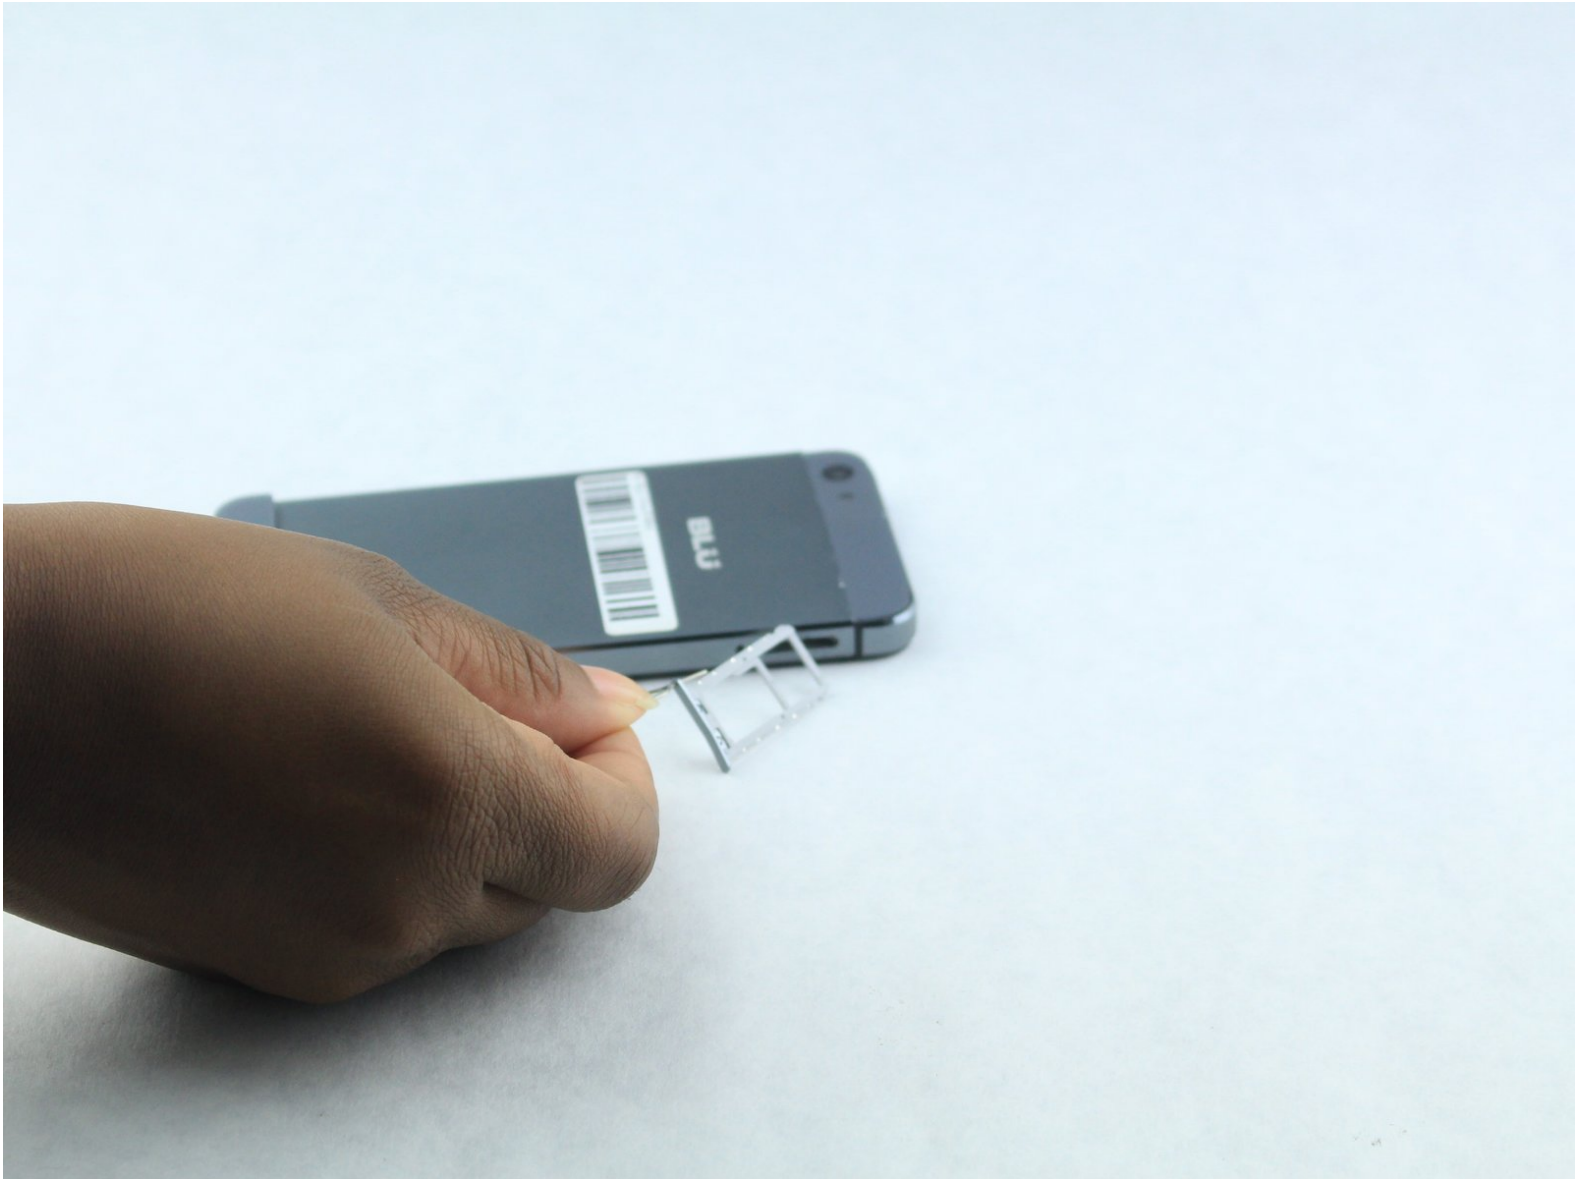

---

## INTRODUCTION

Use this guide to replace your BLU Vivo 5 Mini SIM Card for more space.

This guide instructs you on how to remove the SIM card and holder from the side panel encasing ; with the purpose to remove the SIM card from the phone.

If SIM card not reading check to see if inserted properly. For better performance upgrade to SIM card with most available space.



### TOOLS:

- [SIM Card Eject Tool](#) (1)
-

## Step 1 — SIM Card



 
- Locate small hole on the right side of the phone under the power button.

## Step 2




- With the use of the SIM Card Eject Tool gently insert the tool into the hole.

### Step 3

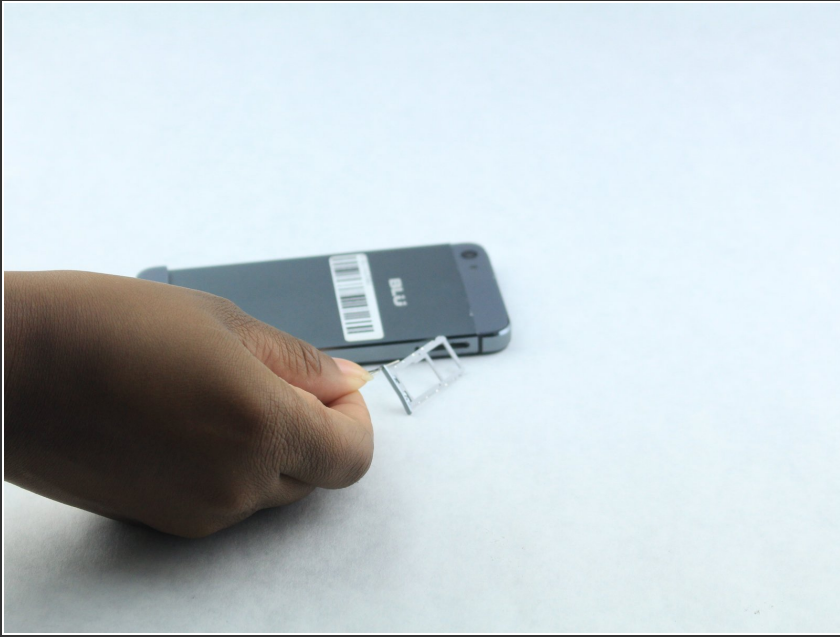

- After pulling out SIM card holder check to see if the SIM card is inserted correctly.
- While holder is open remove SIM card to check for any potential debris blockage. (You can complete remove holder to check for full blockage.)

### Step 4

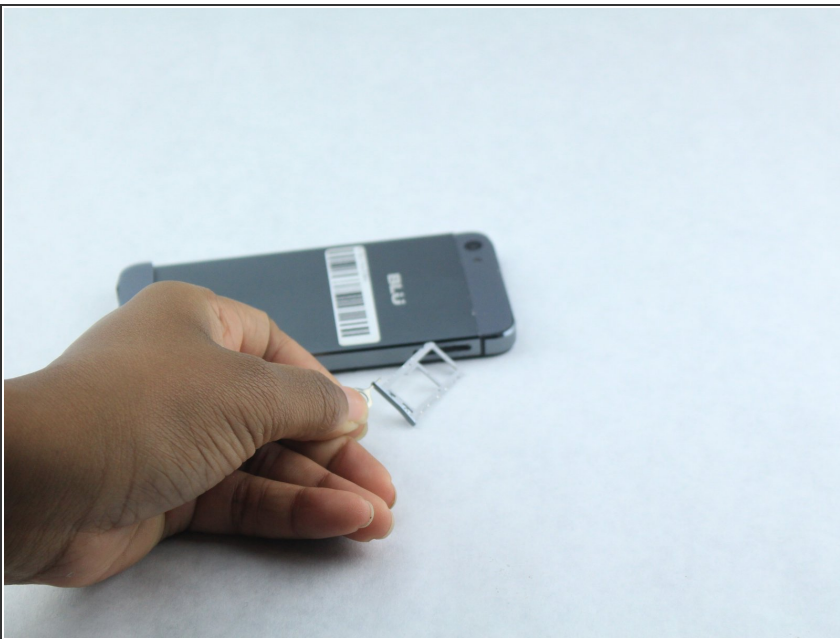 

- After clearing all debris re-enter the holder into the phone.
- At this time either re-enter the SIM card or replace with new SIM card and close holder back into phone
- Power on BLU Vivo 5 Mini and check for updated settings

To reassemble your device, follow these instructions in reverse order.