




Gateway NV57H50u RAM Replacement

This guide will show how to remove and replace the RAM for a Gateway NV57H50u laptop.

Written By: Aaron Allison

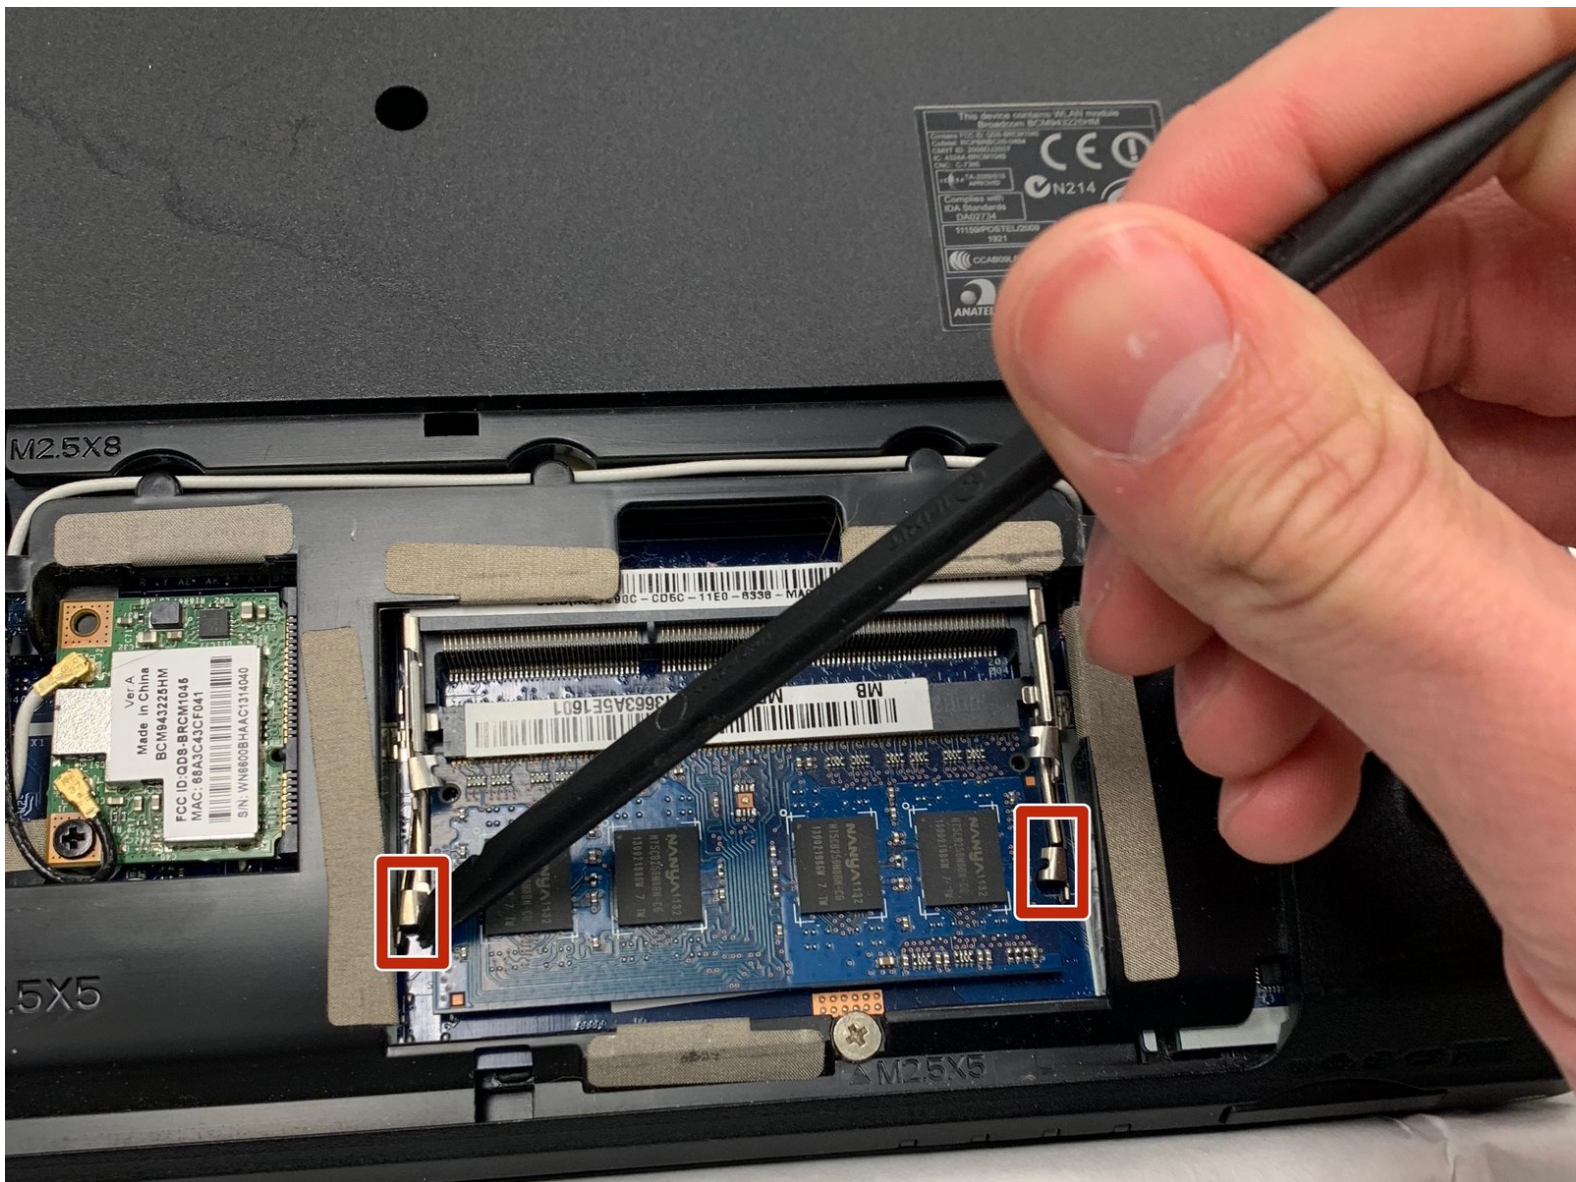

INTRODUCTION


Be sure to unplug and power off the device before removing any components. Also, save any work before disassembly.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

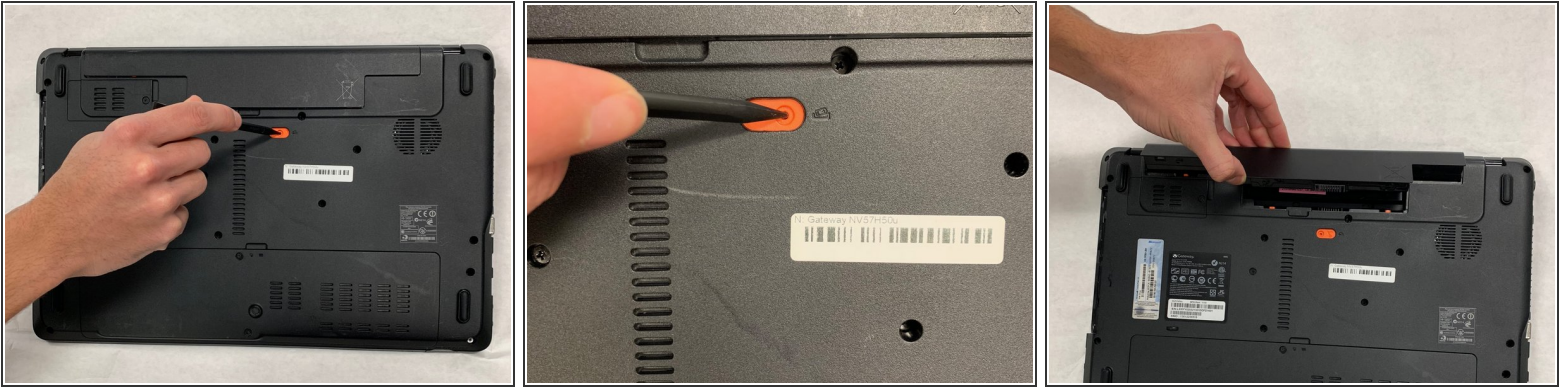

- Push orange locking tab with spudger right, until battery lifts out of place.

⚠ Laptop should be unplugged from power supply before removal.

Step 2 — Rear Cover



- Unscrew the two 7 mm long #0 Phillips screws.

Step 3




- Lift and remove the cover panel via the indentation in the middle of the panel.

Step 4 — RAM



- Push each of the two silver clips outward to release RAM board.

Step 5

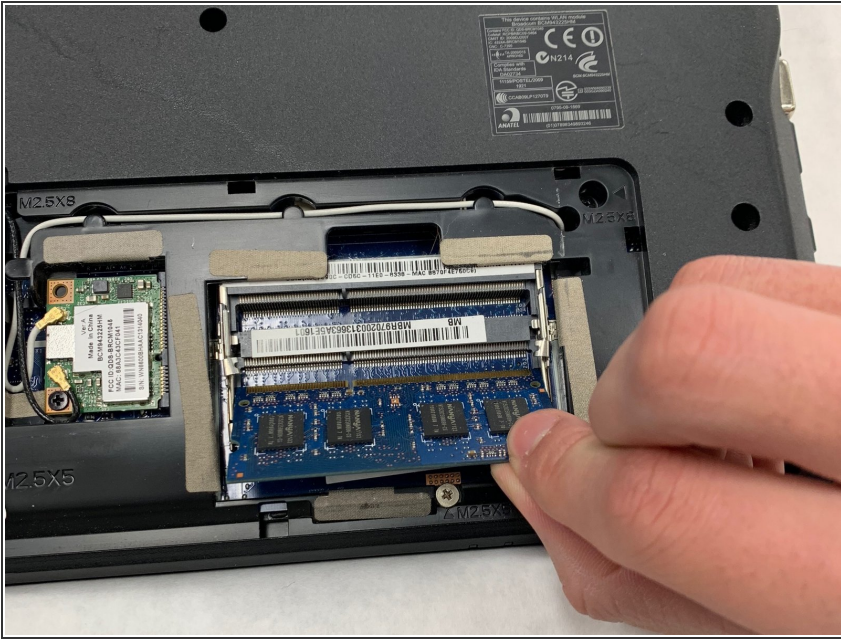

- Lift RAM board out of its compartment.

To reassemble your device, follow these instructions in reverse order.