



# ASUS N56JR-MH71 RAM Replacement

This guide will show you how to remove the RAM from the ASUS N56JR-MH71 laptop.

Written By: Ruben Lopez



---

## INTRODUCTION

If you want to upgrade memory, this guide will show you how to replace the RAM. Be sure the type of RAM used is DDR3L SDRAM.



### TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

## Step 1 — Battery



- Push the battery latch.


## Step 2



- Keep the battery latch held while you remove the battery.




## Step 3 — RAM

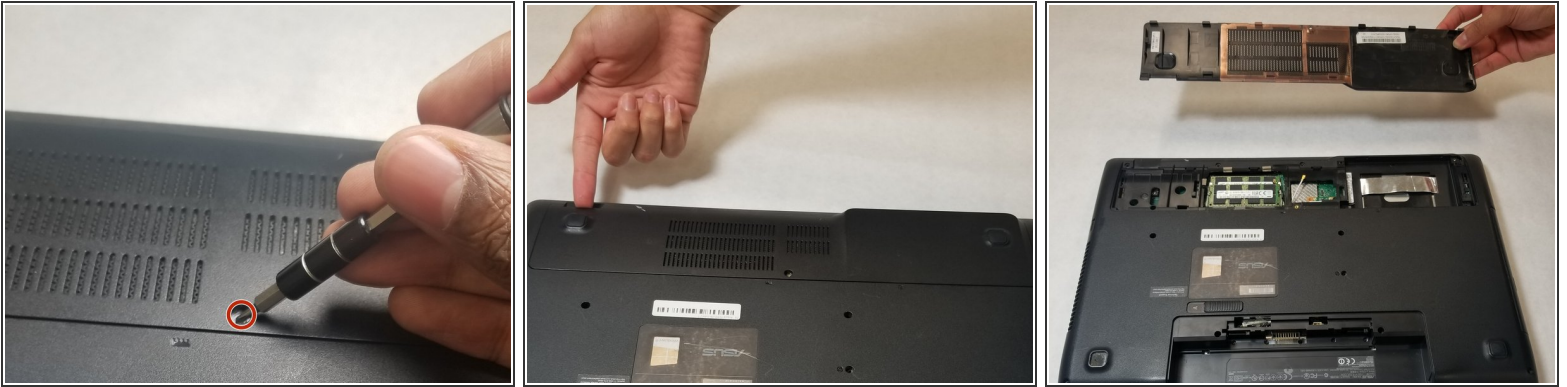

- Remove the one screw securing the back cover.
  - Pry off the cover using a finger.
- i** This device was missing its screws on the back cover when we received the device. As a result, we do not know what head type the screws are, along with their lengths.

## Step 4

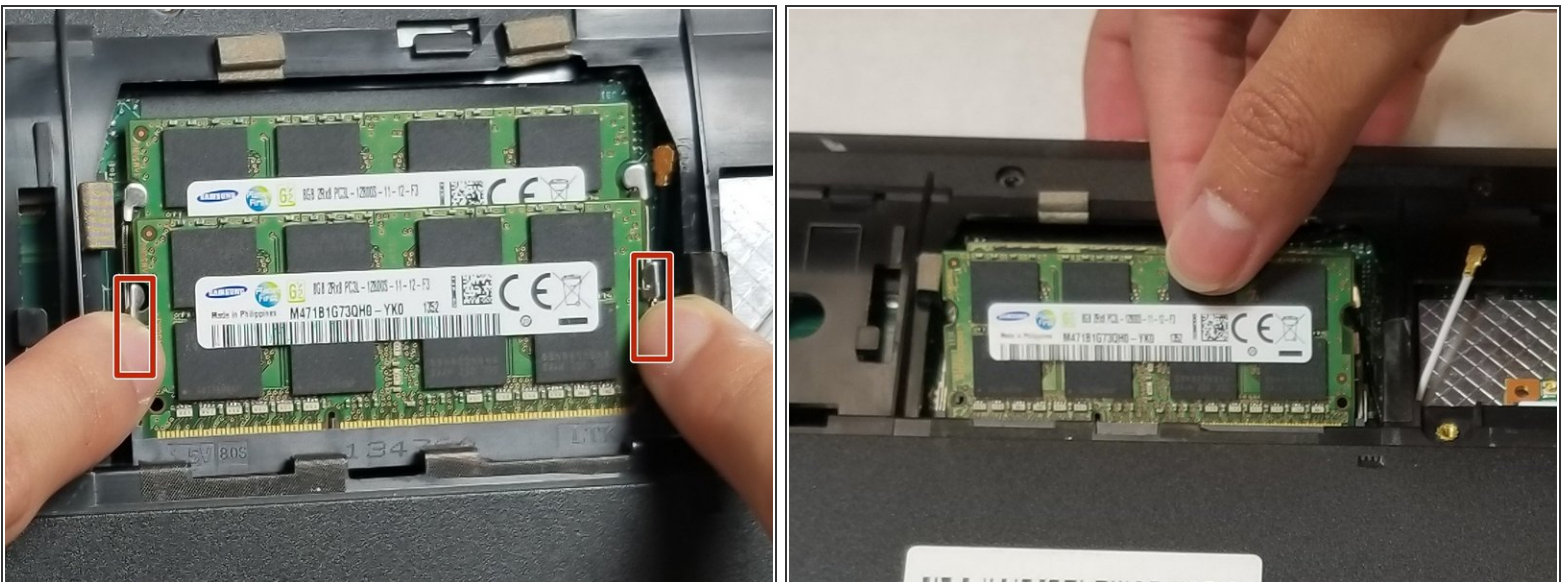

- Push the clips outwards using two fingers.
  - Lift the RAM to remove it from the slot.
- i** Repeat step 4 for the second RAM slot.

To reassemble your device, follow these instructions in reverse order.