




Sony α6000 Memory Card Replacement

How to replace a Sony α6000 memory card.


Written By: Andrea Lopez

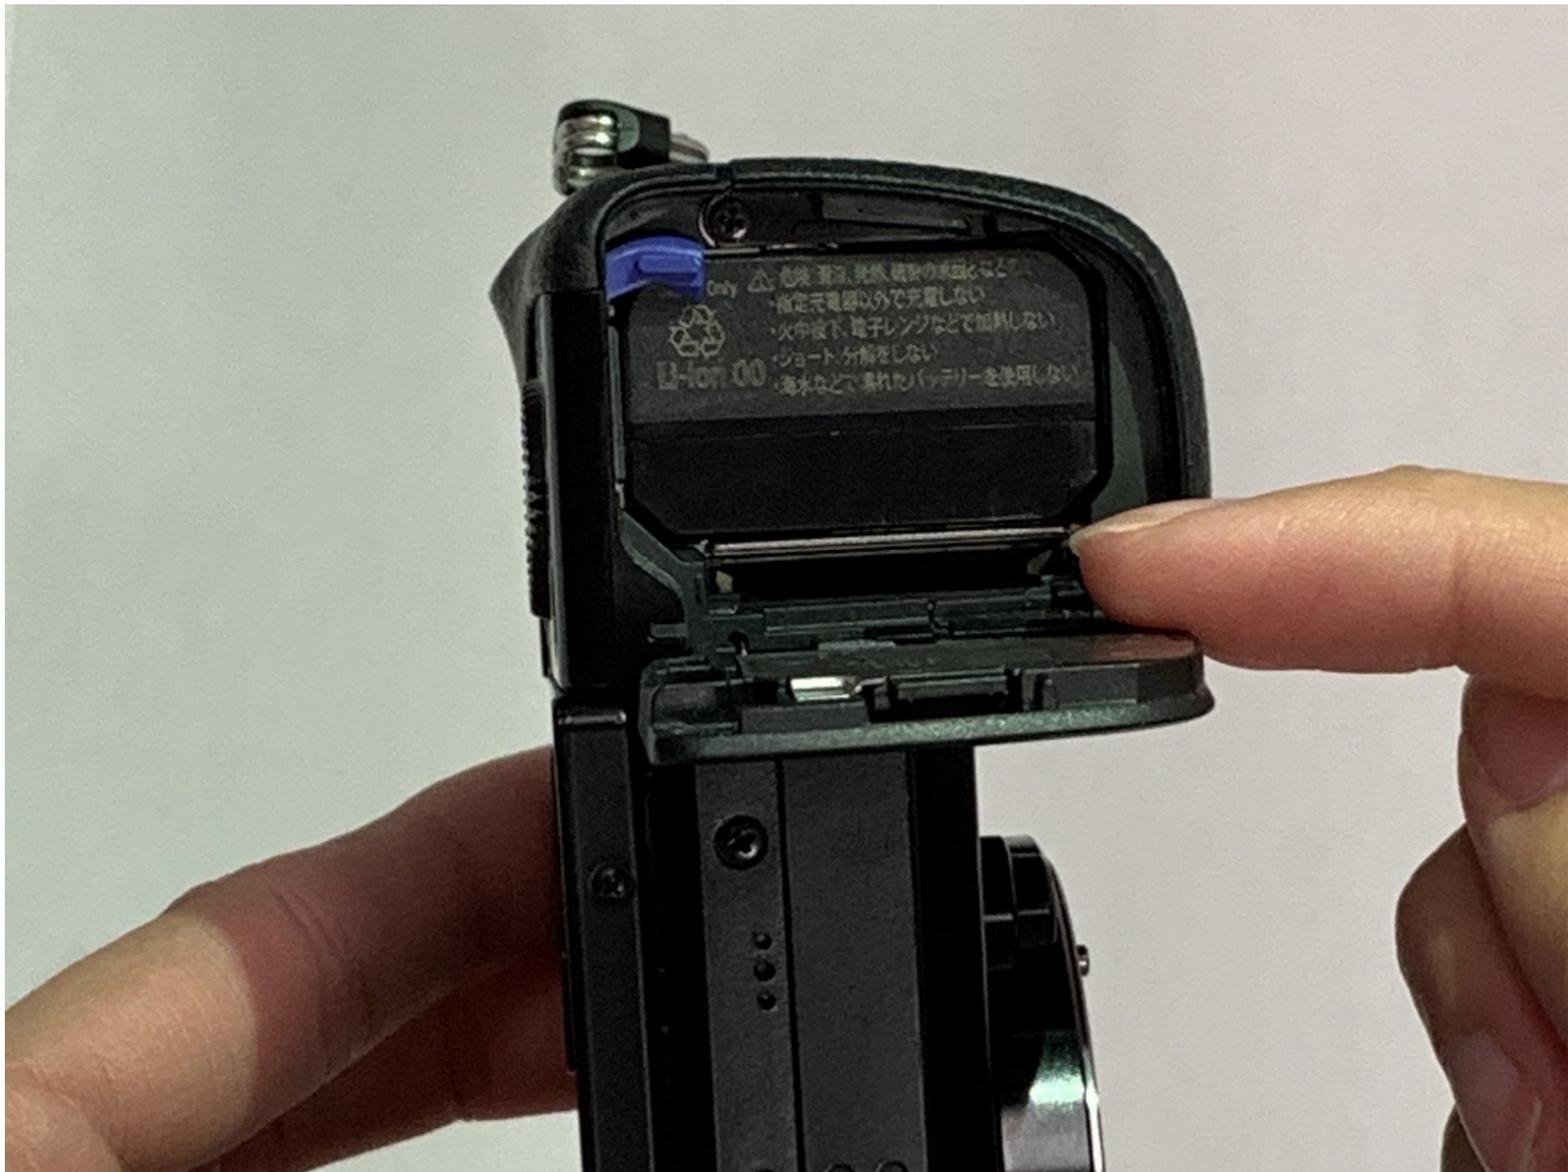

INTRODUCTION



If you want to transfer photos from the camera to a computer, this guide could help you. This guide helps to transfer photos from the camera to a laptop or computer. No special tools are needed.

Step 1 — Memory Card

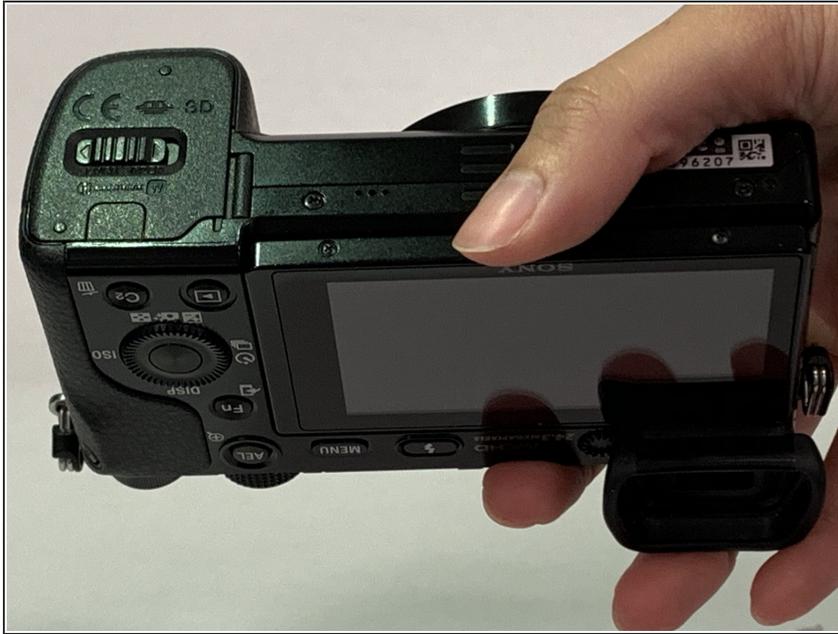

- Flip the camera upside down

Step 2

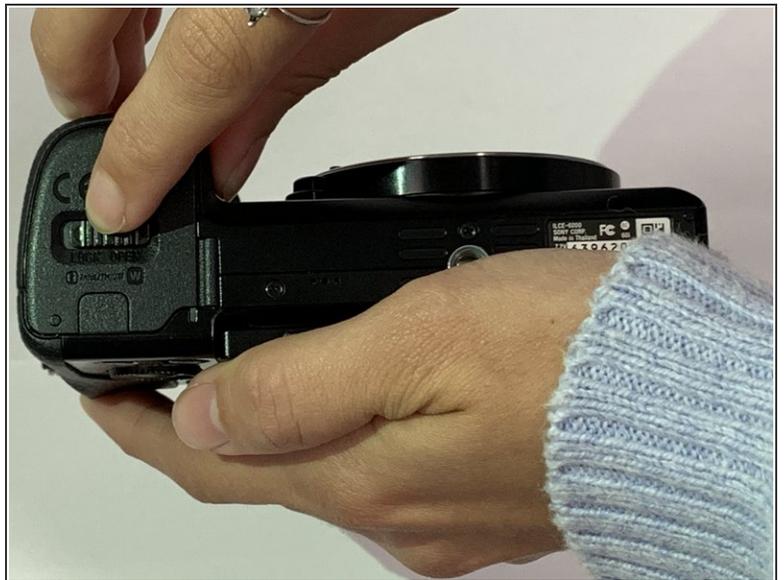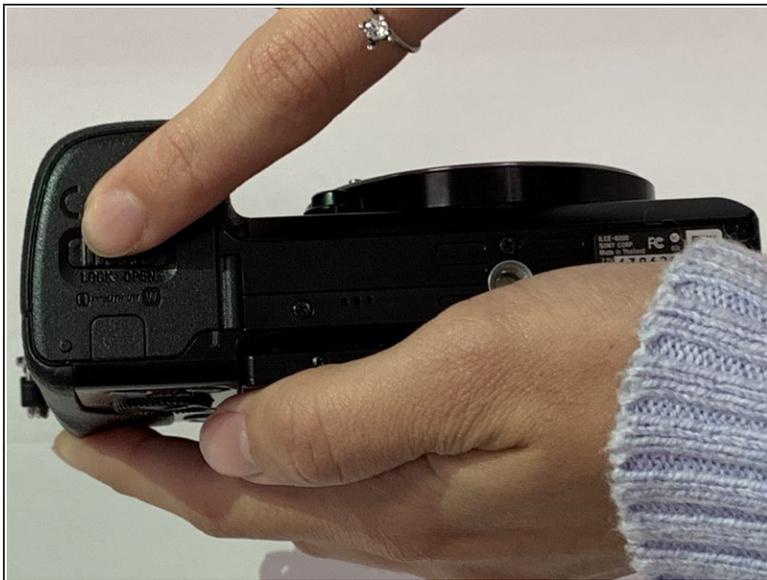

- Slide the notched locking bar on the battery compartment from *LOCK* to *OPEN*.

Step 3



- If there is a memory drive inside, push down the now raised memory drive in order to extract it.

To put the memory card back in, follow these instructions in reverse order.