



Sony α6500 Battery Replacement

This guide will assist users in removing and replacing the batter of the Sony α6500 camera.

Written By: Olivia Kavanagh



INTRODUCTION

If your camera isn't powering on, the culprit may be a [faulty battery](#). The battery must also be removed as a prerequisite in some replacement guides. This guide will provide step-by-step instructions on how to remove and replace the battery. This replacement guide requires no tools.



PARTS:

- [NP FW50 Camera Battery](#) (1)
-

Step 1 — Battery



- Verify the camera is powered off by setting the switch to OFF.

Step 2



- Flip the camera upside down.
- Slide the battery compartment lock to OPEN to unlock it.

Step 3



- Push the blue lever aside to release the battery.

Step 4



- Remove the released battery from the compartment.

To reinsert the battery, follow these instructions in reverse order.