




HP Stream x360 11 -p015wm Back Cover Replacement

How to replace a HP Stream x360 11 -p015wm back cover.

Written By: DaisyHaskell

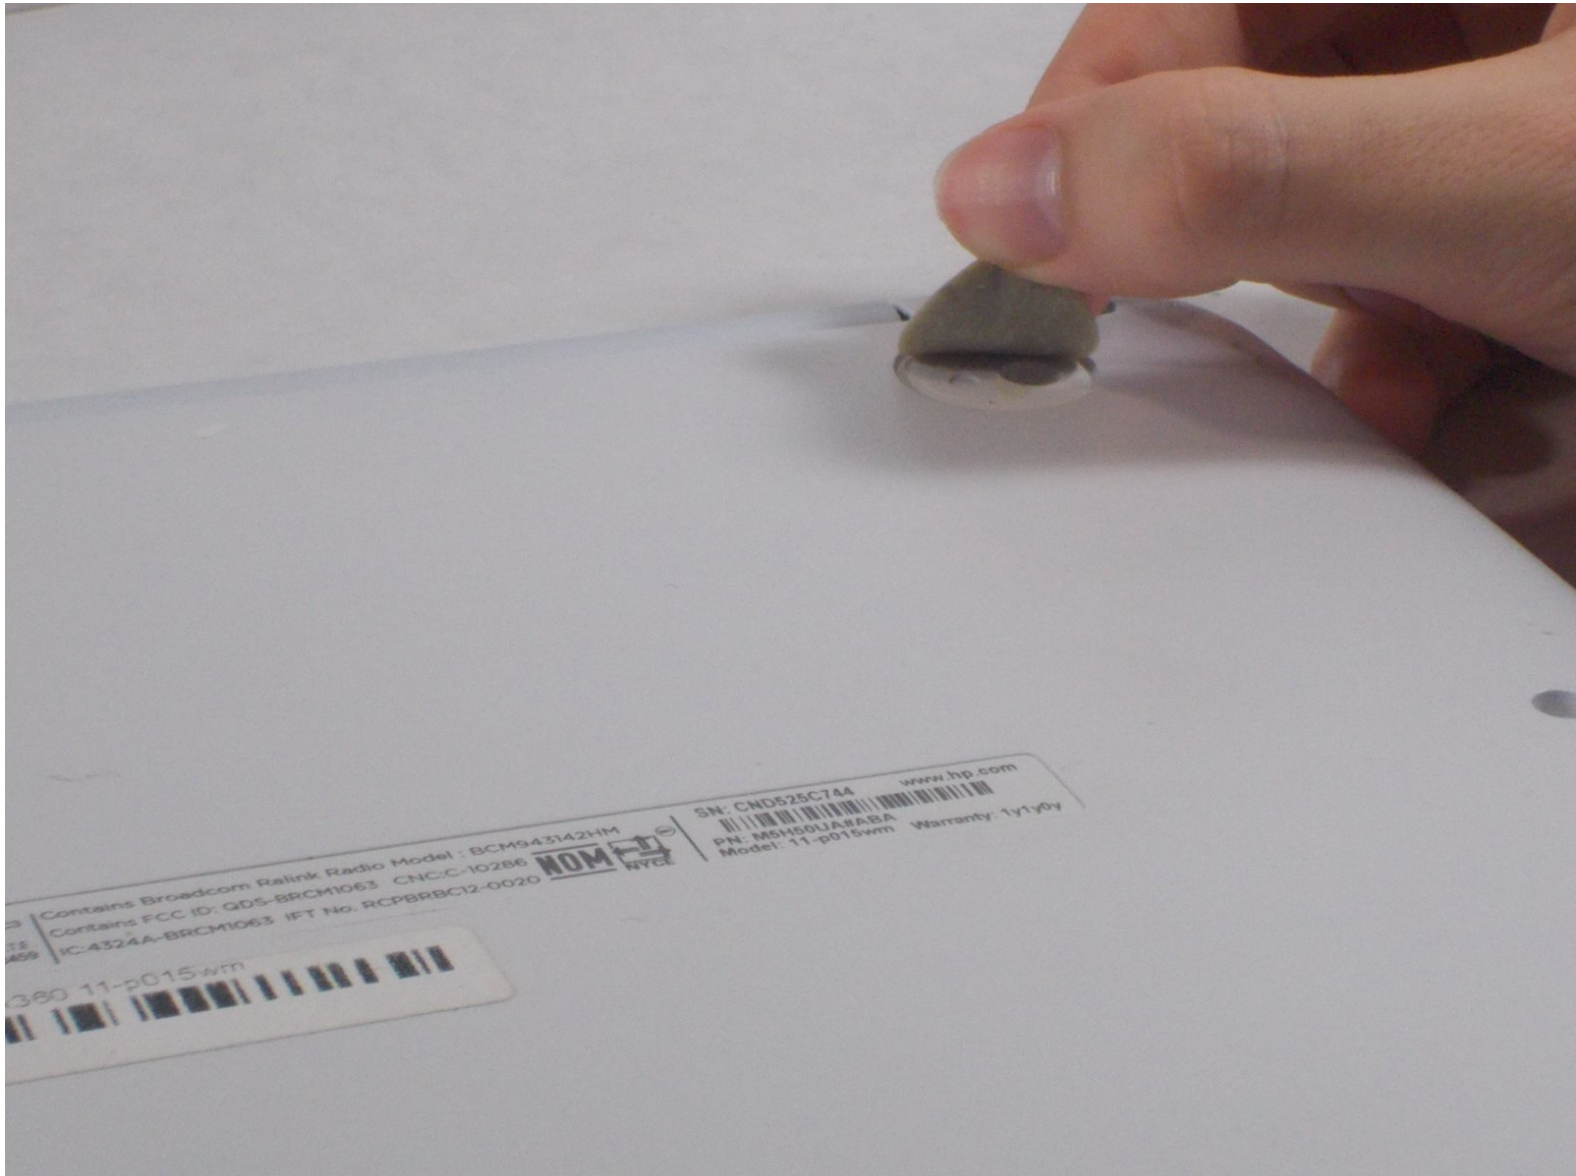

INTRODUCTION

Use this guide to replace the back cover of your HP Stream x360 11 -p015wm.

The back cover is important for protecting the internal components. A cracked or damage back cover can allow dust and moisture to damage hardware.

If the back cover is being removed to change the battery, [click this link](#). While the back cover is removed, consider using [these methods](#) to clean internal hardware.



Before beginning, ensure the device is completely off and disconnect any external power source.



TOOLS:

- [JIS #1](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover

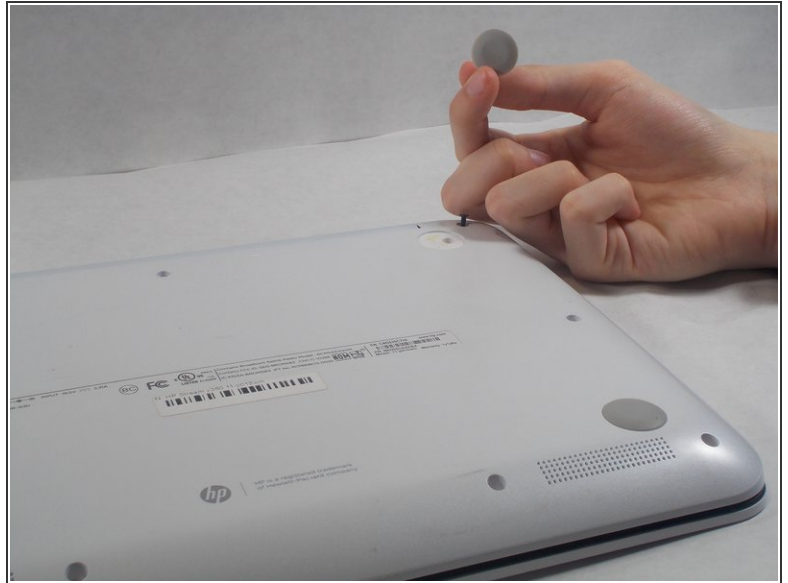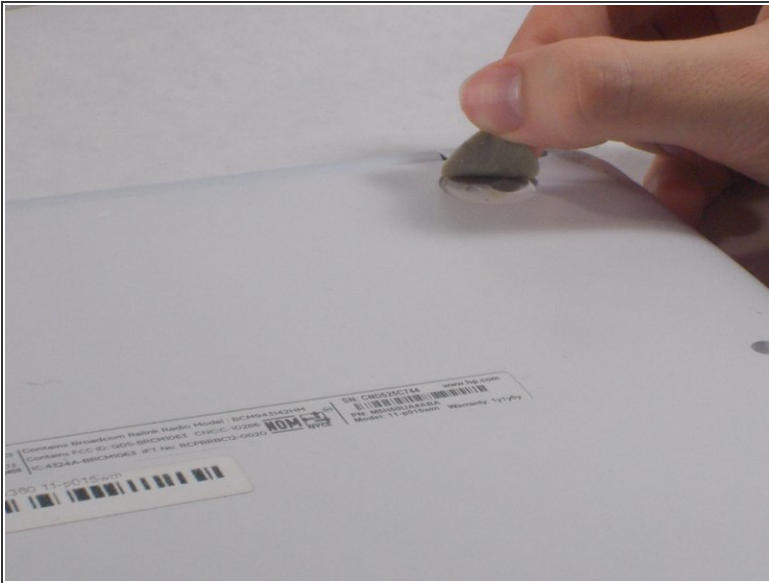

- Orient the laptop to have the back cover facing upwards.
- Remove the four rubber pads located in each corner.

Step 2



- **i** Tool required: [JIS #1 Screwdriver](#)
- Using the screwdriver, remove all of the exposed screws.


Step 3



 Tool required: [iFixit opening tool](#)

- Open the laptop and orient the keyboard facing upward.
- Slowly wedge the opening tool into the gap between the keyboard and the back cover.
- After loosening the back cover, close the laptop and orient the back cover facing upward. Open the cover.

Step 4

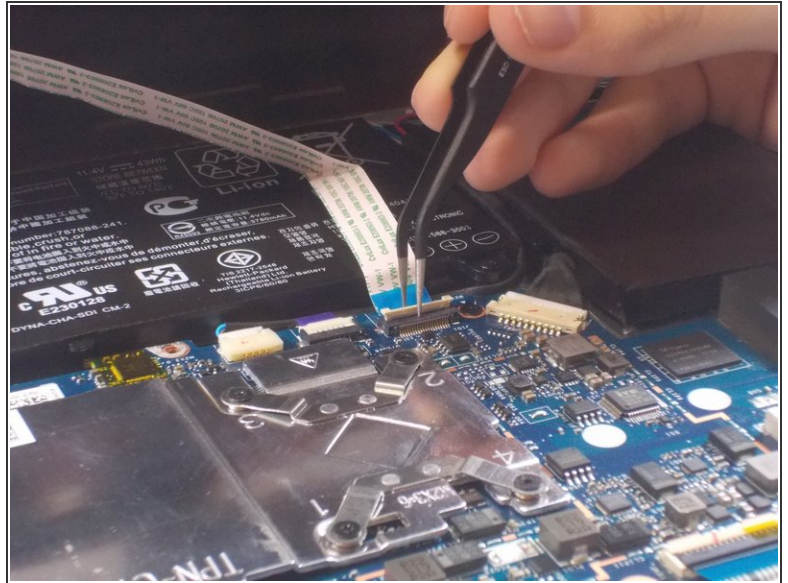

✦ This is a good time to clean any accumulated dust or debris. Use [this link](#) on tips for cleaning.

ⓘ Tool required: [Tweezers](#)

- Carefully use tweezers to remove the audio jack connector from the motherboard.

To reassemble your device, follow these instructions in reverse order.