




# HP 15-ay052nr Bottom Cover Replacement

How to replace a HP 15-ay052nr bottom cover.

Written By: Morgan Distler

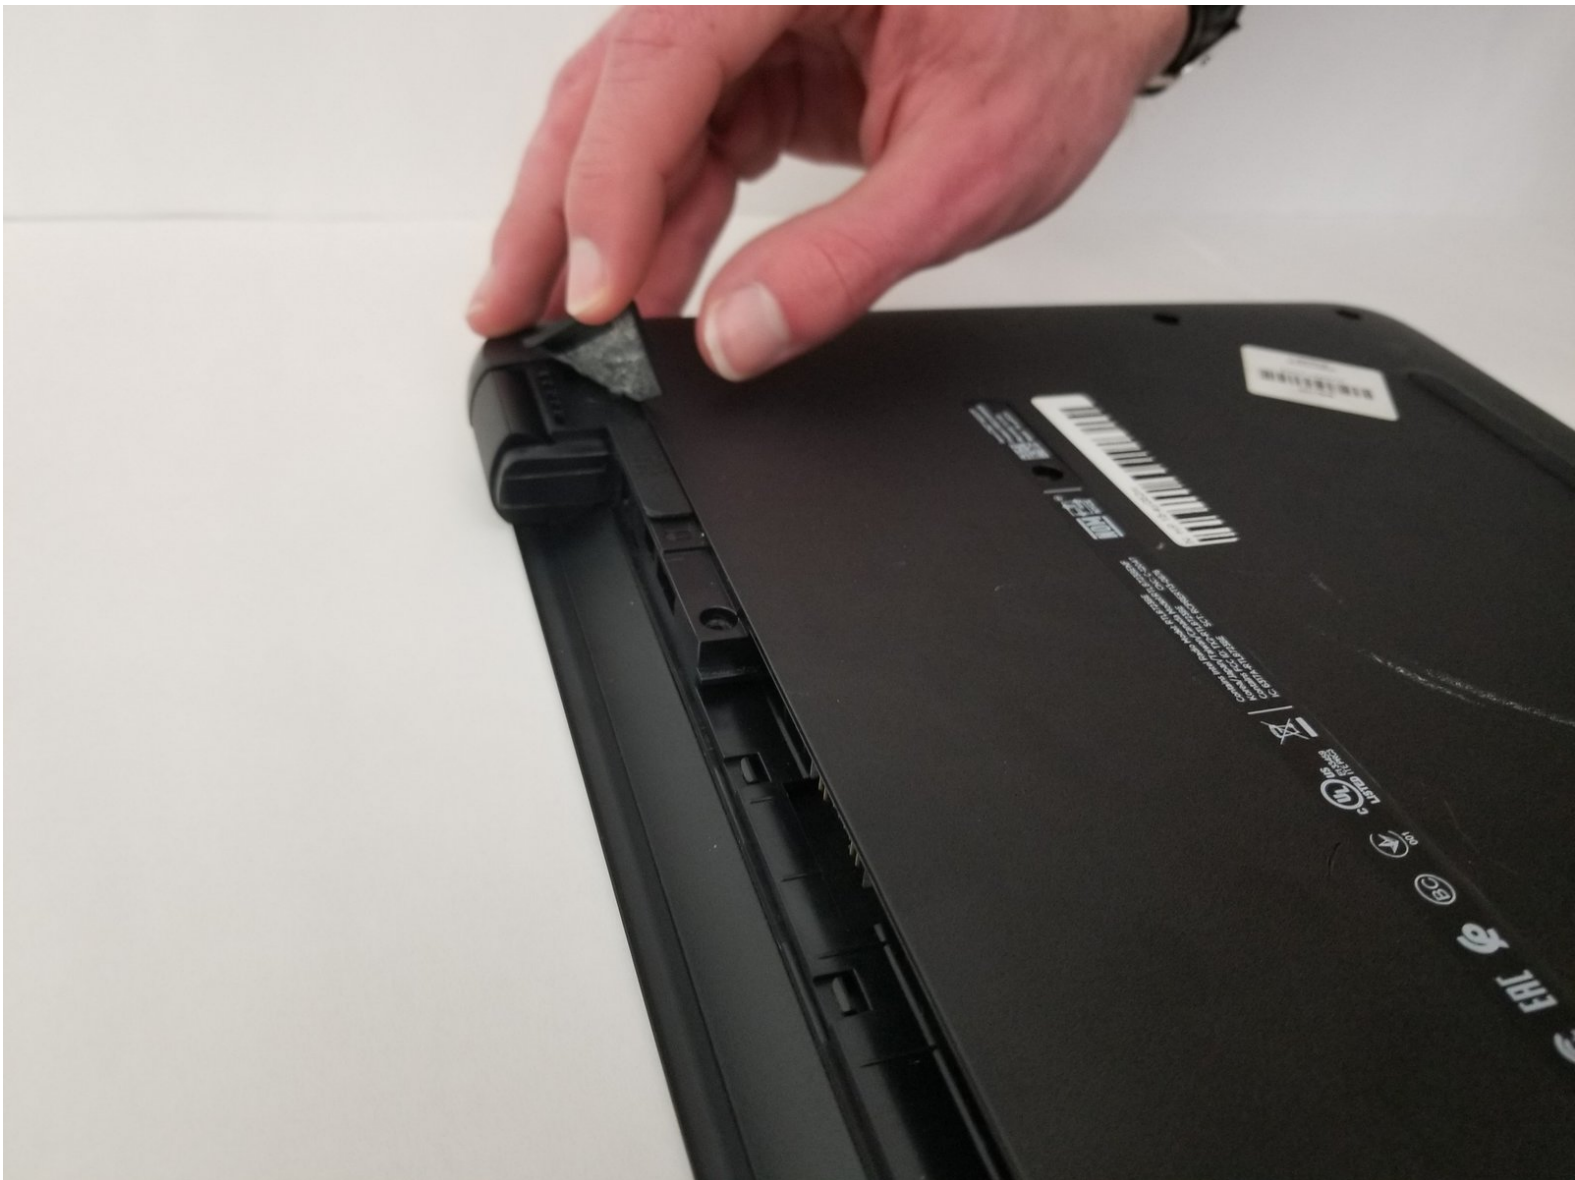

---

# INTRODUCTION

Basic disassembly to access most systems that need to be replaced.



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [JIS #0 Screwdriver](#) (1)
-

## Step 1 — Battery



**⚠** To protect the device and yourself, make sure your device is completely powered down before disassembling. Disconnect all external devices before starting any tear down process.

- Turn the device and lay it upside-down on a flat surface so the base of the computer is facing upwards.

## Step 2




- Identify the two (2) sliding lock mechanisms on either side of the battery and slide them towards the center.
- i** The sliders are located at the back of the device on the side where the display hinges are.
- i** The slider closest to the optical drive (CD reader) clicks open but the opposite slider has a spring.

## Step 3



- Pull the battery slightly up and out to remove.
- ⓘ If the battery doesn't pop out, the sliders weren't pushed in far enough. Push the sliders towards the center until the battery pops out.

## Step 4 — Bottom Cover

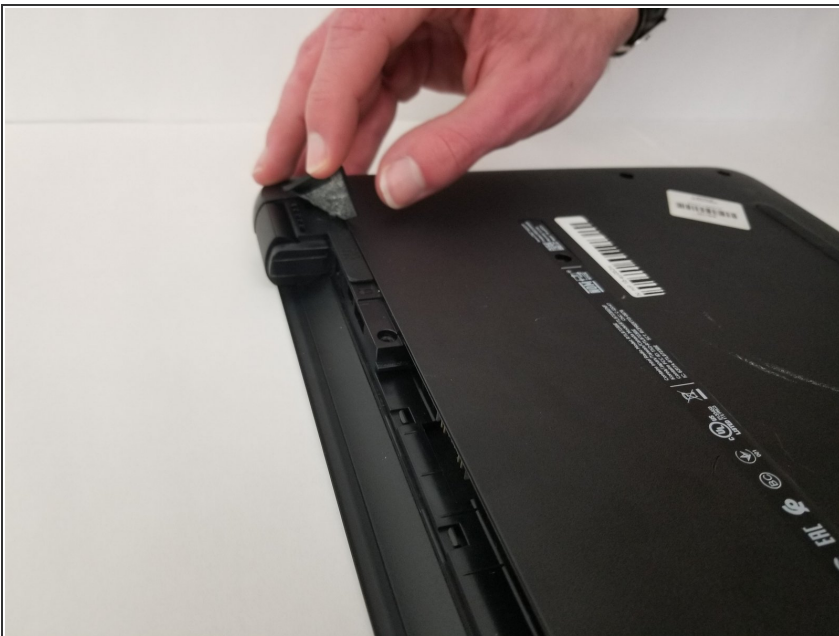

- Remove the rubber feet on the bottom of the device to access all the screws.
- ⓘ There are two rubber feet, one on each side of the battery compartment.



## Step 5



- Unscrew the twelve 9 mm JIS #0 screws on the back of the device.
- Gently remove the optical drive (CD reader) to more easily separate the base.

## Step 6



- Unclip the keyboard surface from the base using an iFixit opening tool around the entire border.

## Step 7



- Separate the base of the computer from the component assembly.
- ⓘ The optical drive can be placed in the base where it corresponds to prevent misplacing it.

To reassemble your device, follow these instructions in reverse order.