




Acer Aspire 5741-5698 WIFI Chipset Replacement

Replacing the WIFI Chip on an Acer Aspire 5741-5698.

Written By: Alex Imbery

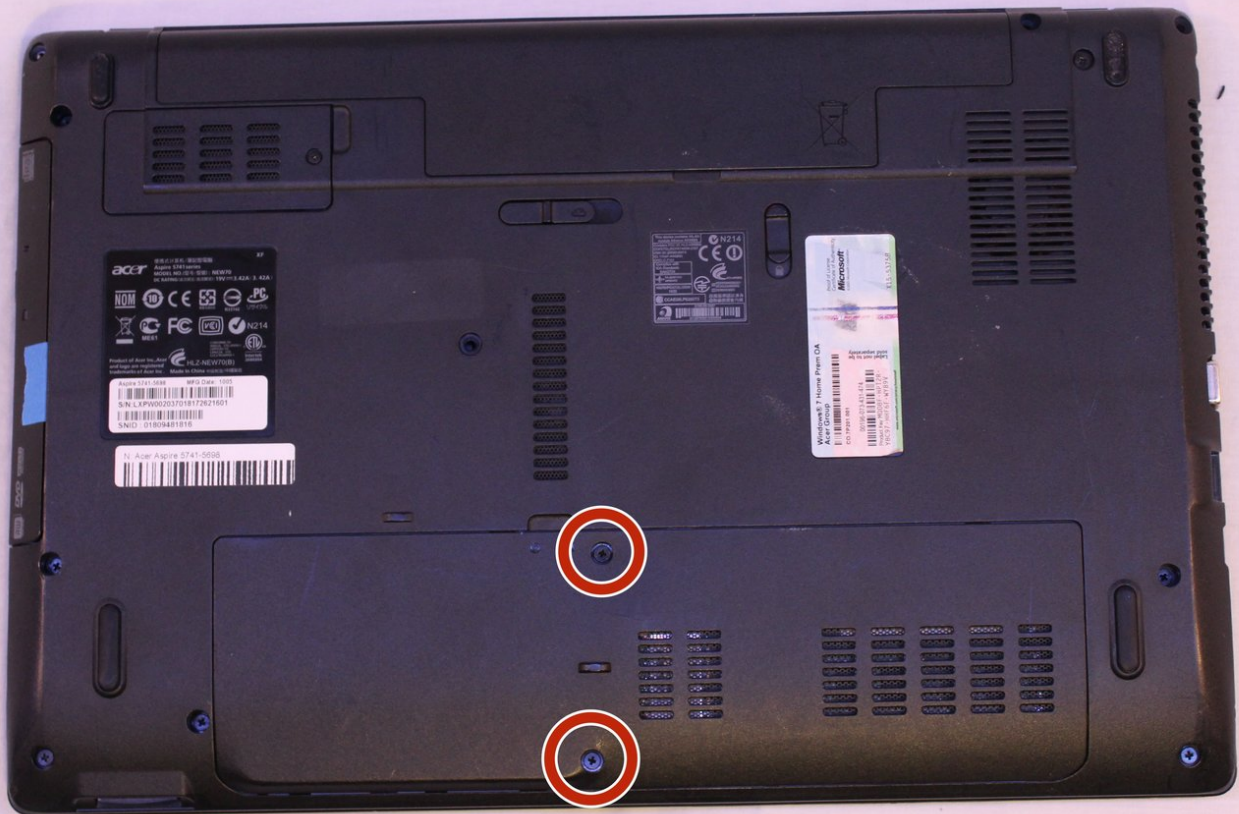




TOOLS:

- [JIS #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — WIFI Chipset

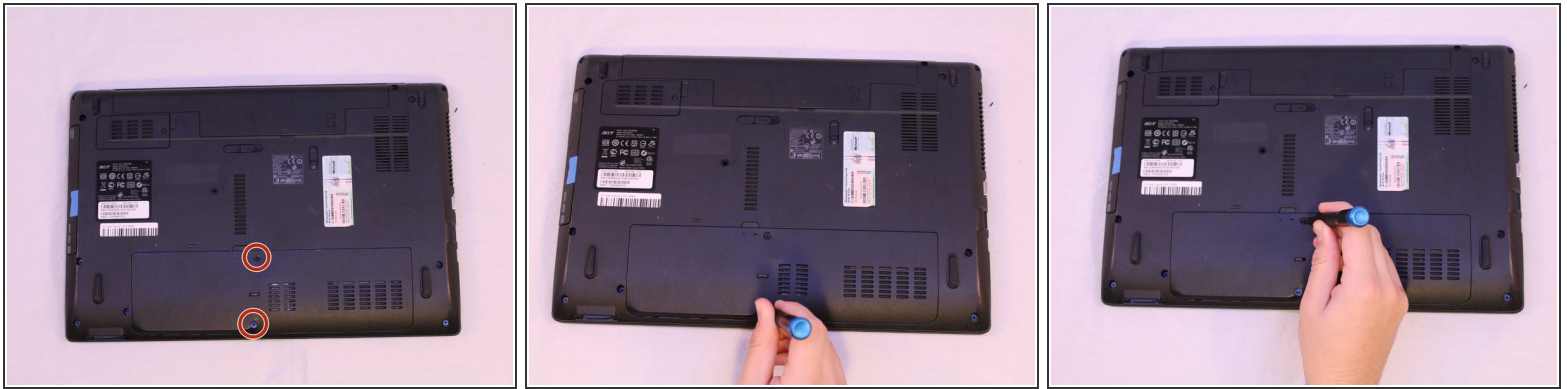


- Begin on the back side of your laptop, locate these two screws then remove them with the JIS #0 driver bit.

Step 2




- Once screws are removed you can pry up the panel to reveal some of your computers components.

Step 3

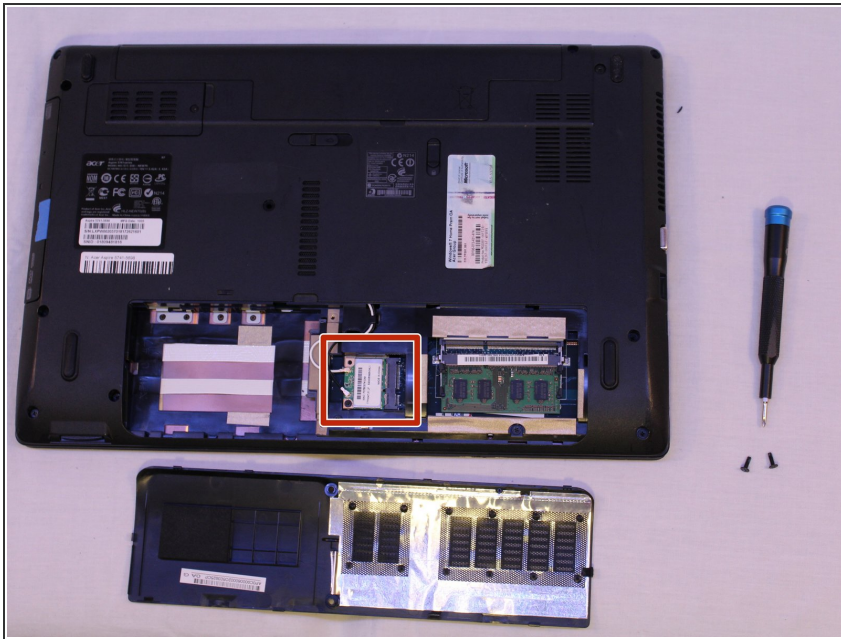



- Locate your computers WIFI chip; it will have black and white wires attached to it.

Step 4

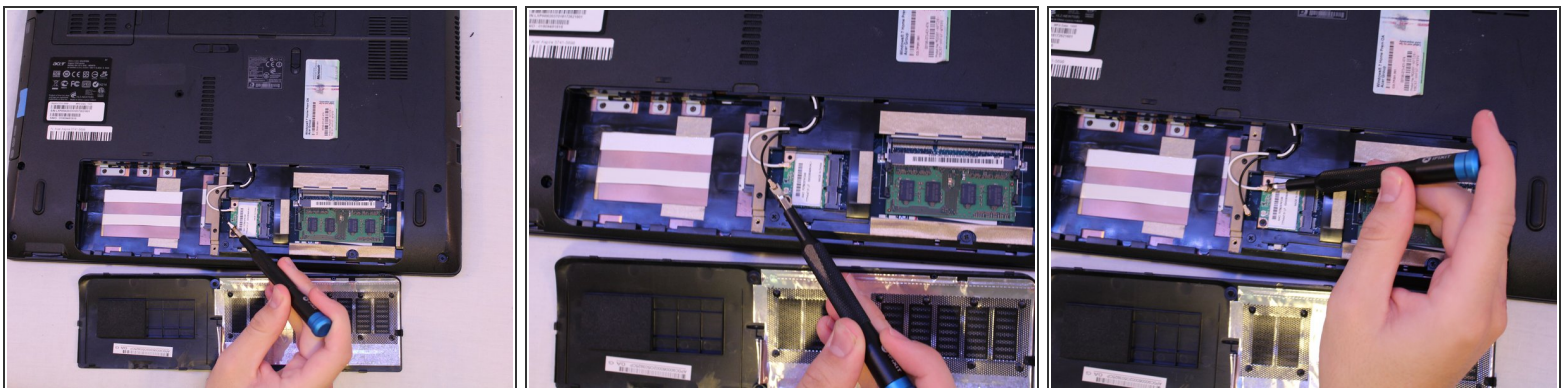



- Using your fingers or a spudger, remove the black and white cables from the chip, at the connector.

Step 5

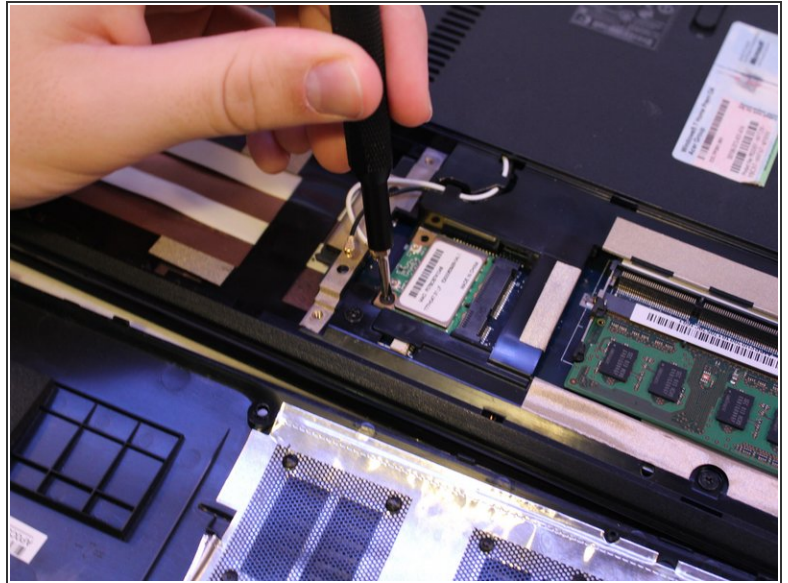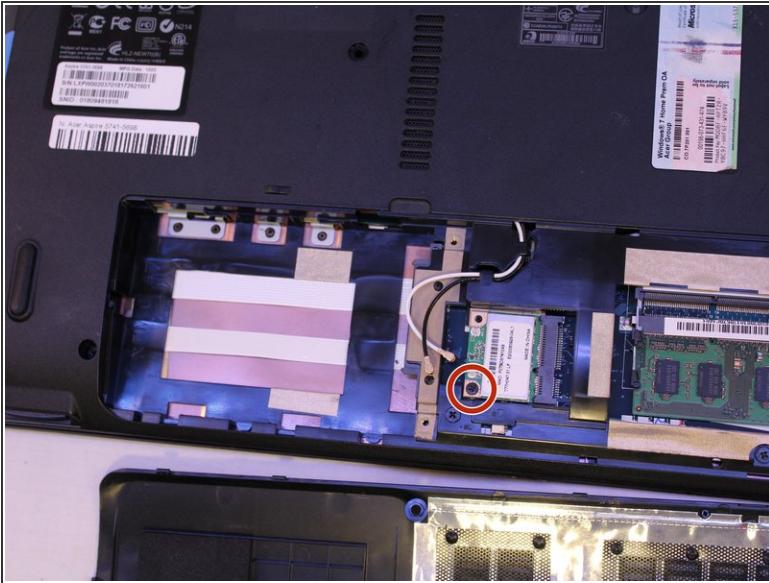

- Using the same JIS#0 screw driver remove the single small 1/4 inch long screw.

Step 6

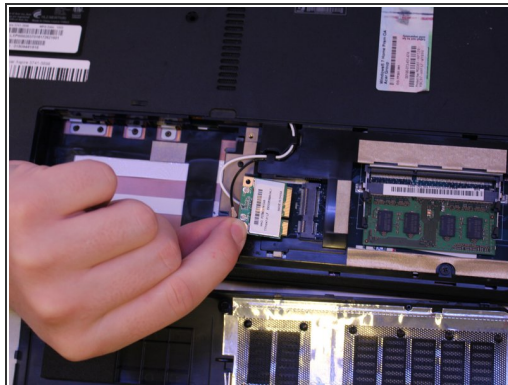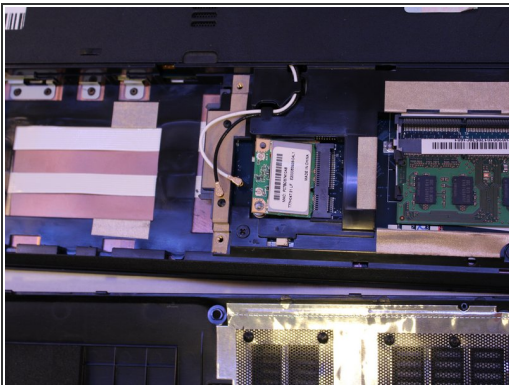

- Now that the chip is released just gently remove it from its connector seat.

To reassemble your device, follow these instructions in reverse order.