



Acer Aspire 4741G-332G32Mn Screen Replacement

This guide will help take apart the screen in your Acer Aspire 4741G-332G32Mn.

Written By: kristen



INTRODUCTION

If your Acer Aspire monitor (model 4741G-332G32Mn) isn't producing a clear picture and instead outputs distorted images or intermittent/dead pixels, use this guide to replace the screen.

The screen transmits visual data to users through thousands of small pixels. A faulty screen will transmit distorted or unclear images or no images at all.

Before using this guide, inspect the screen for any debris that may be interfering with screen quality. Typically, a small buildup of dust can be removed using an ESD-safe brush or small, damp towel. Be sure to completely shut down your laptop on and off at least two times to confirm that the faulty hardware is the screen itself.


Before beginning, make sure to power off your laptop completely and disconnect the device from any external power source(s) or monitors if possible.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Screen

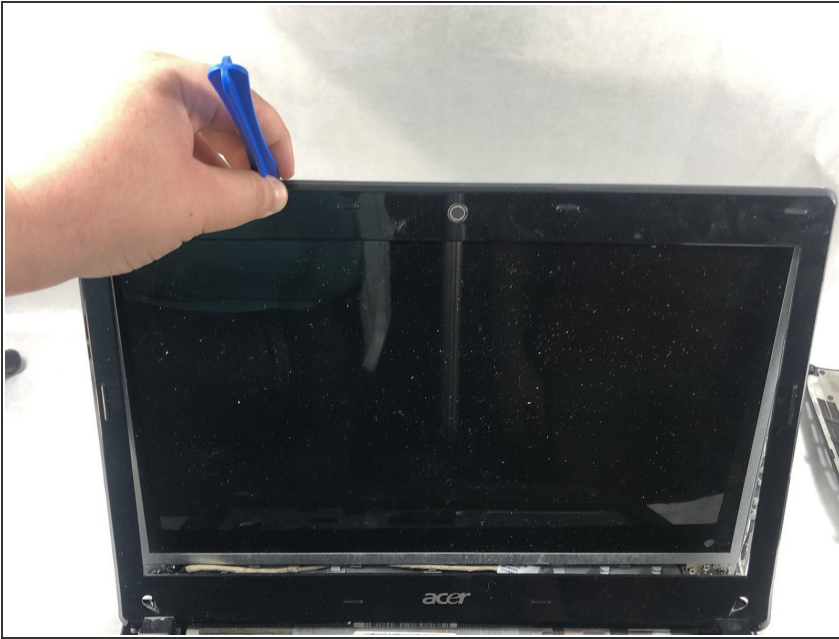


- Push the blue opening tool between the edge of the computer and the screen. Slide the tool around the perimeter of the screen.

Step 2




- Pop the two circle screw caps off and remove the two screws using a Phillips #0 screwdriver.
- Remove the computer's frame.

Step 3

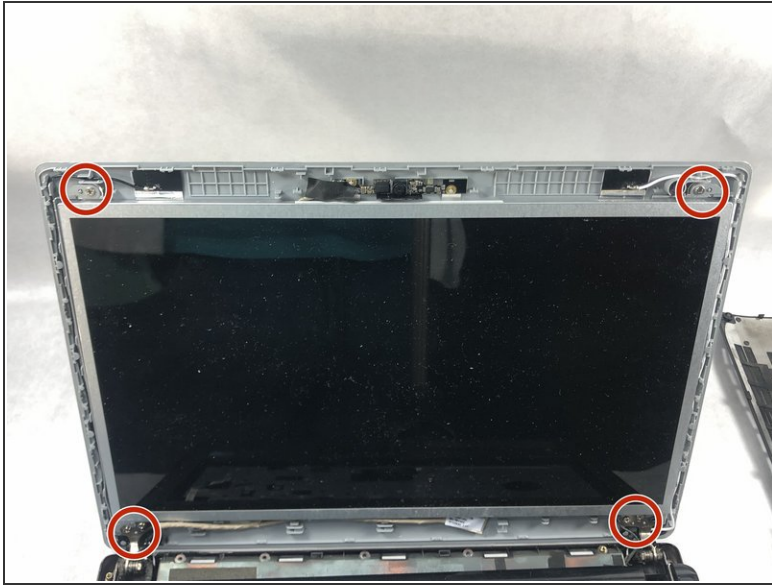

- Remove the six screws from the four corners of the screen using a Phillips #0 screwdriver.

Step 4

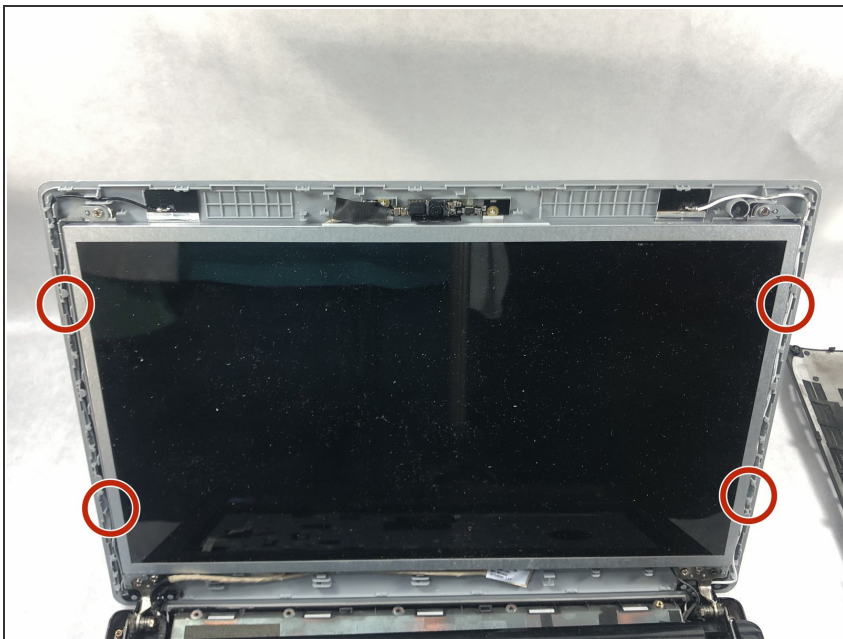

- Remove the screws from along the sides of the screen (two on each side) using the Phillips #0 screwdriver.
- Remove the screen adapter from the screen.
- Remove the screen from the rest of the laptop.

To reassemble your device, follow these instructions in reverse order.