


Sony Vaio VPCEG26FX Back Panel Replacement

This step-by-step guide will lead you through...

Written By: Sara Alfaro

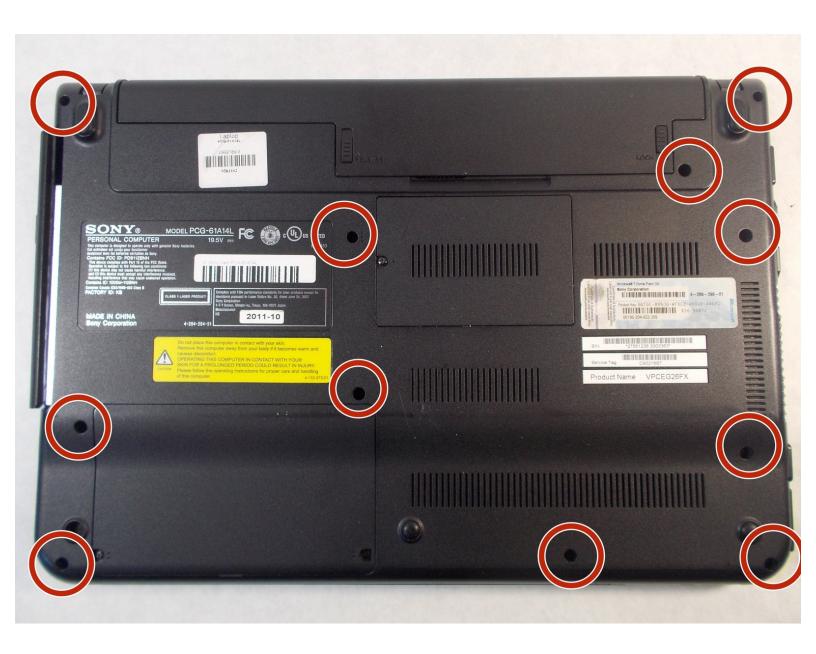

INTRODUCTION

This step-by-step guide will lead you through the process of removing the back panel of a Sony Vaio VPCEG26FX Laptop. The back panel would need to be replaced if cracked or broken. Removing the back panel requires very little force should be needed to remove the back panel. If difficult to remove, ensure that all the screws have been removed.



TOOLS:

- JIS #0 Screwdriver (1)
- Spudger (1)
- Magnetic Project Mat (1)

Step 1 — Battery



 Flip the laptop so the bottom is facing up with the model number visible.

Step 2



Slide the lock switch down until you hear a click to unlock the battery.





 Slide the release slider up and simultaneously push the battery upwards away from the device until it falls out of place.

Step 4





Remove the battery from the battery compartment.

Step 5 — Hard Drive



- Loosen the two (7mm) screws that hold the hard drive panel in place with a JIS #0 screwdriver.
- (i) These screws cannot be removed.

Step 6



 Remove the plastic and unscrew the screw on the hard drive using the JIS #0 screwdriver.



 Push the hard drive towards the optical reader to unlock it.

Step 8



Remove the hard drive from the device.

Step 9 — RAM



After you remove the battery, there
is a small rectangular panel
underneath where the battery was
housed.

Step 10



 Remove the single screw holding the panel in place using the JIS #0 screwdriver.







- Remove the green circuit board by dislodging the circuit it is attached to.
- Unhook it and remove it from the device.

Step 12 — Back Panel



 Remove the remaining eleven 7mm screws from back panel using the JIS #0 screwdriver.





Remove the back panel from the device.

To reassemble your device, follow these instructions in reverse order.