



# HP ProBook 5330m Battery Cover Replacement

Remove and replace the battery cover on the lower case of an HP ProBook 5330m.

Written By: Taylor Dixon



## INTRODUCTION

This guide will show you how to remove and replace the battery cover on the lower case of an HP ProBook 5330m. Removing the battery cover gives you access to the battery, the fan, and some other internal parts.

## Step 1 — Battery Cover



- The battery cover is locked in place by a switch on the bottom of the laptop.
- To release the lock and open the battery cover, slide the switch in the direction of the arrow next to the battery icon.
- ⓘ As you slide the switch, the battery cover should pop up.

## Step 2



- Lift up and remove the battery cover.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [HP ProBook](#) answers community for troubleshooting help.