



# Samsung SC MX-20 Hand Strap Replacement

This guide will teach someone on how to replace the hand strap on a Samsung SC MX-20.

Written By: Iyiola kofo-abayomi



---

## INTRODUCTION


When you use your camcorder to record video, you'll find that the hand strap is one of the most useful components to stabilize your image/video. The hand strap in your device is likely to wear out and become unusable. If you're looking to replace a worn out or damaged hand strap, follow the steps in this guide.



### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Hand Strap

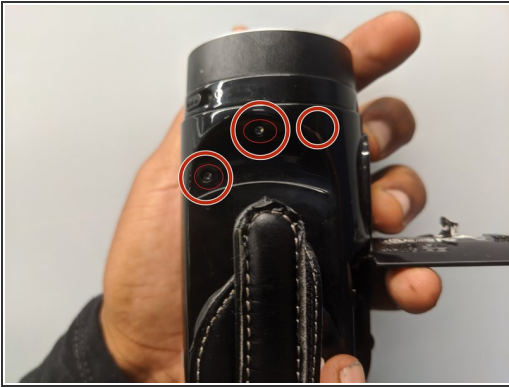


- Remove all eight screws using the Phillips #000 screwdriver.

## Step 2

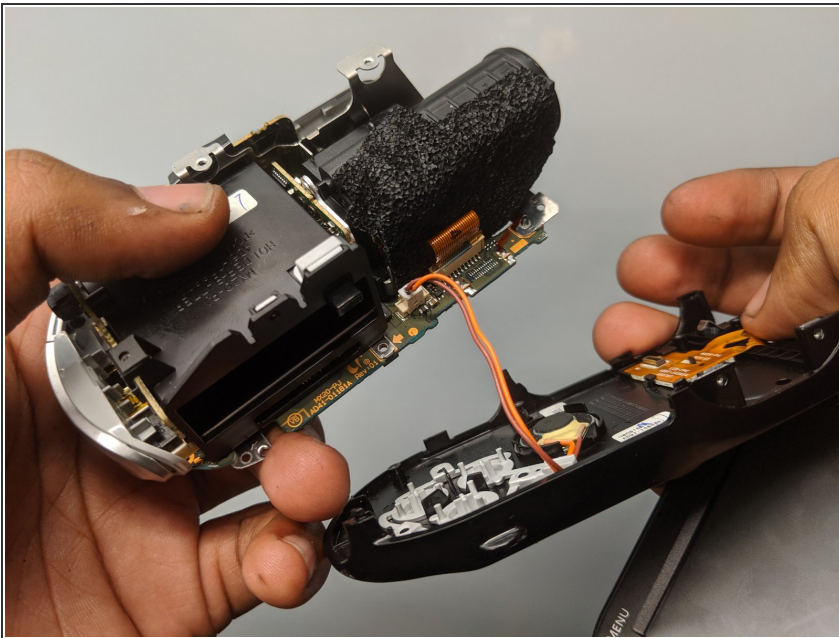

- Pull apart the sides of the camera once the screws are removed.

## Step 3

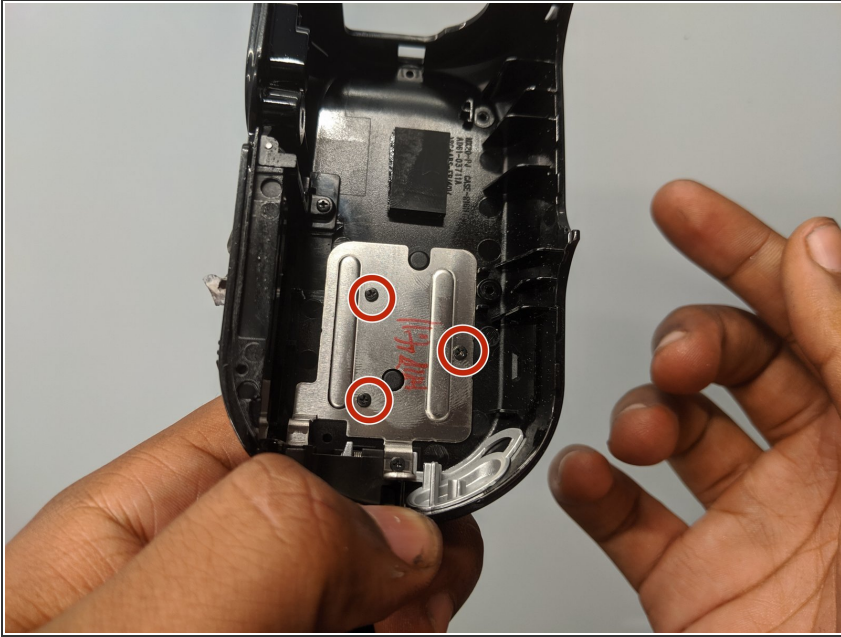

- Remove the three screws using the Phillips #000 screwdriver.


## Step 4



- Remove the three screws using the Phillips #000 screwdriver.





## Step 5

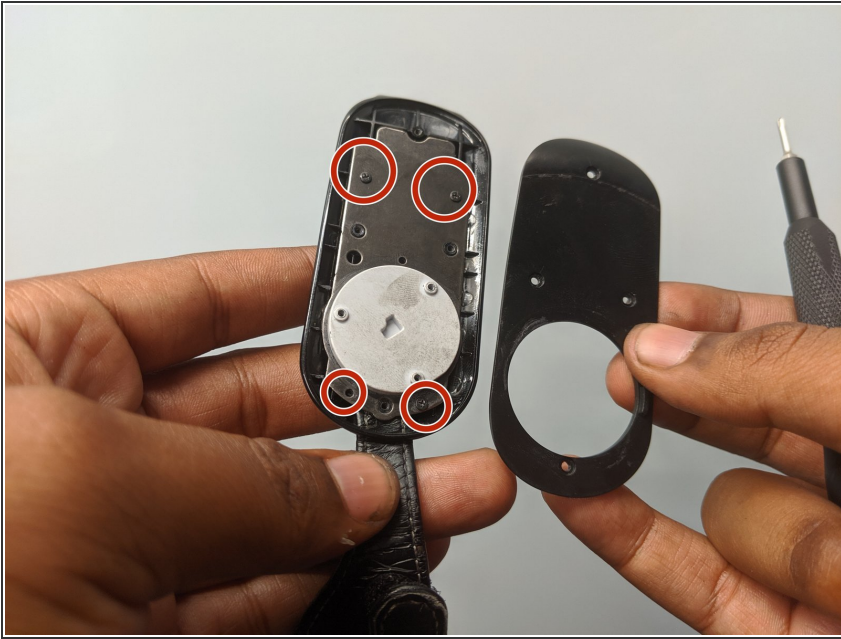

- Remove the four screws using a Phillips #000 screwdriver.

## Step 6

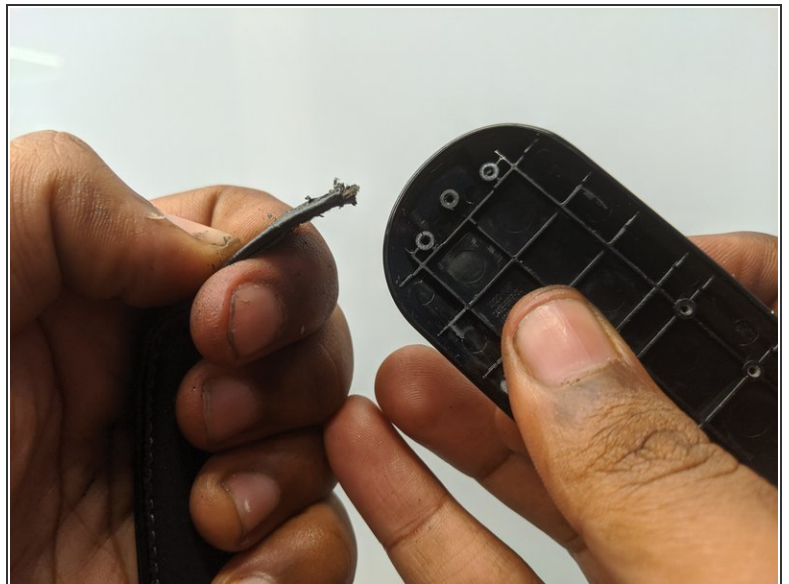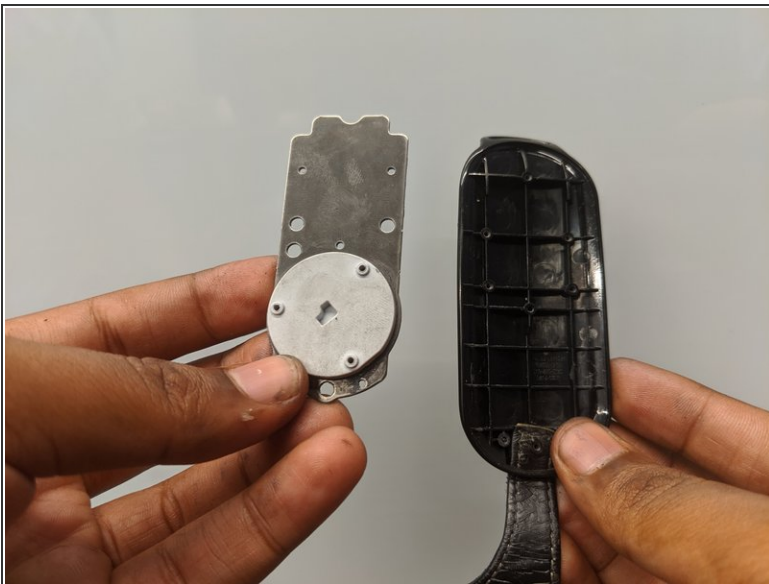

- Remove the hand strap from the device.

To reassemble your device, follow these instructions in reverse order.