


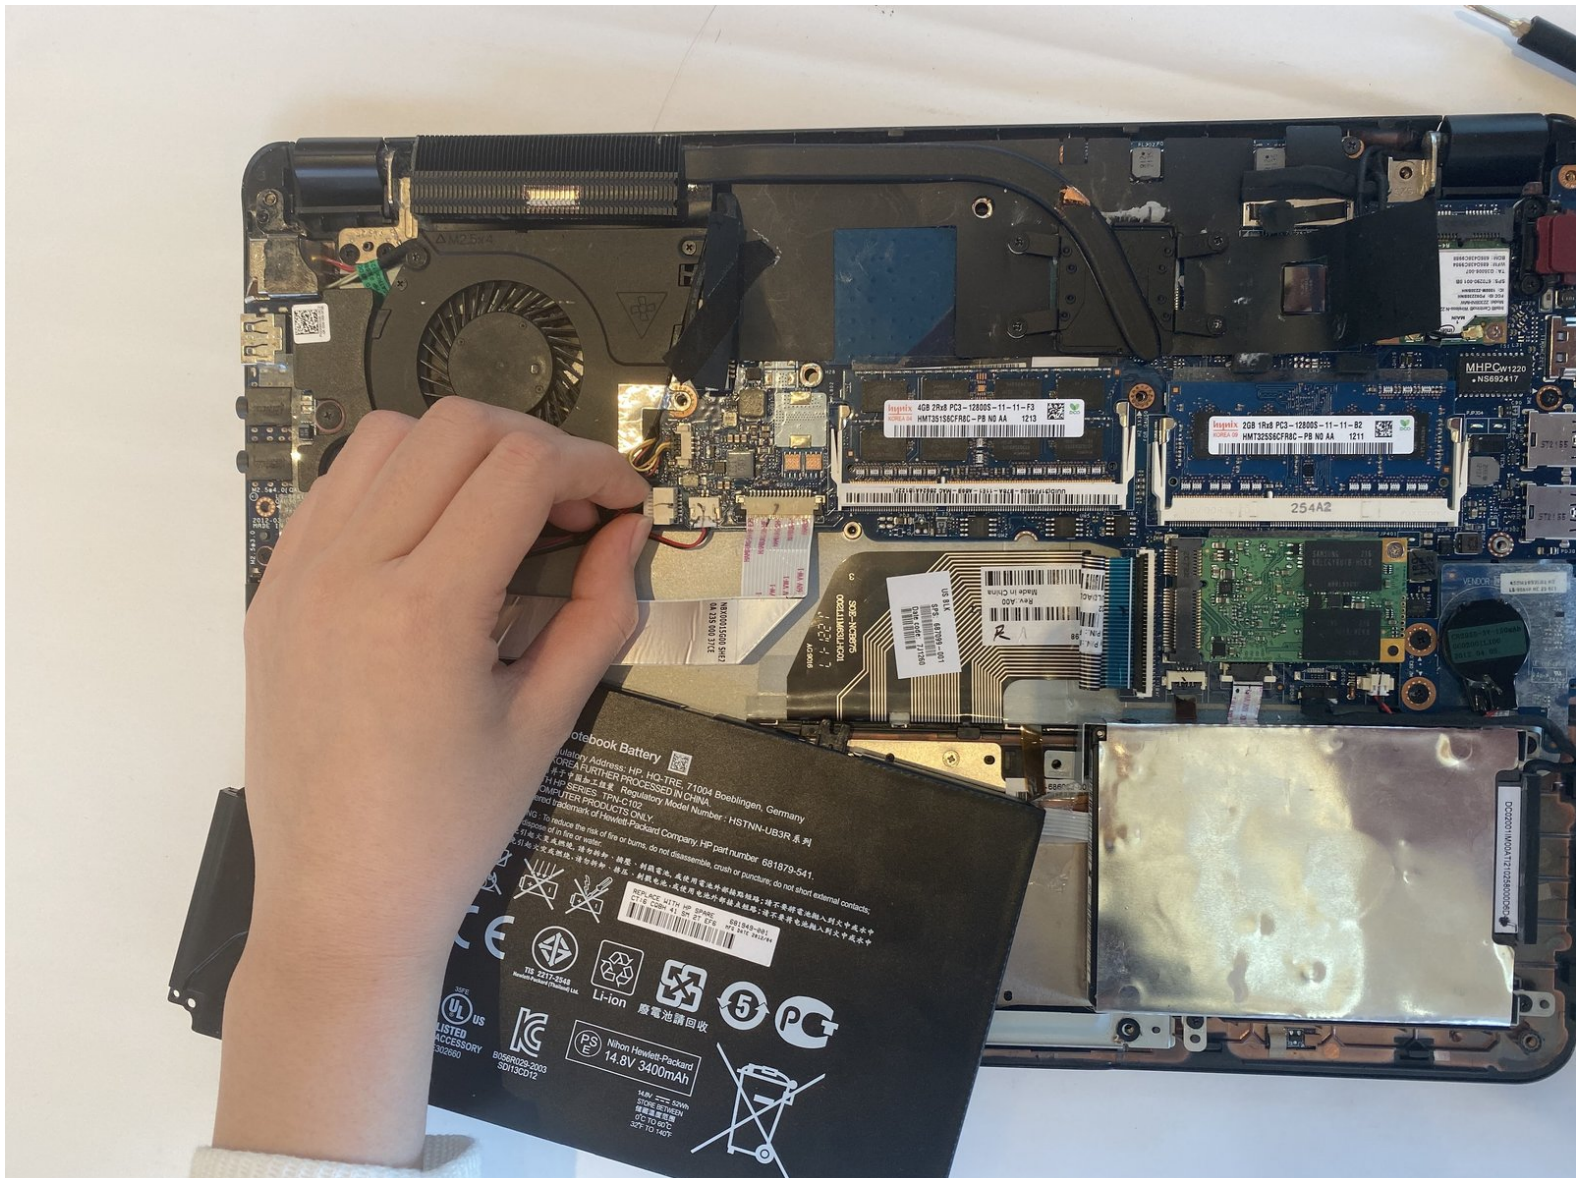

# HP Envy Ultrabook 4-1043cl Battery Replacement

Use this guide to replace the battery in your HP Envy Ultrabook 4-1043cl.

Written By: Shen Zhao



## INTRODUCTION

This guide is used to help you replace a battery for the HP Envy Ultrabook 4-1043cl. It can be the time to change the battery when the battery no longer charges, when the laptop shuts down unexpectedly, or when the laptop can only work for a short time period. This guide provides detailed step by step instructions to ensure your successful replacement. You may need an iFixit PRO TECH TOOLKIT to remove the screws and unwrap the bottom enclosure. Before replacing the battery, make sure the charger is DISCONNECTED and the laptop is shut down for safety reasons. If the battery is swollen, pay attention and be careful to avoid potential explosion. Meanwhile, it is highly recommended to use different containers to place the removed screws from different parts in case you forget where some of the screws belong to.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Flip the laptop over so the bottom is facing you.


## Step 2




- Remove twelve 7.5 mm screws by using the Phillips #00 screwdriver.





## Step 3

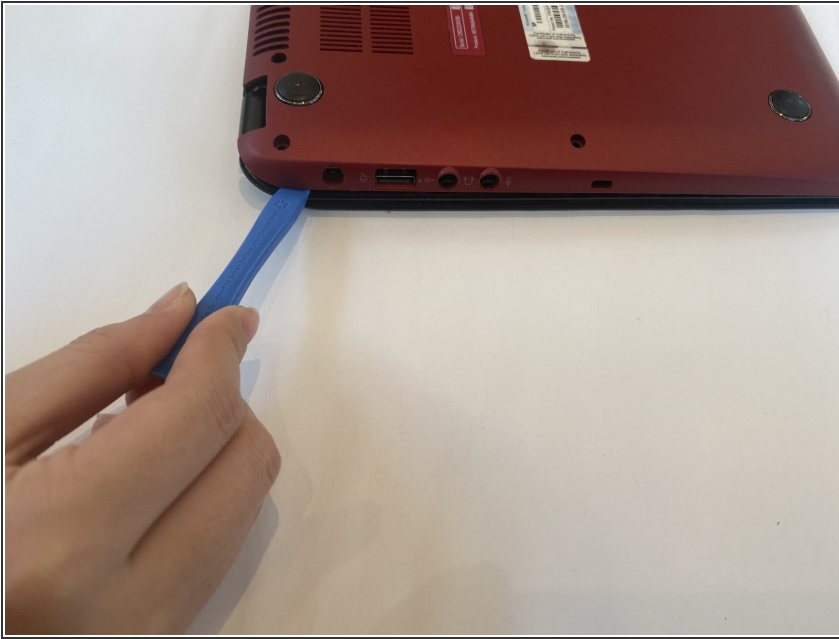

- Use plastic opening tool to remove the back cover.



 You might want to remove it slowly and gently because the back cover is very thin and fragile.

## Step 4

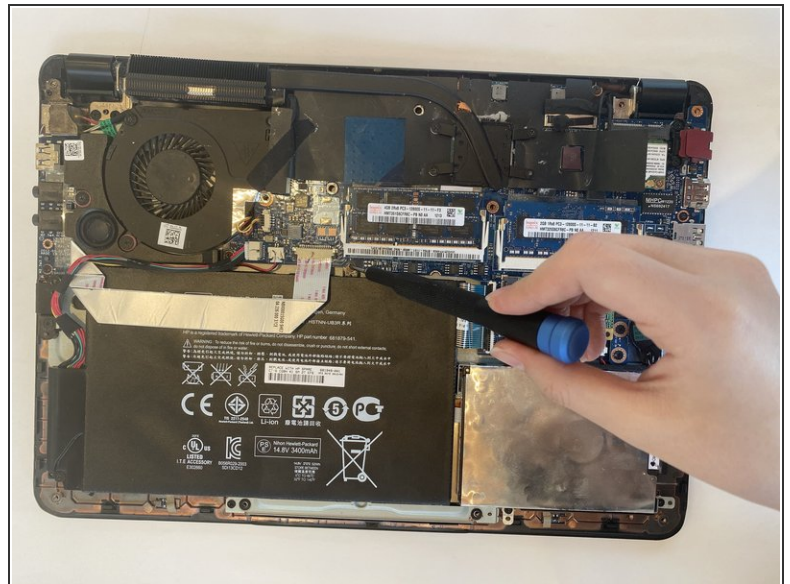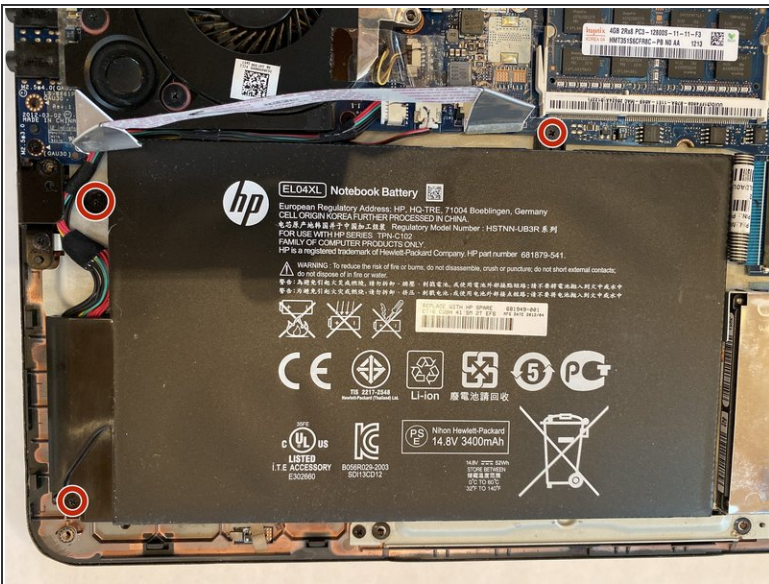

- Remove three 4.2mm screws by using the Phillips #00 screwdriver.

## Step 5

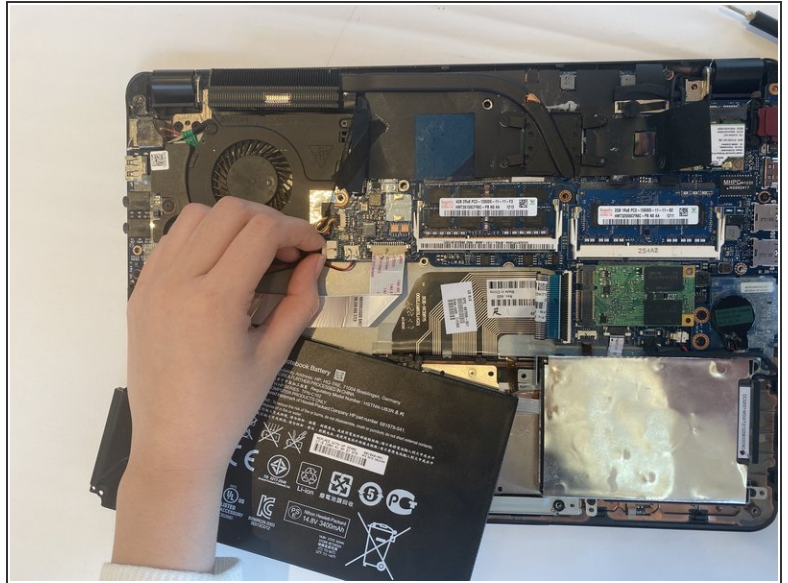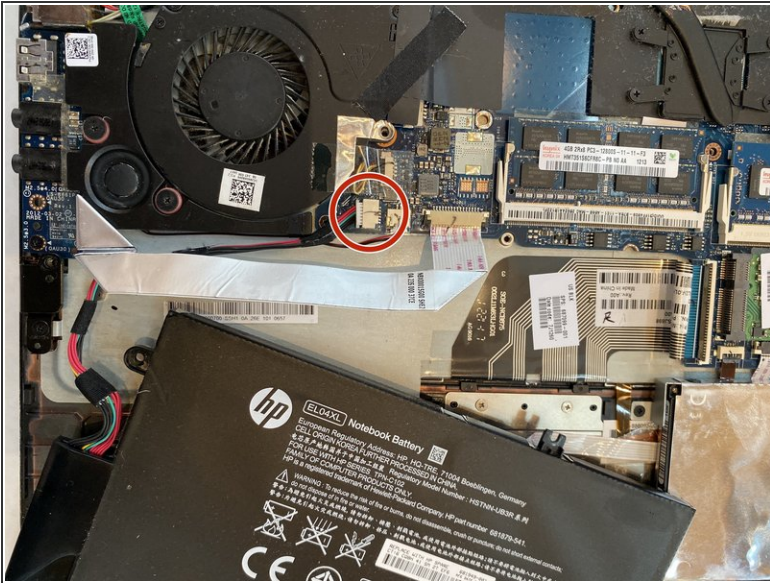

- Disconnect the battery cable from the motherboard and remove the battery from the device.