




# HP Chromebook 14-ca061dx Daughterboard Replacement

How to replace the daughterboard in the HP Chromebook 14-ca061dx.

Written By: Jean Arevalo

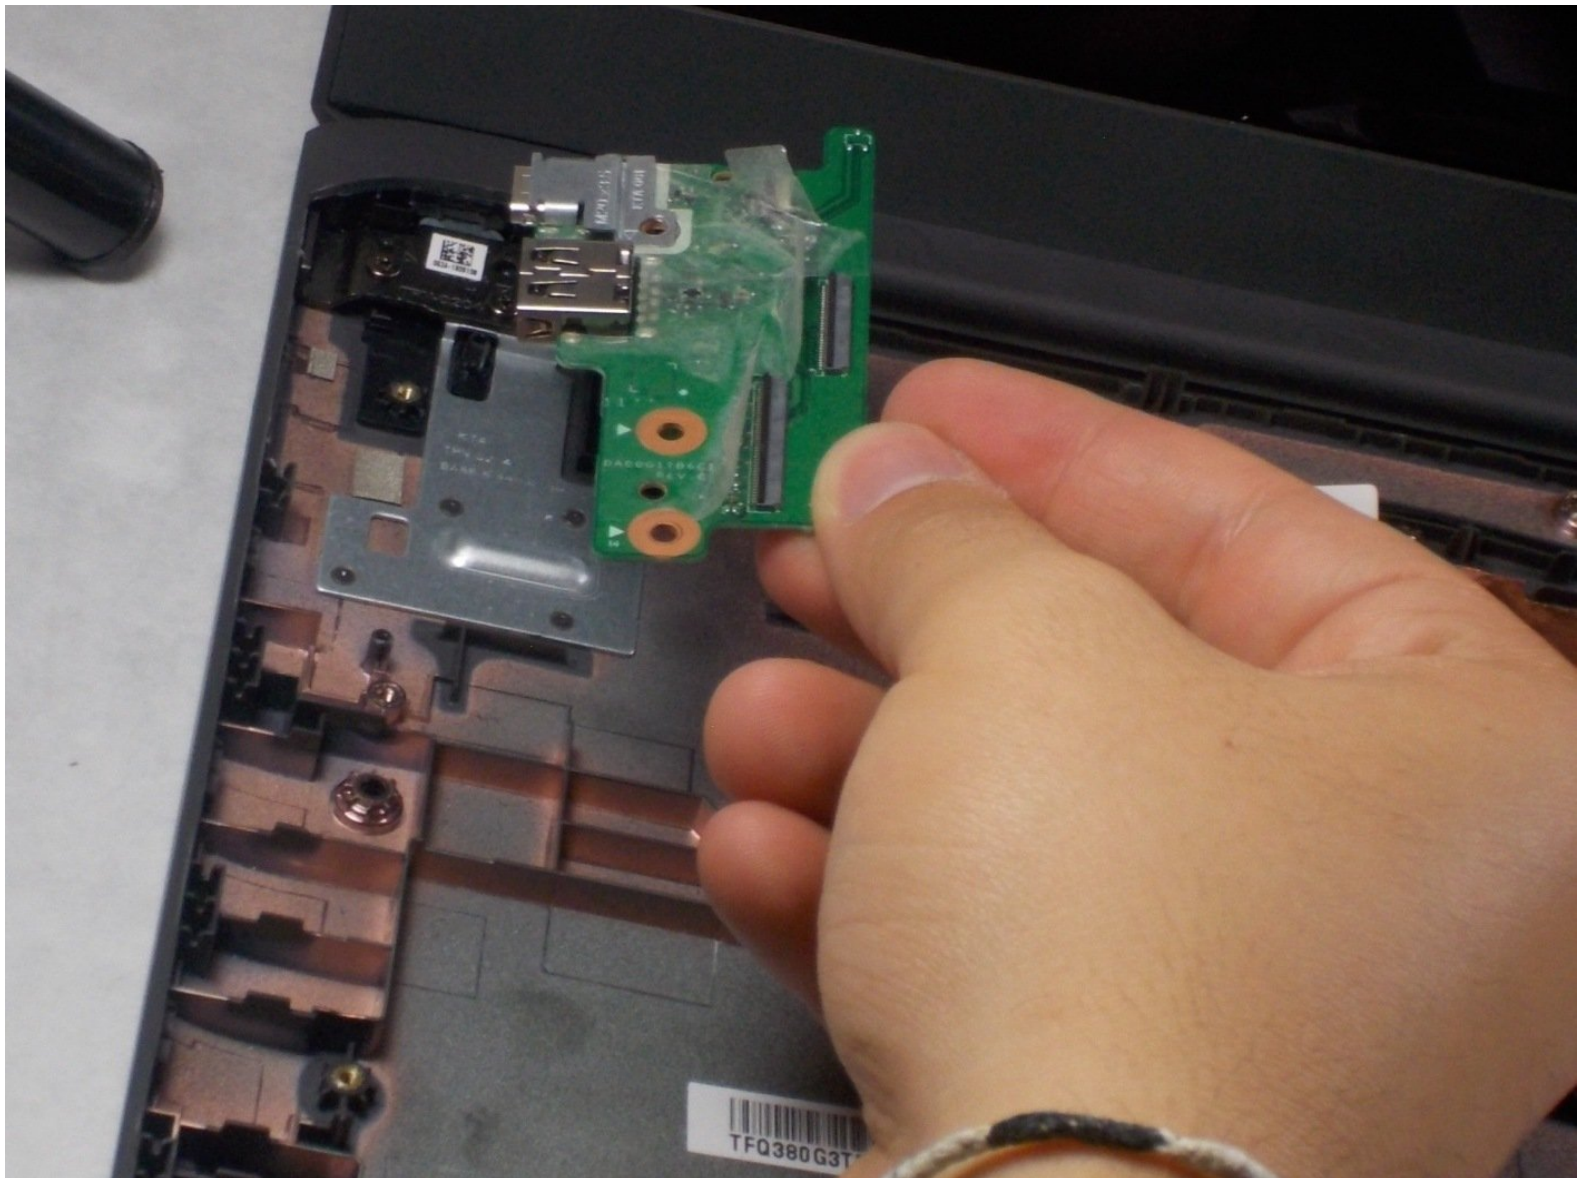

## INTRODUCTION


Follow this guide if the USB-A or USB-C port on the left side of the HP Chromebook 14-ca061dx isn't functioning and you have decided to replace the ports. The part that needs to be replaced is the daughterboard. To do this follow this guide and be careful while removing the parts.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard

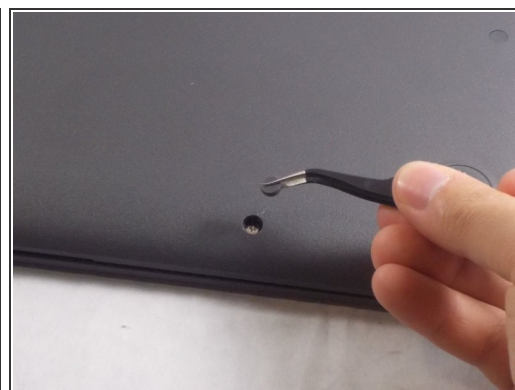

- Flip the Chromebook to the underside with the hinge at the top.
- Remove the seven, small rubber stoppers using angled tweezers.


## Step 2

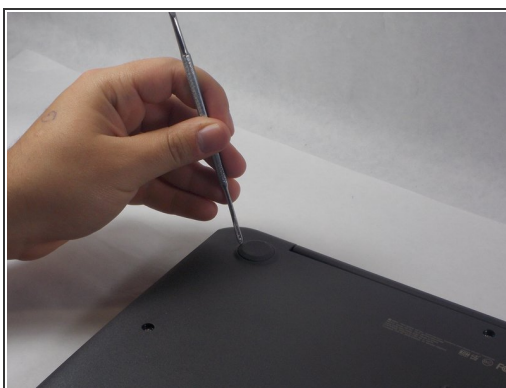

- Remove the two bigger rubber stoppers using a metal spudger.




### Step 3

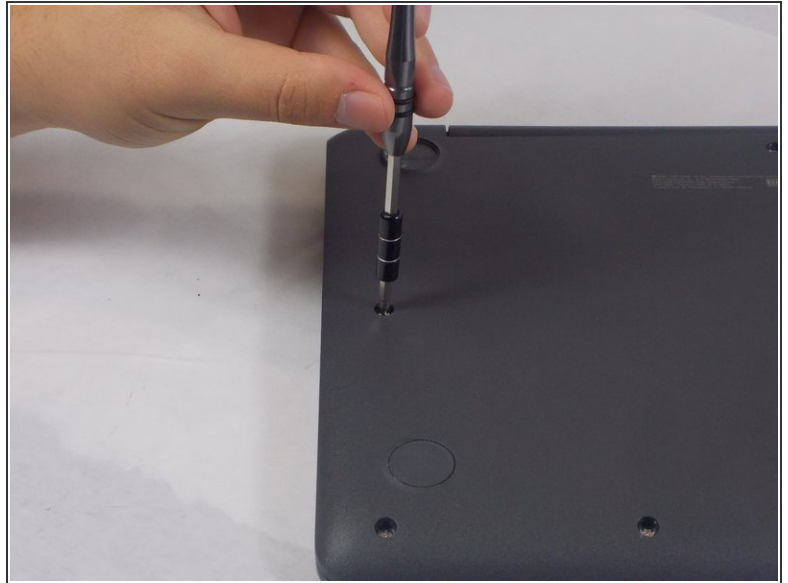


- Remove the seven 6mm Phillips #00 screws found underneath the stoppers.

### Step 4

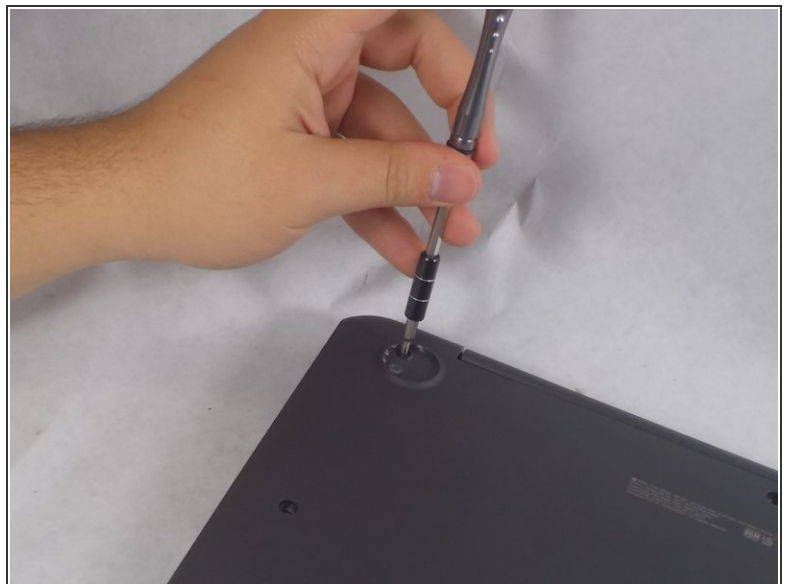



- Remove the two 9mm Phillips #1 screws.

## Step 5

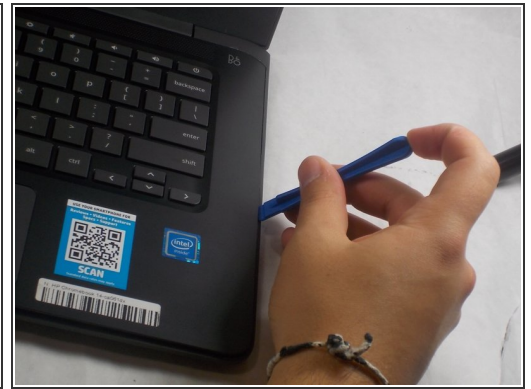

- Flip the Chromebook over and open the cover.
- Insert the iFixit opening tool into the edge of the keyboard, near the mouse pad.
- By lifting the tool at an angle, work the tool around the entire perimeter of the keyboard.
- ⓘ You will hear a popping noise when you disconnect the keyboard.

## Step 6

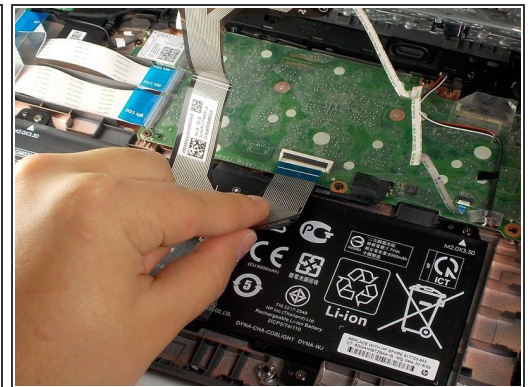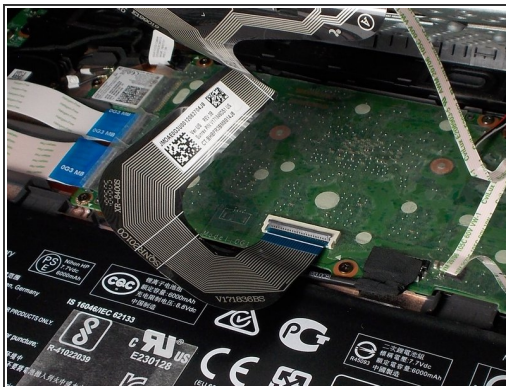

- Lift the keyboard from the mouse pad.
- ⚠ Lift the keyboard carefully, because there are cables connecting the keyboard to the base and they may break.
- Use your finger or the spudger tool to flip up the black locking flap.
- Grab the black cable and pull away from the motherboard.
- ⚠ Carefully lift the black piece up, because it is fragile and can break easily.




## Step 7




- Flip up the white locking flap with your finger or spudger tool.
- Remove the white cable from the motherboard.
- ⚠ Carefully lift the white piece up, because it is fragile and can break easily.

## Step 8

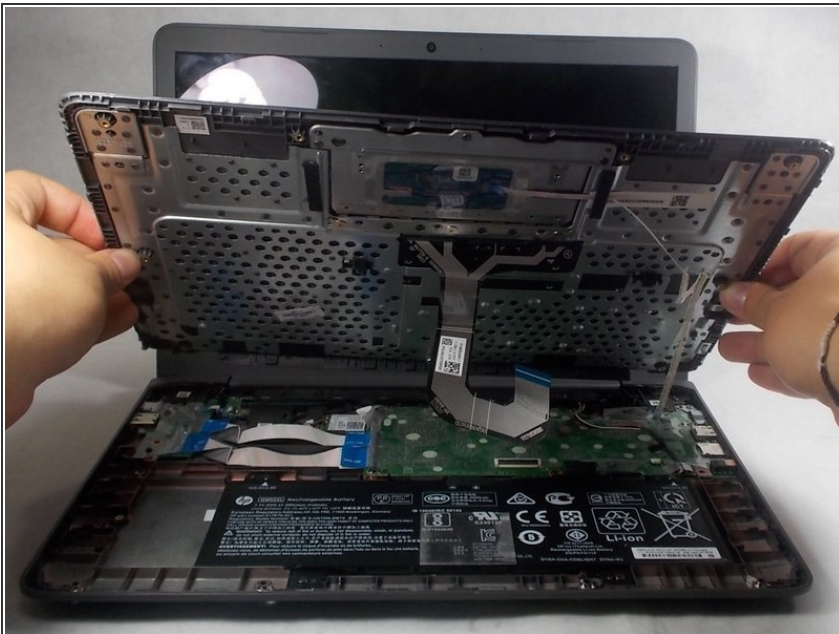


- Lift the rest of the keyboard up from the base of the Chromebook.

## Step 9 — Daughterboard

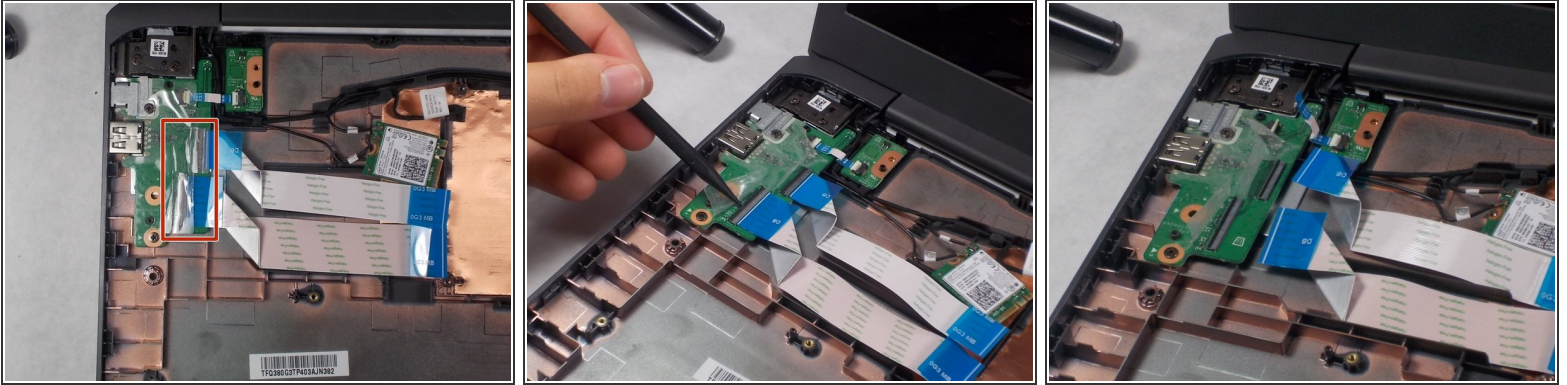

- Peel back the plastic covering the cables connecting the motherboard to the daughterboard.
  - Use the spudger tool to flip up the black plastic pieces from both cables.
  - Pull both cables toward the right to remove from the daughterboard.
- ⚠ Be sure to remove the cables carefully because they are fragile.


## Step 10

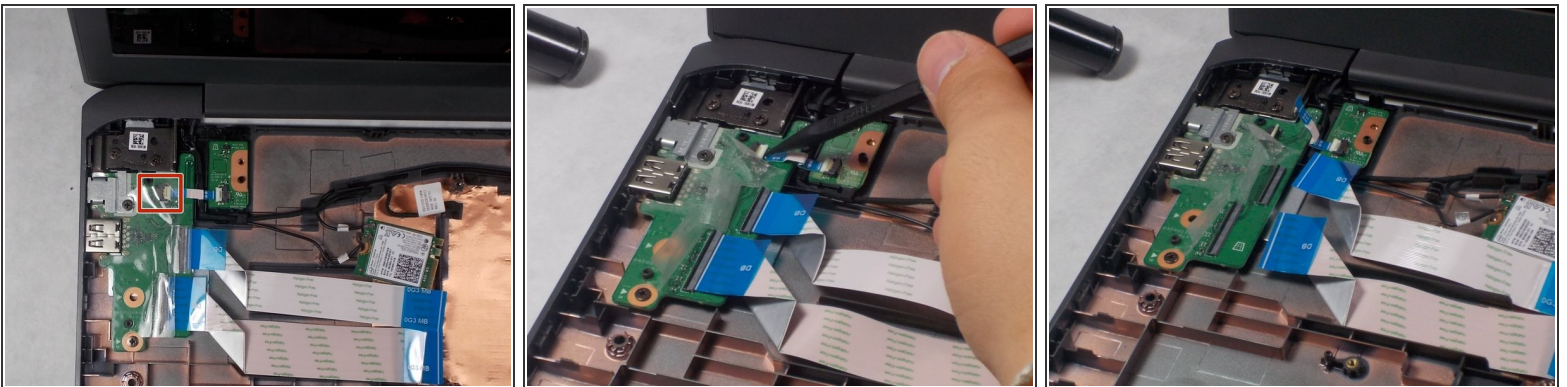

- Peel back the plastic covering from the smallest blue and white cable.
  - Flip up the white plastic piece using the spudger.
  - Pull the blue cable toward the right to remove it.
- ⚠ Be sure to remove the cable carefully because it is fragile.



## Step 11

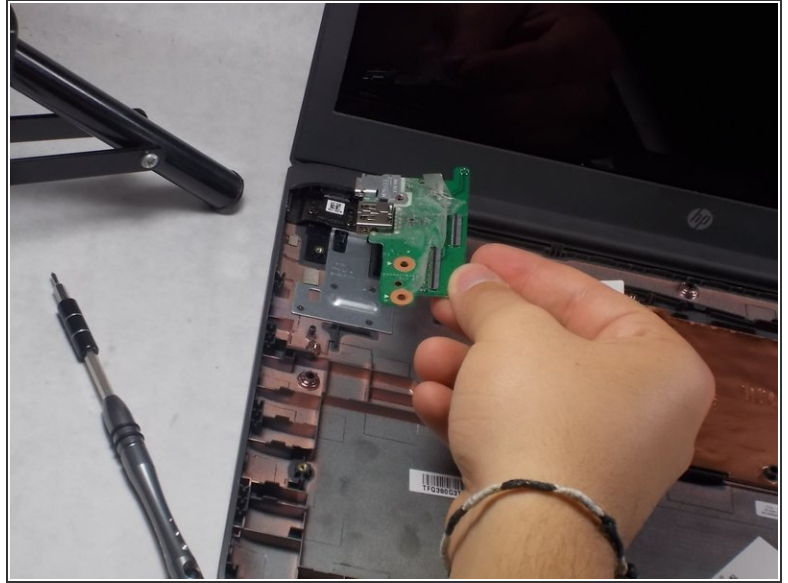

- Remove two 4mm Phillips #0 screws.
- Remove the daughterboard from the Chromebook.

To reassemble your device, follow these instructions in reverse order.