




Sony DVP-SR200P Processing Board Replacement

Follow this guide in order to replace the Sony DVP-SR200P DVD's processing board.

Written By: Brian Hua

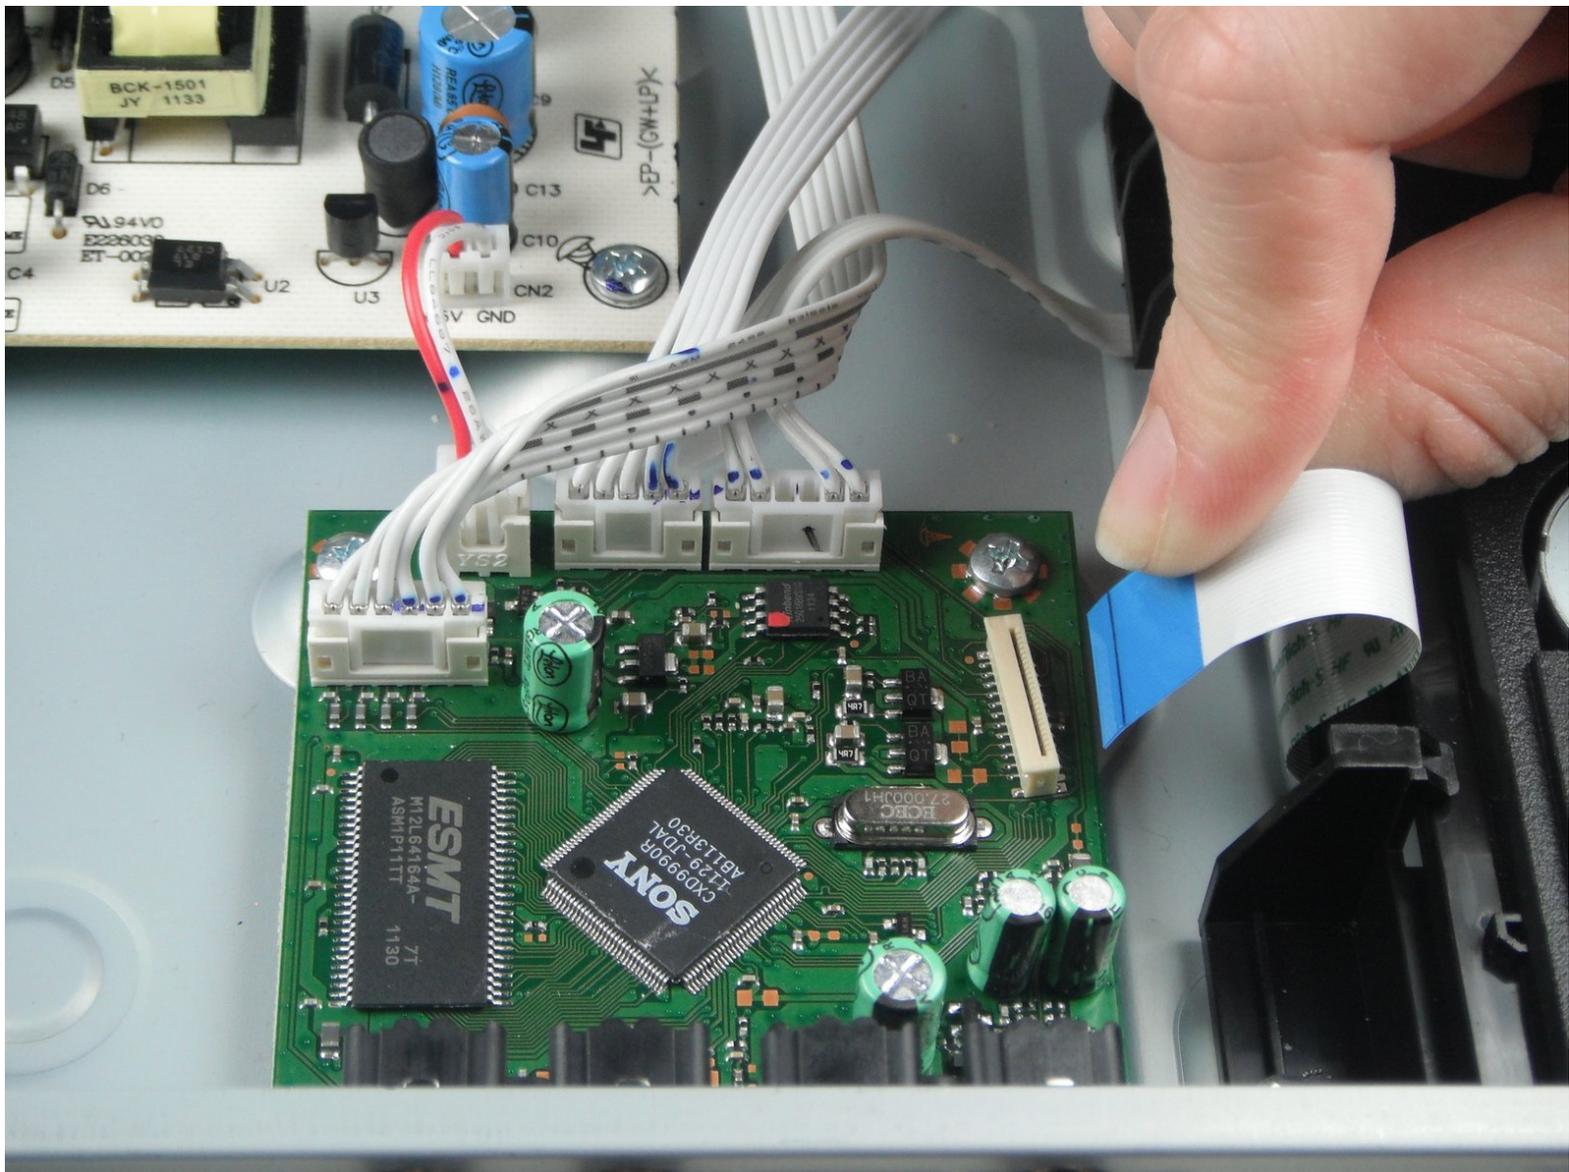

INTRODUCTION

Removing the processing board allows you to access other components like the DVD drive and remaining circuit boards.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Top Cover



- Remove the five #1 Phillips screws (black, 3/16") attaching the cover to the DVD player.
 - One 3/16" screw on the right side of the DVD player.
 - One 3/16" screw on the left side of the DVD player (directly opposite of other screw).
 - Three 3/16" screws on the back of the DVD player.

Step 2





- Slide the cover away from the front of the DVD player until it is off.

Step 3 — Processing Board




- Remove the blue tape from the processing board by gently pulling upward.

Step 4

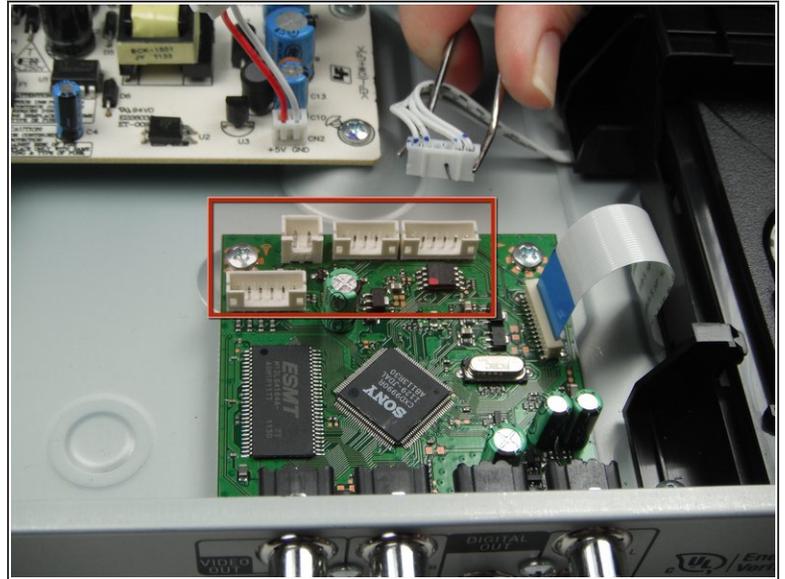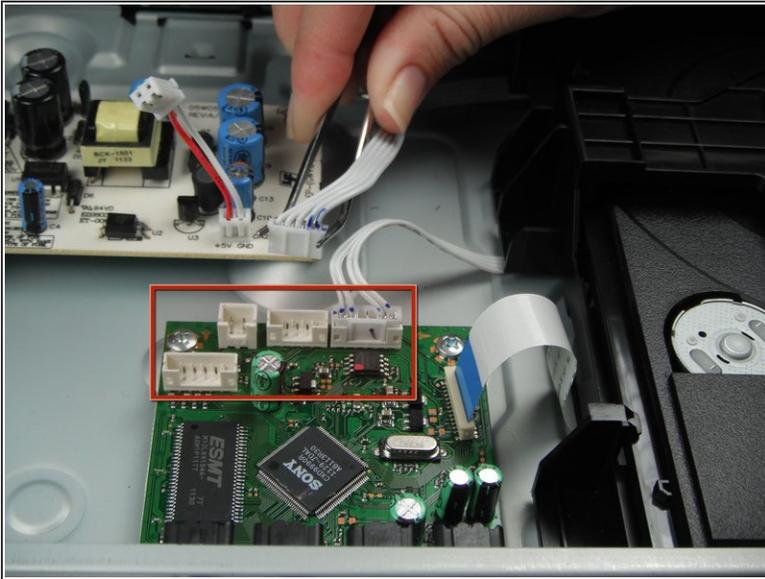

- Use the tweezers to remove the four sets of wires connected to the processing board. Start with the cord located in front of the row of three cords.
- ⓘ The wires may be difficult to remove. Wiggling them while lifting them up may help remove them.

Step 5

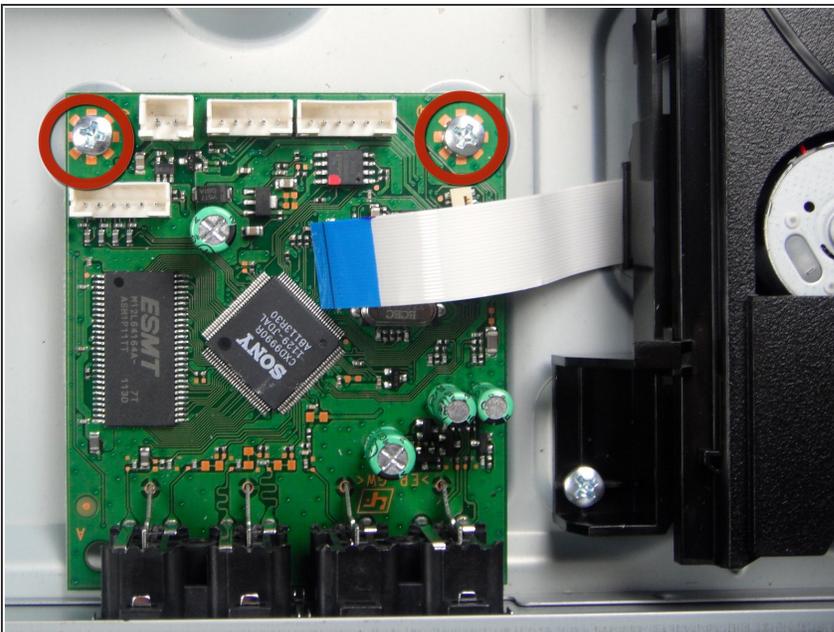

- ⚠ Handle the processing board with care. It is fragile.
- Unscrew the two #1 Phillips screws (silver, 3/16") located on the two edge corners of the processing board.

Step 6



- Orient the DVD player so that you are facing the video and audio jacks.
- Unscrew the two #1 Phillips screws (silver, 3/16") located on the outside of the DVD player
- ⓘ The processing board is now free to be removed and replaced.

To reassemble your device, follow these instructions in reverse order.