




# HP Envy M6-1205DX RAM Replacement

This guide will explain how to replace the RAM in the HP Envy M6-1205DX laptop.

Written By: Ryan Hatton

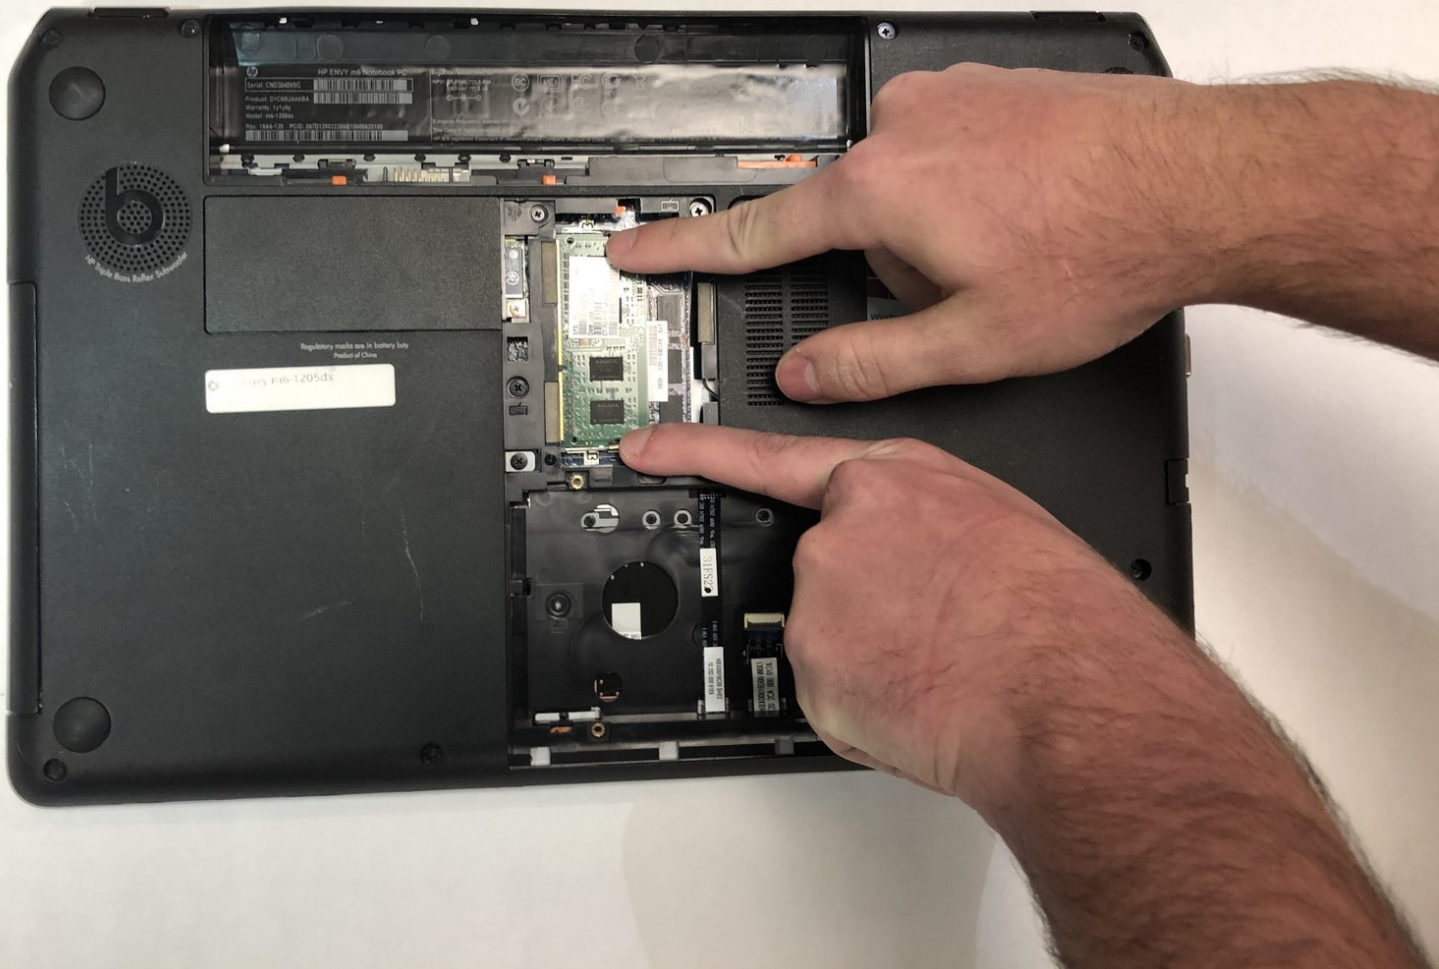

## INTRODUCTION

If you are experiencing an issue with your RAM on a Hp Envy M6-1205DX, this guide can assist you in replacing your RAM. RAM is an important part of a PC as it allows for communication between a PC's hard drive and processor. The corruption of RAM can stem from many different issues including abrupt system rebooting and excessive heat. RAM that does not work properly can slow a computer's performance down or cause a computer to not function correctly. Should this happen to your computer, the steps to replacing it are easy to follow for beginners.

Before beginning the guide, turn off your computer and disconnect from the power cable and either disconnect or remove the battery.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- Lay the device face down to begin.

## Step 2




- Slide the release mechanism to the left to release the battery.

## Step 3



- Remove the battery.

## Step 4 — Back Panel

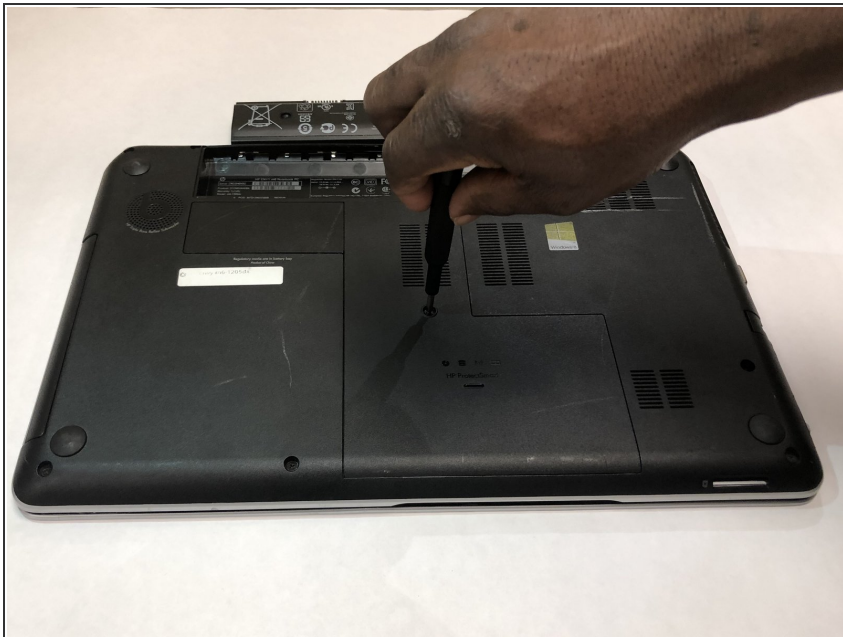


- Using a Phillips #1 screwdriver, remove the 8.6 mm screw.

## Step 5



- Slide the center panel down to remove it.

## Step 6 — RAM

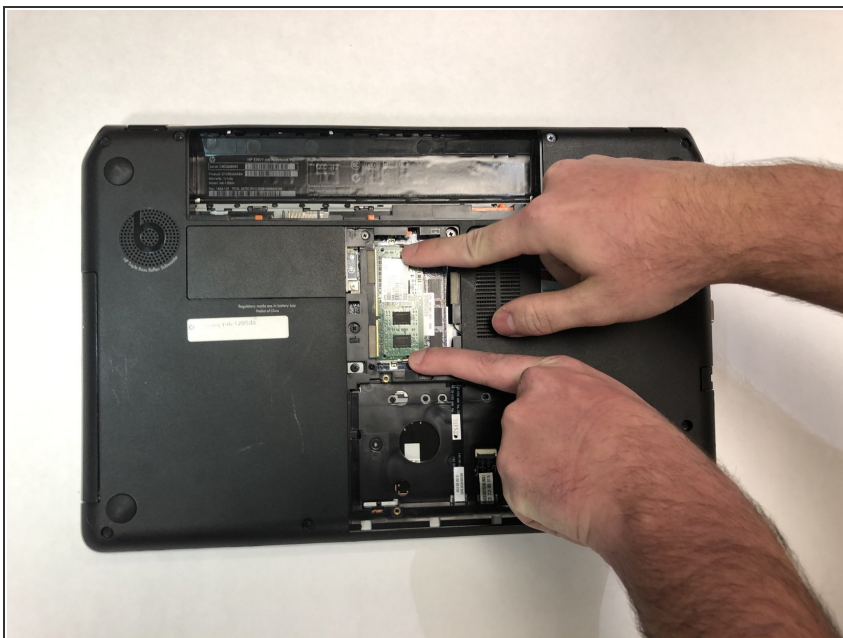

- To release the RAM push out on the two release mechanisms holding it down.

## Step 7



- Lift gently up on the RAM to position it for removal.

## Step 8



- Gently pull the RAM out of its slot.

## Step 9



- Upon removing the first stick of RAM you will find a second RAM stick located beneath it.
- Release the second RAM stick by pushing the two release mechanisms outward.
- Pull the RAM stick out.

To reassemble your device, follow these instructions in reverse order.