




Remove the Screen

Written By: Melissa

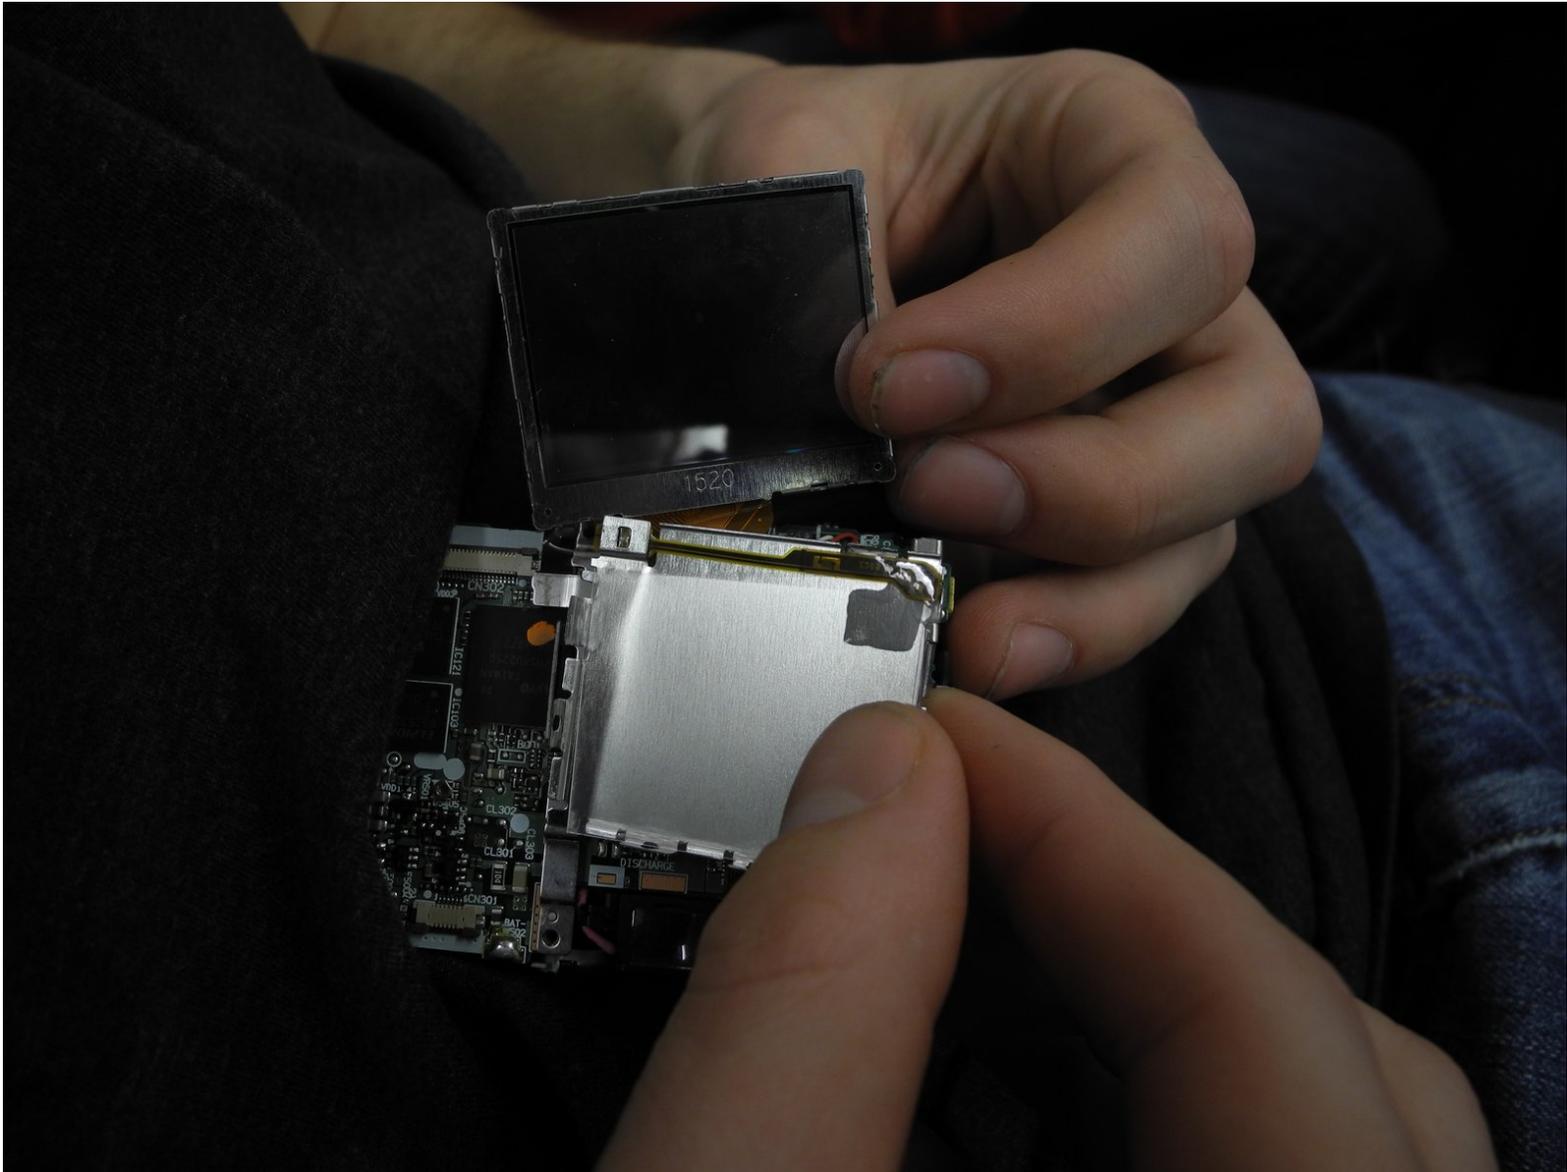

 **TOOLS:**


- [Phillips #00 Screwdriver \(1\)](#)
-

Step 1 — Remove Screws




- Remove the screws from the bottom, right, and left side of camera.

Step 2 — Remove back

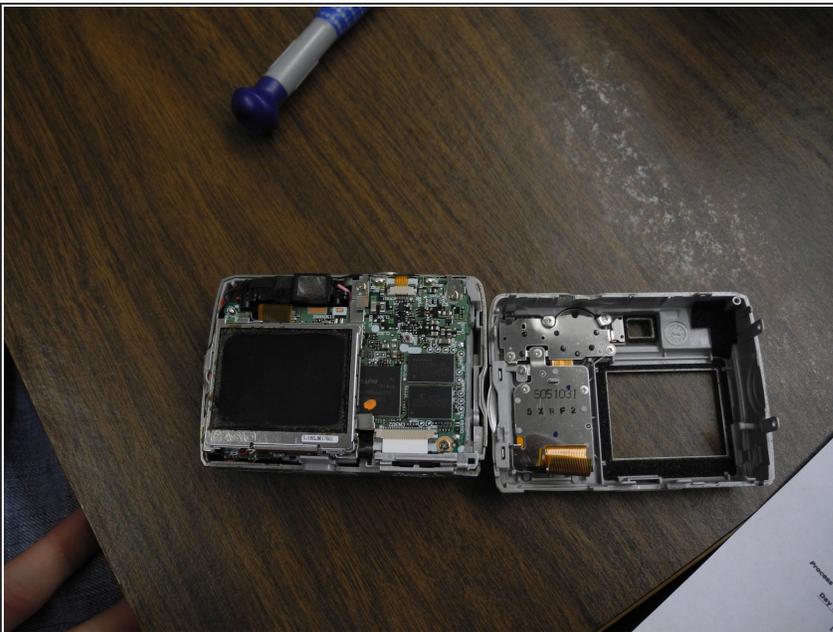


- Remove the back of the camera, this may require force.

Step 3 — Remove Metal Bracket

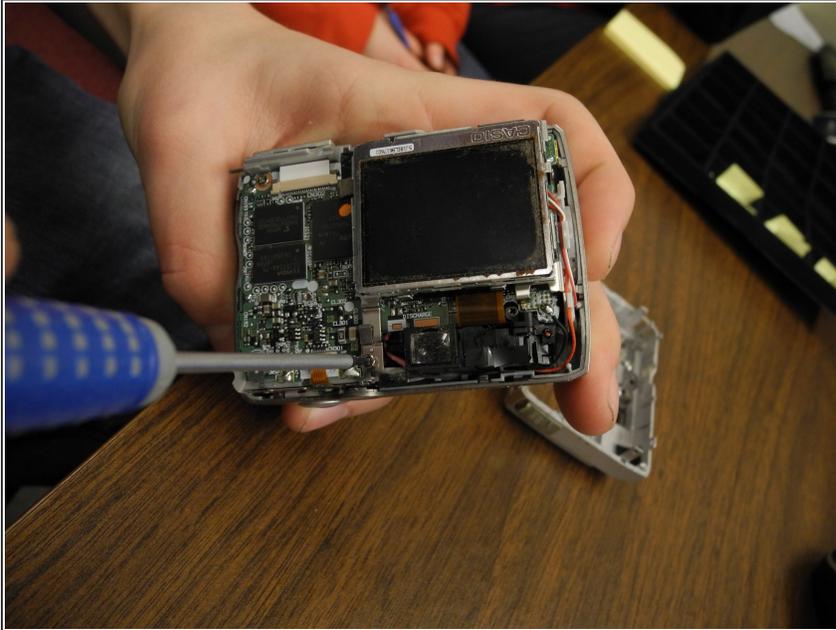


- Unscrew the right metal bracket of the viewing lens

Step 4 — Remove front of camera

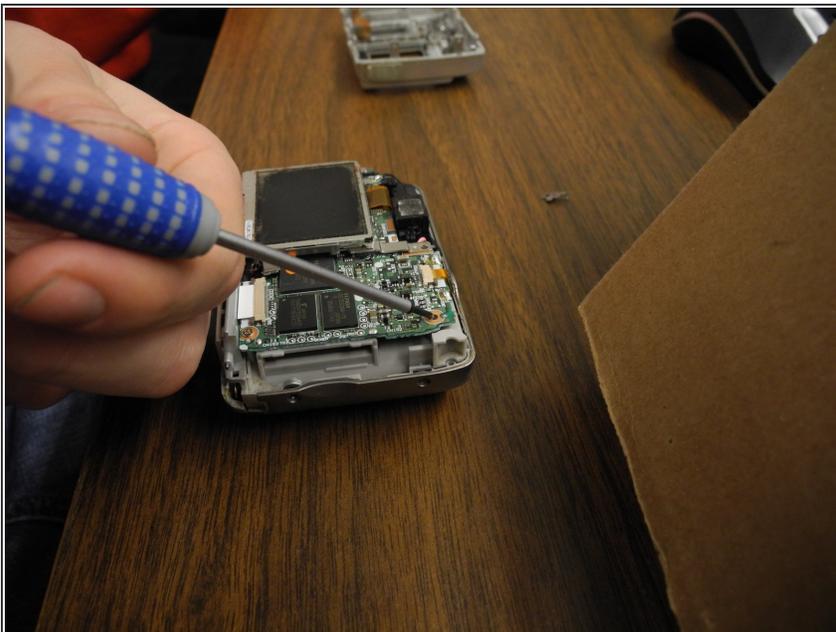

- Unscrew the top right corner screw

Step 5

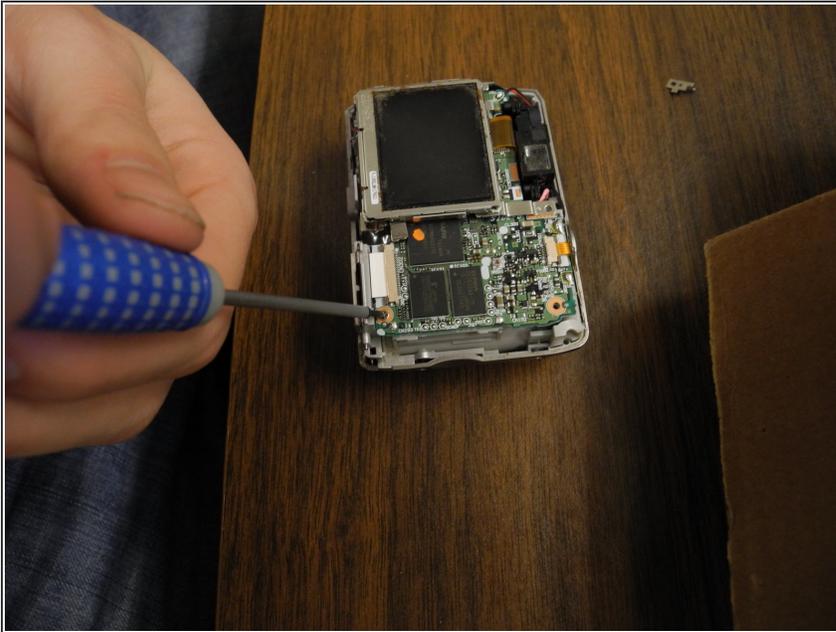


- Unscrew the bottom right corner screw.

Step 6




- Pull the grey circular facet that sits on the bottom outside of the camera off - may have to use force.

Step 7

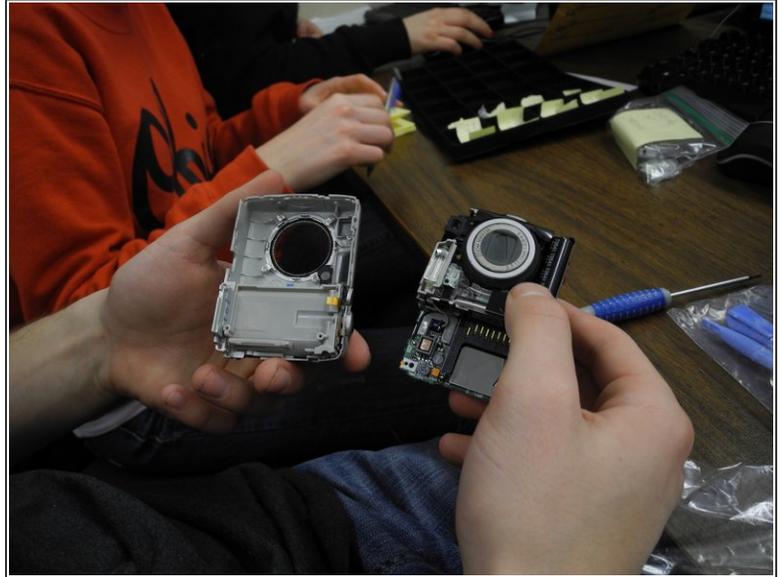


- Pull the front of the camera off of the mother board.

Step 8 — Remove the Screen

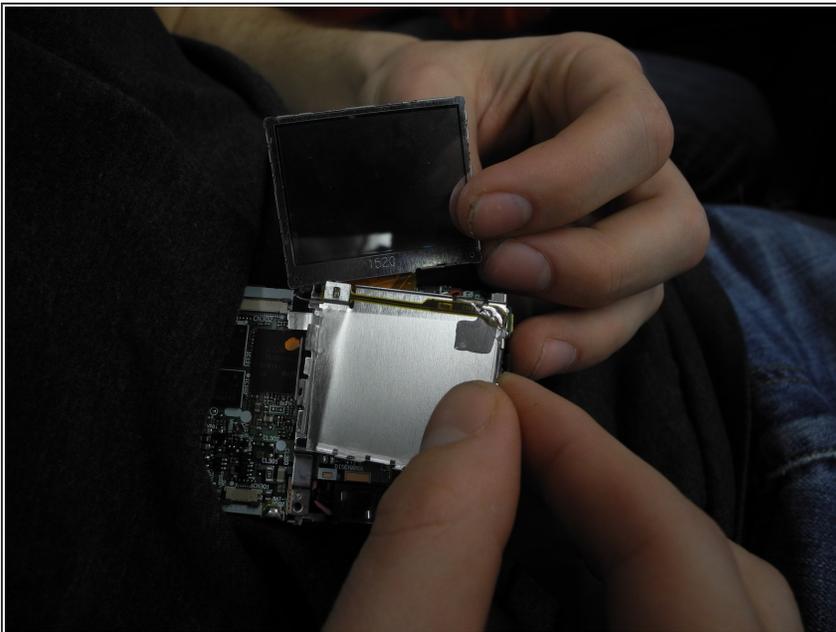


- Unhinge the outer case of the screen from the back of the camera. The screen should still be hanging by wires.

Step 9

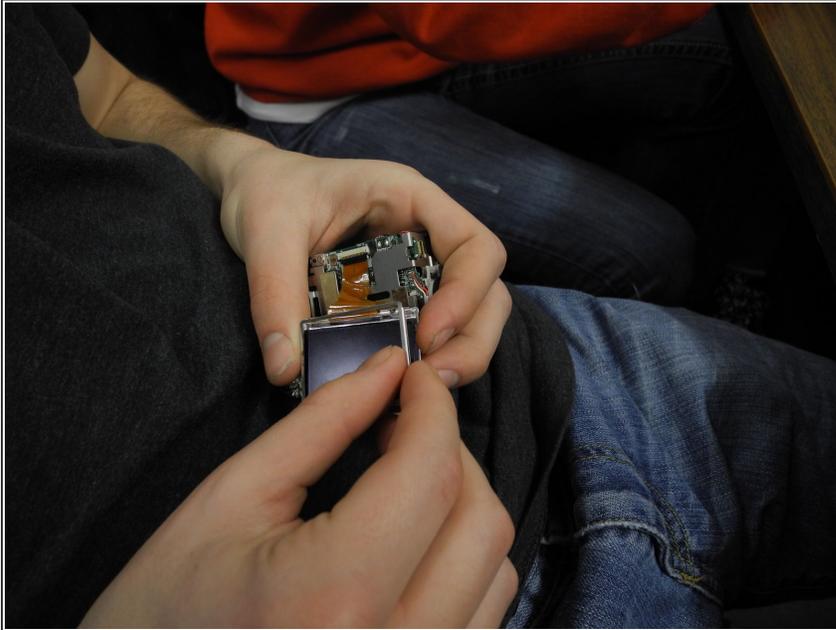


- Remove outer case/rim of screen from the back of the camera. The screen should still be hanging by the red wire and white wire.

Step 10

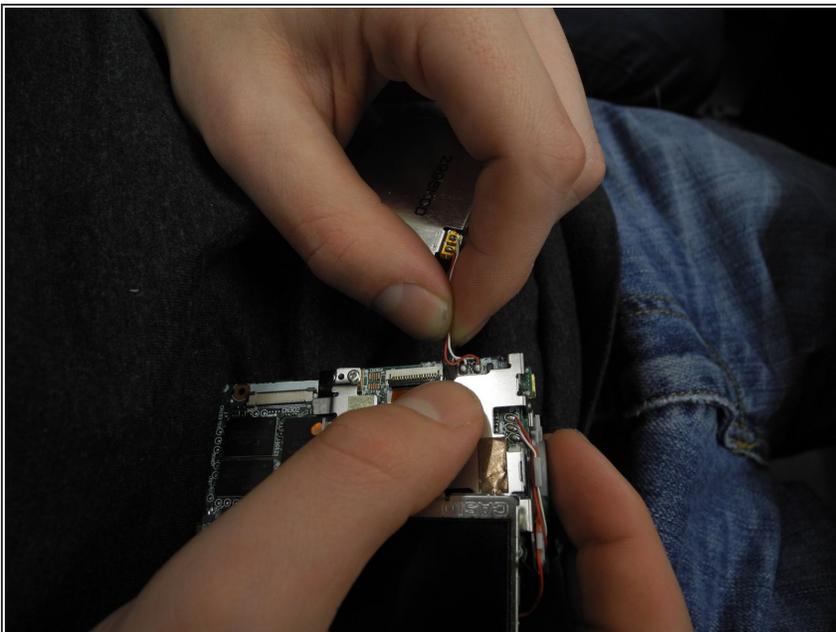

- Pull out the red wire and white wire attaching the screen to the motherboard.

Step 11

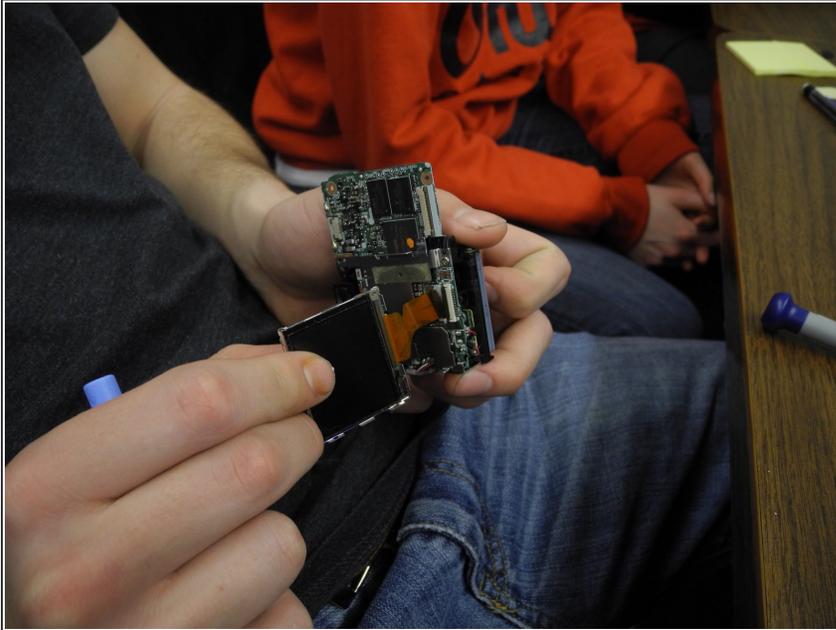

- Flip up black lever holding data cable to motherboard, and remove data cable from motherboard.

To reassemble your device, follow these instructions in reverse order.