



Graco Paint Sprayers 17C325 2015 Gun Filter Replacement

Replace a clogged or damaged filter in the spray gun for the Graco Paint Sprayer 17C325.

Written By: Craig Lloyd



INTRODUCTION

Follow this guide to clean out a clogged—or replace a damaged—filter in the spray gun for the Graco Paint Sprayer 17C325.



TOOLS:

- [Pipe Wrench](#) (1)
(Optional)



PARTS:

- [Graco FILTER, GUN 288749](#) (1)

Step 1 — Remove the Handle



⚠ Before you begin, make sure to follow the pressure relief procedure documented in the user manual before disconnecting and disassembling the spray gun.

- Unscrew and remove the handle from the spray gun body.
- i** You may need to use a pipe wrench to loosen the handle before removing it.

Step 2 — Remove the Filter



- Use your fingers to remove the blue-tipped filter from the inside of the handle.

To reassemble your device, follow these instructions in reverse order.