


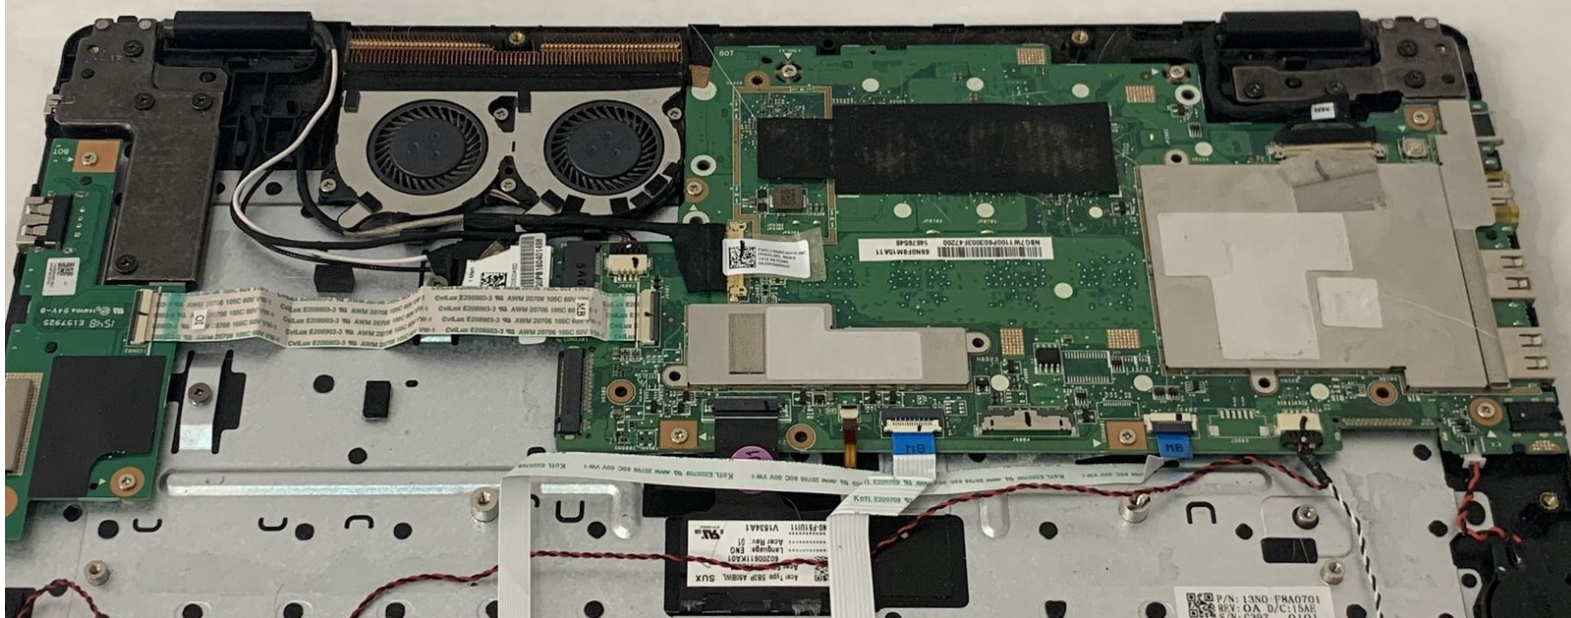

Acer Aspire R R5-471T-51UN Battery Replacement

This guide covers how to replace your Acer Aspire R R5-471T-51UN battery. Your battery needs replacement if your laptop will not hold a charge.

Written By: John Sandor



This document was generated on 2021-06-30 12:06:00 PM (MST).

INTRODUCTION

If your Acer Aspire R R5-471T-51UN battery will not hold a charge or has issues charging up, use this guide to replace the battery.

The battery should provide enough power to last for a while fully charged. Replacing the battery is normal with computers that see a lot of usage.

Before using this guide, inspect that the replacement battery is the correct model for the PC. Then proceed through the given instructions.

Step 4 requires you to pinch the white ends of the battery connector cable and slowly pull it from the motherboard. Proceed with this step with caution.

Before beginning, make sure to power off your PC completely and disconnect from any external power source.



TOOLS:

- [Jimmy](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery





- Flip your laptop over so the bottom is facing you.
- Remove the twelve 5 mm screws with a Phillips #0 screwdriver.

Step 2





- Insert the Jimmy between the back cover of the laptop and the base of the laptop and then slowly use the Jimmy to pry off the back cover of the laptop.

Step 3

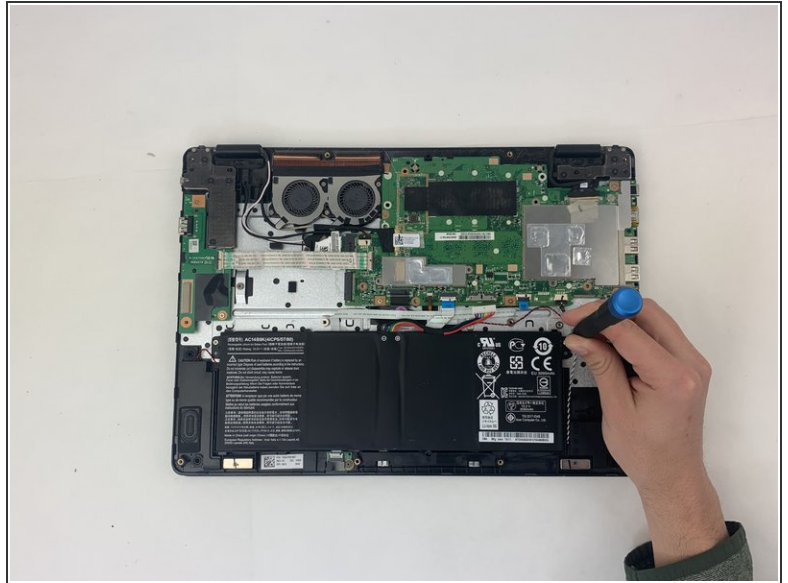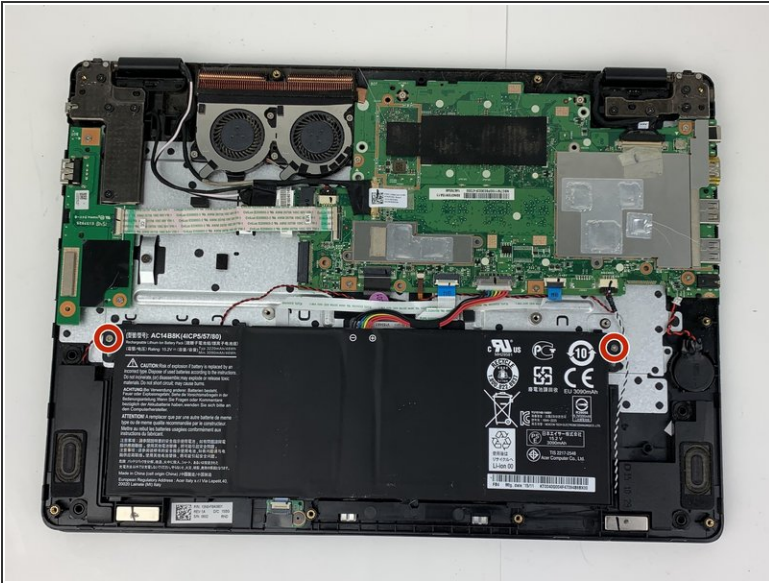



- Use your Phillips #0 screwdriver to remove the two 3mm screws on the battery.

Step 4

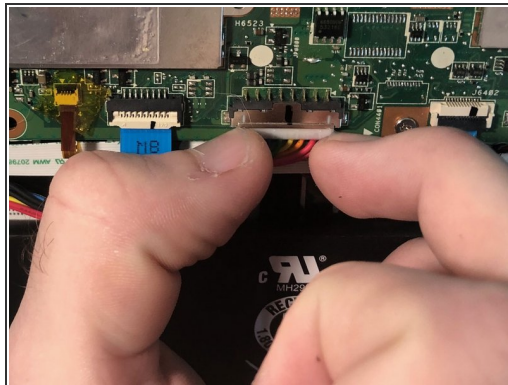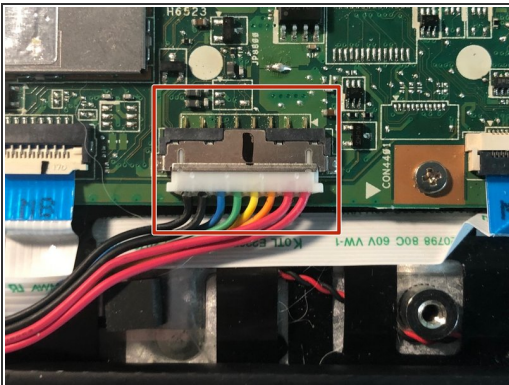

- Gently and cautiously pinch the white ends of the battery connector cable and slowly pull it from the motherboard.

Step 5

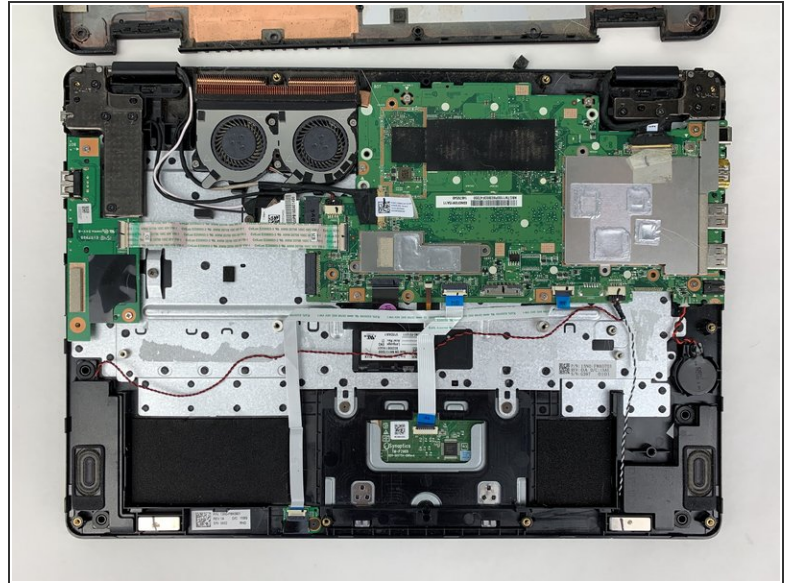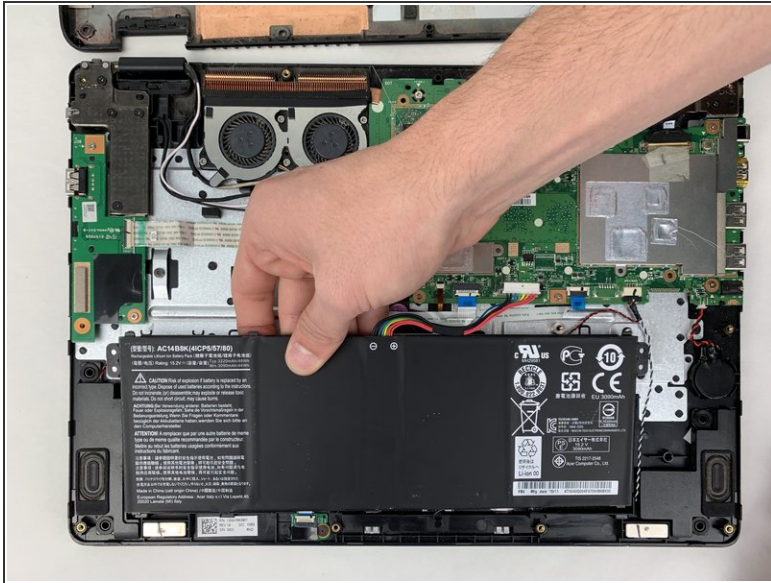

- Gently lift the battery out of the laptop.
- ⚠ Be cautious with the lithium ion battery as you remove it.

To reassemble your device, follow these instructions in reverse order.