

Untracked Bifold Door Pin Replacement

Bifold door is misaligned from the tracking due to a damaged or missing pin. This guide replaces or repairs the pin and re-tracks the door.

Written By: Catelyn Carpenter



INTRODUCTION

A bifold door that has come off its tracking can be a frustrating occurrence. This particular guide references a bifold door that depends on a plastic pin which is secured into the tracking above the door. Using this step-by-step process will help you replace the pin at the top of the door, reinsert it into the track, and get it back to functioning properly.

Before using this guide, check to see if the pin has fallen out and is damaged, or if the pin just needs to be put back into the tracking. We have provided links in Step 5 to where a new pin can be purchased, but in some cases the pin can be reused if it isn't damaged or warped.



TOOLS:

- Slip Joint Pliers (1)
- Hammer (1)
- Cleaning Rag (1)
- Cleaning Spray (1)
- Step Stool (1)

alternative: short ladder


Bifold Door Plastic Pin (1)

Step 1 — Bifold Door Pin



 Stand on a small ladder or step stool to get a better view of the top of the door.

Step 2

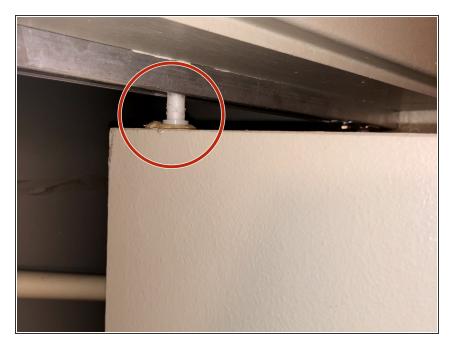

Locate the pin at the top of the door.



Remove the current pin with pliers.

Step 4





- Clean the top of the door using cleaning spray and a rag. This will help remove any dust or wood fragments left behind.
- (i) I used Meyer's spray, but any household cleaning spray will work just fine.



- Replace old pin with new pin using the pliers to place into the hole at the top of the door.
- You can purchase a new pin at either <u>Ace Hardware</u> or <u>Home</u> <u>Depot</u>.

Step 6



- Push the pin all the way in by using a hammer.
- No excessive force is needed.

 Gently tap the pin with the hammer until it is secured.



- Line up the newly placed pin with the door's tracking.
- Push the door down slightly and then lift it back up to align it with the track.

Step 8



 Secure the pin within the tracking using the pliers.



 When completed, the bifold doors should close and be positioned within the tracking.

To reassemble your device, follow these instructions in reverse order.