




# Echo Power Pruner 254 cc PPT2620 2019

## Flexible Tube Replacement

Replace the small flexible tube that sits below the handle on an Echo Power Pruner 254 cc PPT2620 2019.

Written By: Adam O'Camb

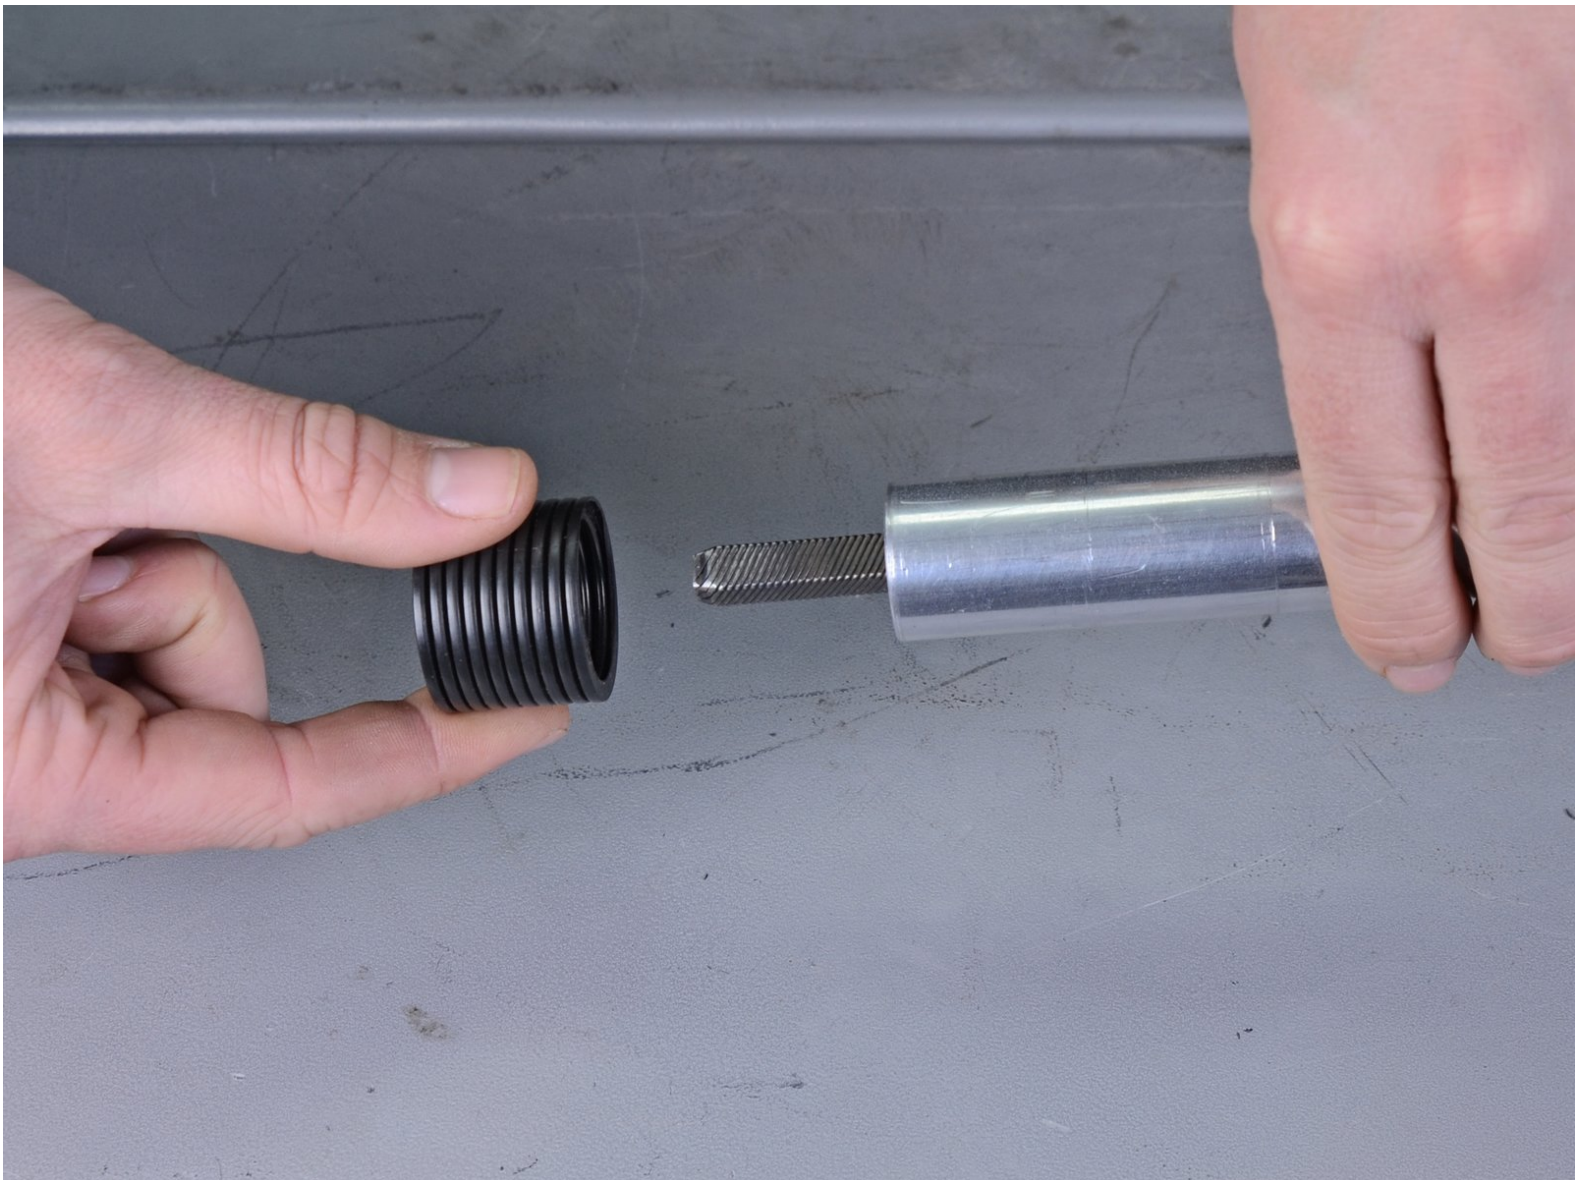

## INTRODUCTION

Use this guide to replace the small flexible tube that sits below the handle on an Echo Power Pruner 254 cc PPT2620 2019.



### TOOLS:

- [T25 Torx Screwdriver](#) (1)
- [8 mm socket](#) (1)
- [Socket Wrench](#) (1)



### PARTS:

- [Echo Tube, Flexible V475004000](#) (1)

## Step 1 — Disconnect the spark plug



- ⚠ Move the stop switch into the "stop" position to turn the pruner off before attempting any repairs.
- Pull the spark plug cap straight off of the spark plug.

## Step 2 — Remove the control handle assembly



- Use a T25 Torx screwdriver to loosen (but not remove) the two screws clamping the main pipe assembly to the control handle.



### Step 3



- Remove the control handle from the main pipe assembly.

### Step 4 — Disassemble the control handle



- Use a T25 Torx screwdriver to remove the seven screws holding the control handle together.

## Step 5



- Lift the top half of the control handle straight up to remove it.
- ⓘ The following step shows the throttle trigger and throttle lockout removed. These parts do not need to be removed for this guide.


## Step 6 — Remove the control handle



- Use a T25 Torx screwdriver to loosen (but don't remove) the screw clamping the strap hook to the handle pipe.
- ⓘ You may need an 8 mm socket and socket wrench to hold the nut on the back of the strap hook while you loosen the bolt.
- Remove the two T25 screws securing the handle to the handle pipe.



## Step 7

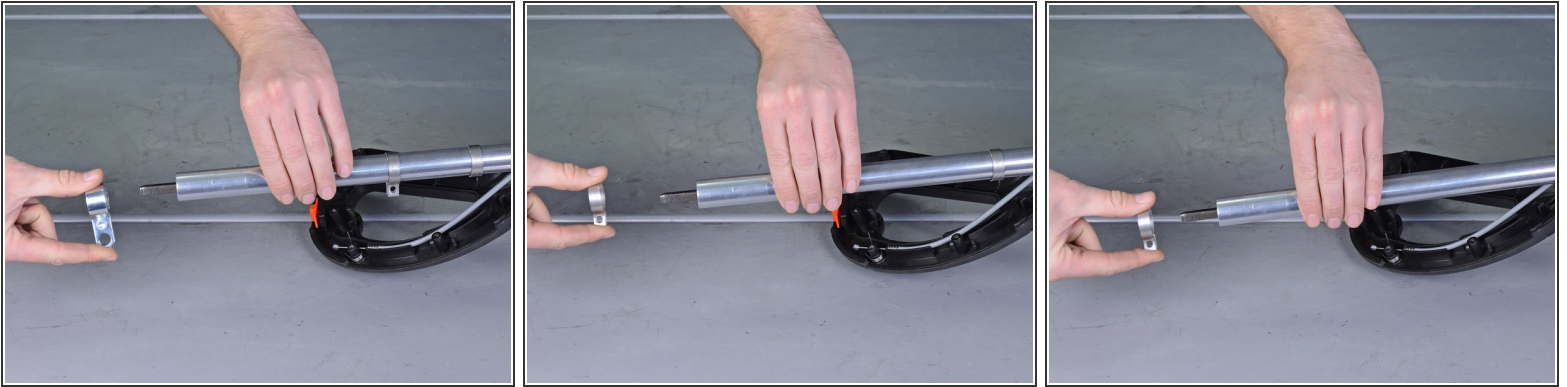

- Slide the strap hook off the pipe and remove it.
- Slide both clamps that held the handle off of the pipe and remove them.

## Step 8 — Remove the flexible tube



- Slide the flexible tube off of the handle pipe and remove it.

To reassemble your device, follow these instructions in reverse order.