



# ANKER SoundCore Speaker Replacement

If a speaker in the ANKER Soundcore is not working follow these steps to replace them.

Written By: Cory Troxell



---

## INTRODUCTION

This is a step-be-step guide on how to replace the ANKER Soundcore speakers.

Before attempting to replace anything, it is recommended that you look at this device's [troubleshooting guide](#).

Faulty speakers are often the cause of poor sound quality, but are not always the problem. Check the [troubleshooting guide](#) before, for any other possible solutions to poor sound quality.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Speaker



- Use a iFixit plastic opening tool to pry off the screen.
- Remove the screen from the device.

## Step 2




- Remove the 10mm Philips #0 screws from speaker mount.

## Step 3



- Use a spudger tool to remove speaker mount.
- Ensure all wires are still properly attached in device.

## Step 4

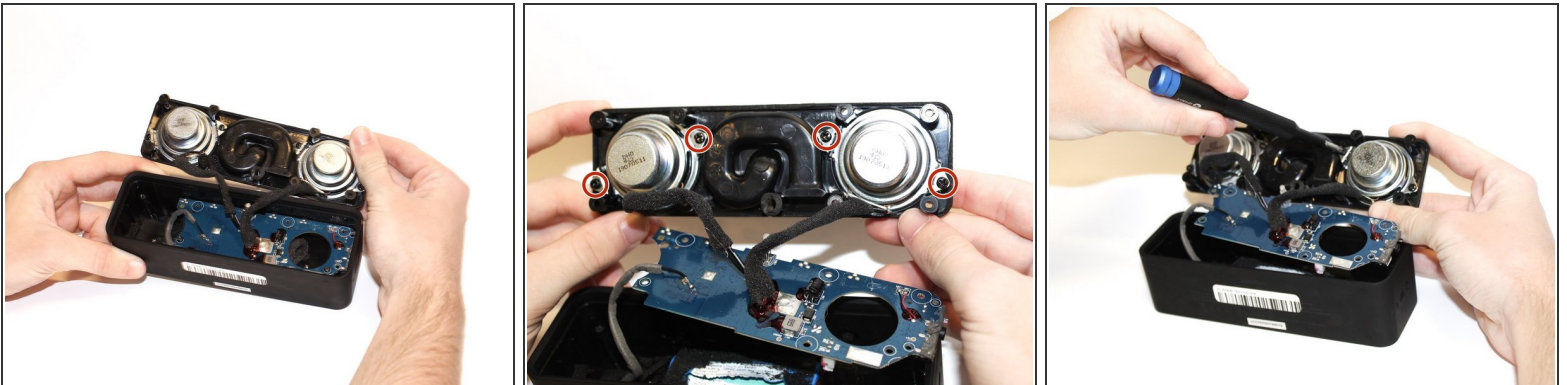

- Remove the 8mm Philips #0 screws holding speakers in place.



## Step 5



- Pull out the speakers.

## Step 6



- Desolder the speaker wires.
- Remove both of the speakers from the circuit board.
- ❗ For help soldering and desoldering, follow [this guide](#).

To reassemble your device, follow these instructions in reverse order.