



# HP Envy m6-1225dx TouchPad Buttons Replacement

How to remove and replace the touchpad buttons in an HP Envy m6-1225dx.

Written By: Lucas Nelson



# INTRODUCTION

## HP Envy m6-1225dx

Touchpad buttons are mainly known for clicking around on a laptop, like one would do if they used a desktop computer mouse. The touchpad buttons allow users to precisely click on their device.

The touchpad buttons from the HP Envy m6-1225dx model deal with problems of not clicking effectively or just not clicking at all.


For other issues relating to the TouchPad Buttons check out our [Troubleshooting](#) page.



## TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Metal Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Optical Drive

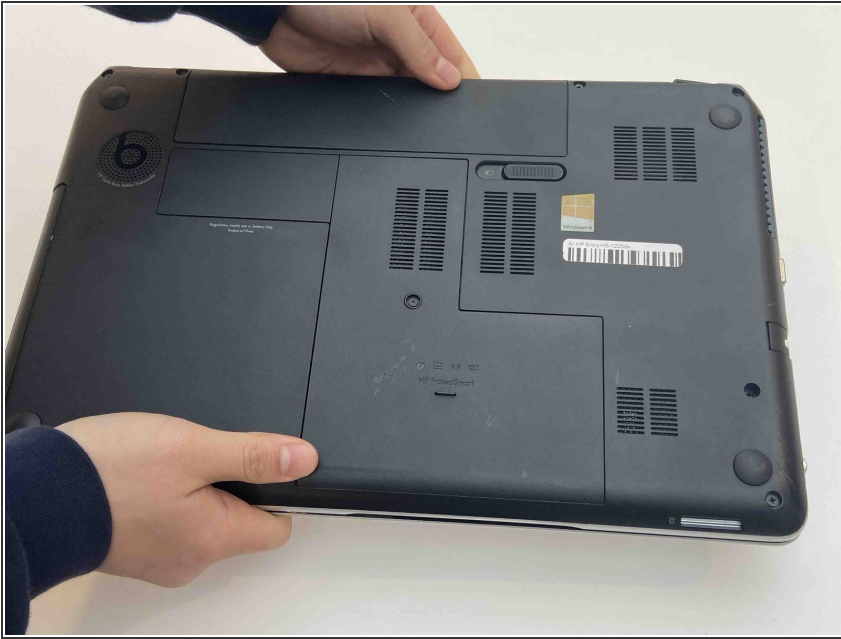

- Flip the laptop over onto its top with the back facing you

## Step 2

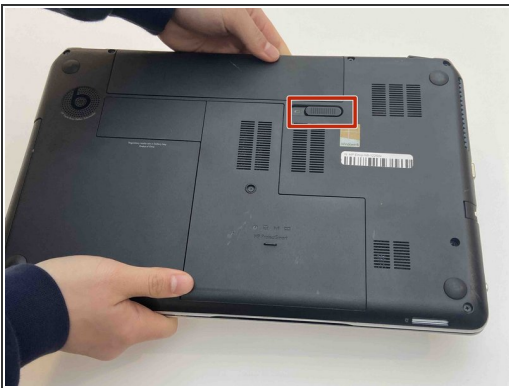


- Pull the slide release tab to the left to free the battery.
- Once the slide release is all the way over, a red icon should be visible.
- ⓘ As you pull the tab, the bottom edge of the battery should start to come up.

## Step 3



- Remove the battery


## Step 4

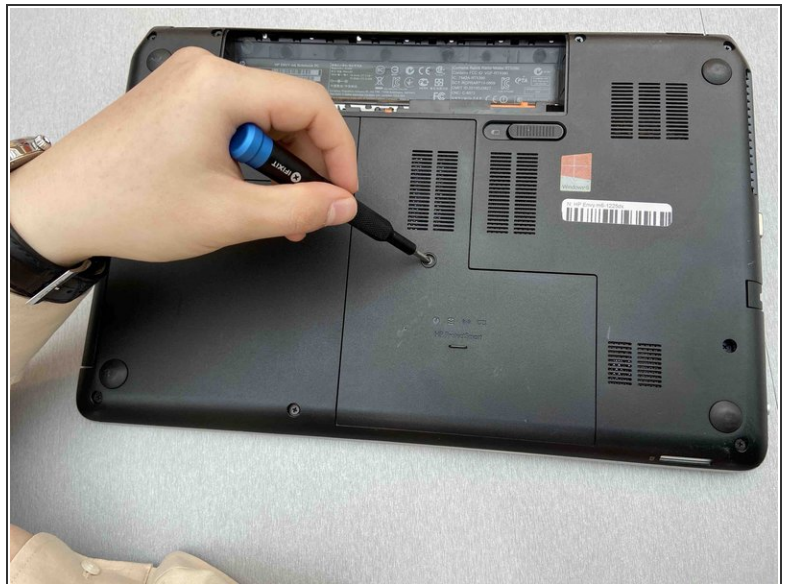

- Remove the center screw using a Phillips #1 screwdriver.




## Step 5

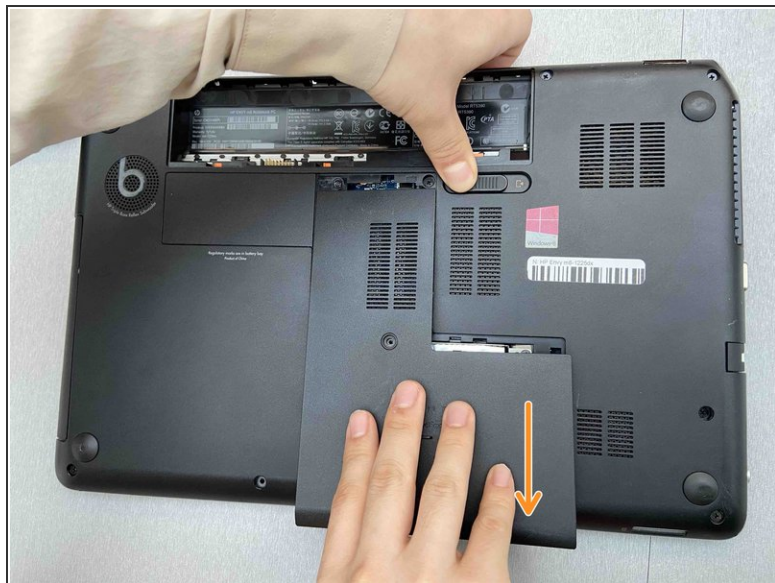

- Move the battery slide release latch to the side while pulling the service cover forward.
- Pull the service cover straight up and out to remove.

## Step 6

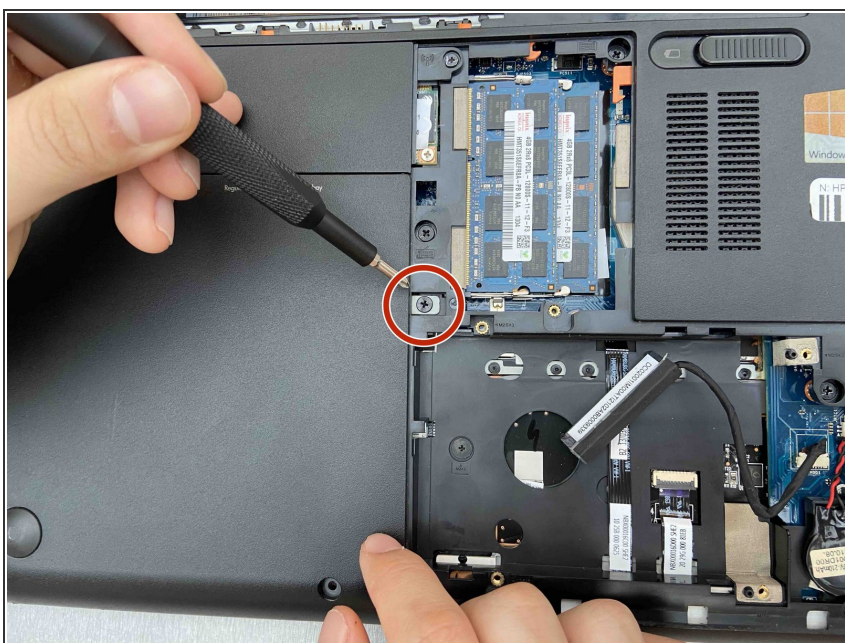


- Use a Phillips #1 screwdriver to remove the single screw holding the optical drive

## Step 7



- Use a spudger to apply pressure to the tab, while simultaneously pulling out the optical drive.
- ❗ While the images show the tab being pushed out with a screwdriver, we recommend using an ESD-safe instrument instead!


## Step 8

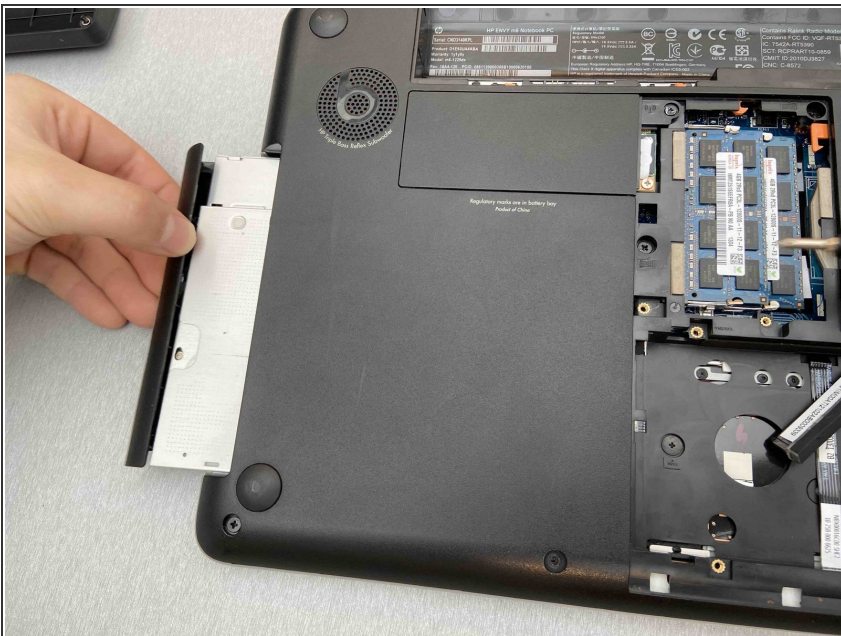

- Pull the optical drive out of the base of the laptop.




## Step 9 — TouchPad Buttons

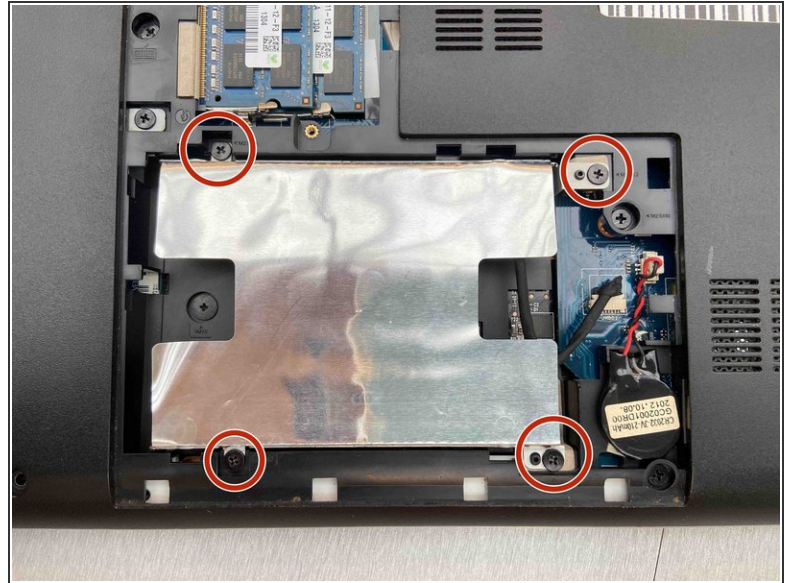


- Remove the 4 screws from the hard drive bracket with a Phillips #1 screwdriver.

## Step 10

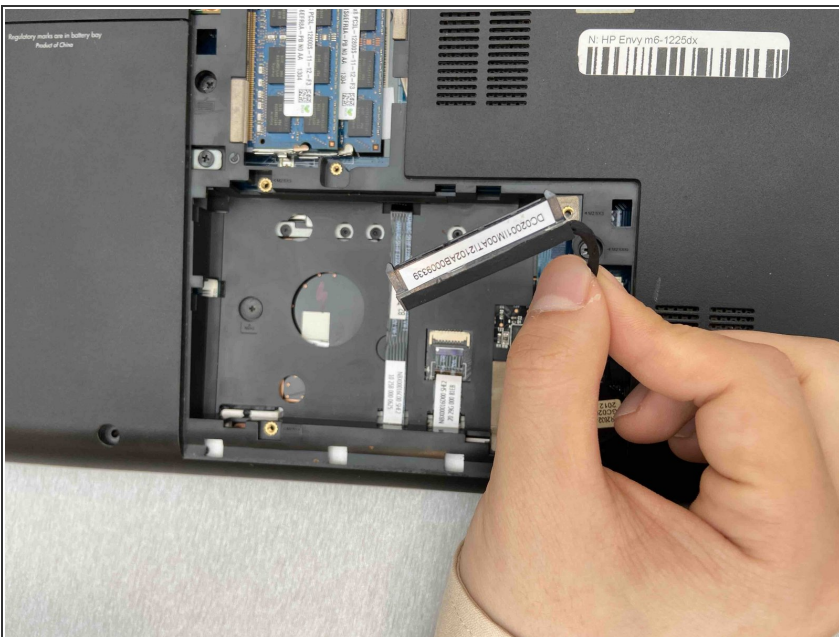


- Disconnect the cable from the side of the hard drive and move it to the side
- Remove the hard drive from the laptop.
- ⓘ Our laptop did not have a hard drive when we disassembled it.

## Step 11

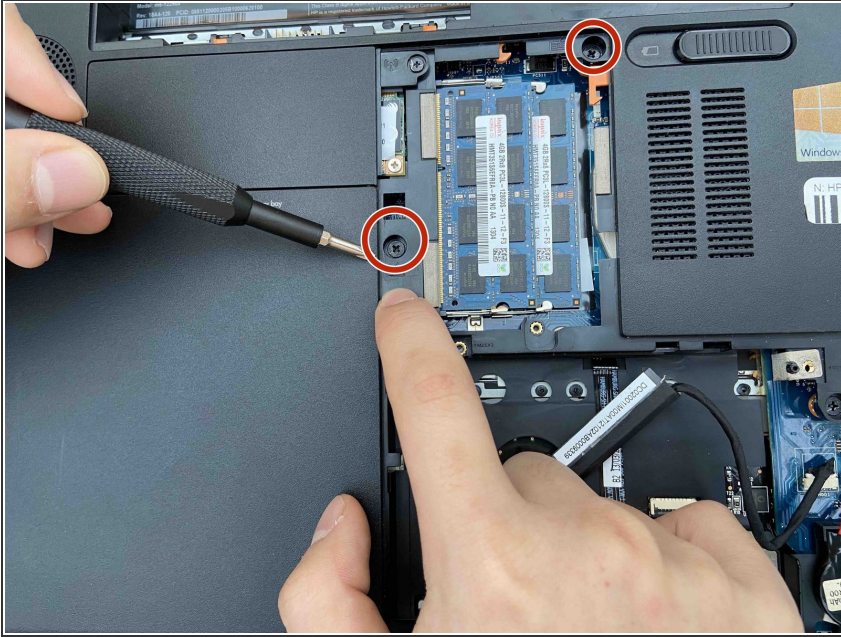

- Remove the two screws that secure the keyboard to the laptop using a Phillips #1 screwdriver.

## Step 12

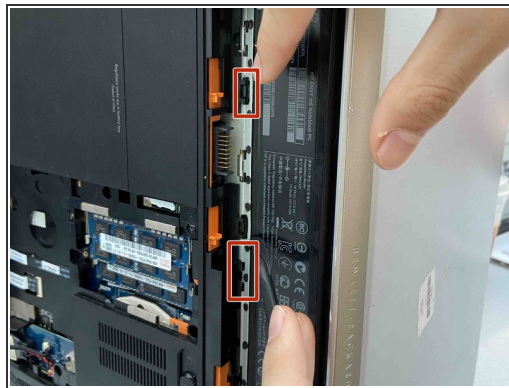


- Move the laptop onto its left side with it open.
- Turn the laptop and look into the empty battery slot for two release holes.
- Insert a metal spudger into the release holes and apply pressure to the back of the keyboard till it comes loose of the laptop.




## Step 13



- Gently lift the keyboard away from the laptop.
  - Remove the cable connection from the base of the laptop.
  - Remove the keyboard backlight cable.
-  The keyboard backlight cable is only present on select models.


## Step 14

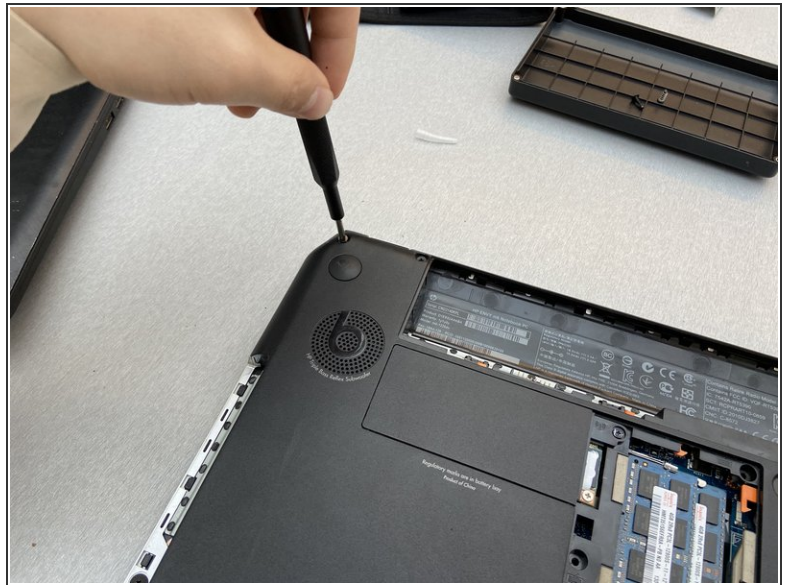

- Remove the 13 screws on the bottom of the laptop using a Phillips #1 screwdriver.






## Step 15

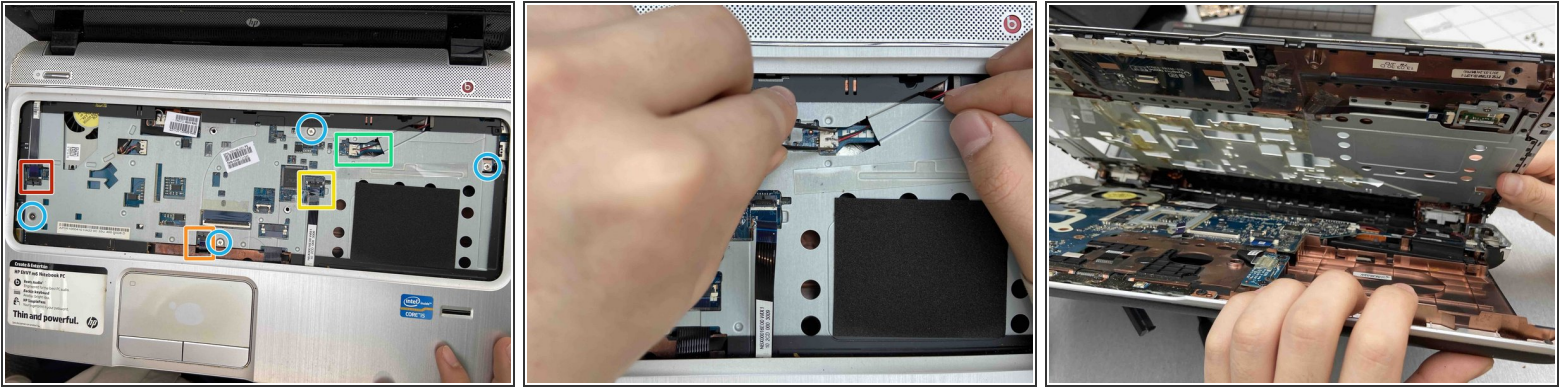

- Disconnect the power button board cable using a pair of tweezers.
  - Disconnect the touchpad button board cable using tweezers.
  - Disconnect the fingerprint reader board cable using tweezers.
  - Disconnect the right speaker cable using tweezers.
  - Remove the 4 screws using a Phillips #1 screwdriver.
  - Apply force to the base of the cover to pop it off from the laptop base.
- ⚠ Be sure the cable for the right speaker doesn't get caught on the cover as it is removed or the speaker could be damaged.

## Step 16

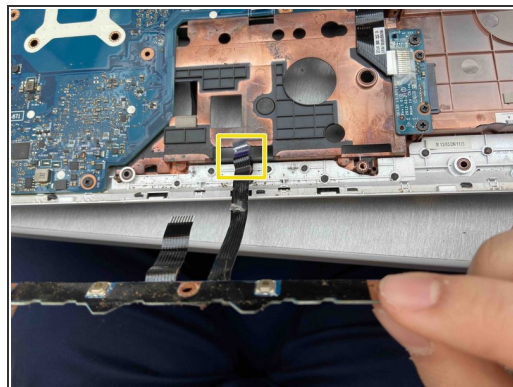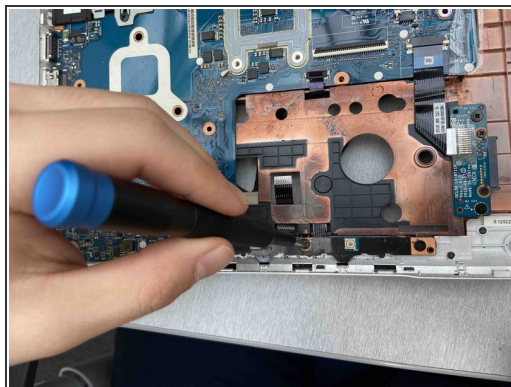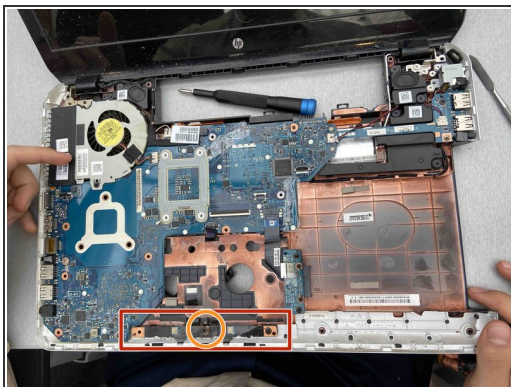

- Turn the top cover with the touchpad area facing you.
- Remove the one screw holding the touchpad buttons down with a Phillips #1 screwdriver.
- Disconnect the cable holding the touchpad buttons to the top cover

To reassemble your device, follow these instructions in reverse order.