



Philips Beardtrimmer 5000 series Disassembly

In this manual you will see how to take apart Philips Beardtrimmer 5000 series.

Written By: Hans Vlaskamp





TOOLS:

- [T6 Torx Screwdriver](#) (2)

For the blades

- [Phillips PH000 Screwdriver](#) (4)
- [Metal Spudger](#) (1)

Step 1 — Remove blades (optional)



- Remove the indicated screws with a T-6 torx screwdriver.
- Lift of the second blade.

Step 2 — Remove upper cap



- Pry your metal spudger between the upper cap en the silver lower panel.
- Unlatch the four notches.
- Lift the cap out of the top end.

Step 3 — Remove lower panel



- Remove the indicated screw.
- Pry between the body and the lower panel to spring loose the two latches on the sides.
- Lift the panel out of the third latch.

Step 4 — Remove main body



- Remove single screw at the bottom.
- Remove the screws under the lower panel.
- Gently pry the main body off, by moving the metal spudger from the bottom, where it easily gets between the two parts, to the side.
- When the spudger reaches the notches, click it open.

 Be sure not to try and pry open other spots than the notches!

Step 5 — Layout of the device



- This is as far as I went, since I opened it only for cleaning purposes.
- All components are visible, but there is an extra layer of teardown possible.

To put it back together, follow the instructions backwards.