




# Acer Aspire V5-473P-5602 Motherboard Replacement

How to replace a faulty motherboard in your...

Written By: Kristen Gismondi

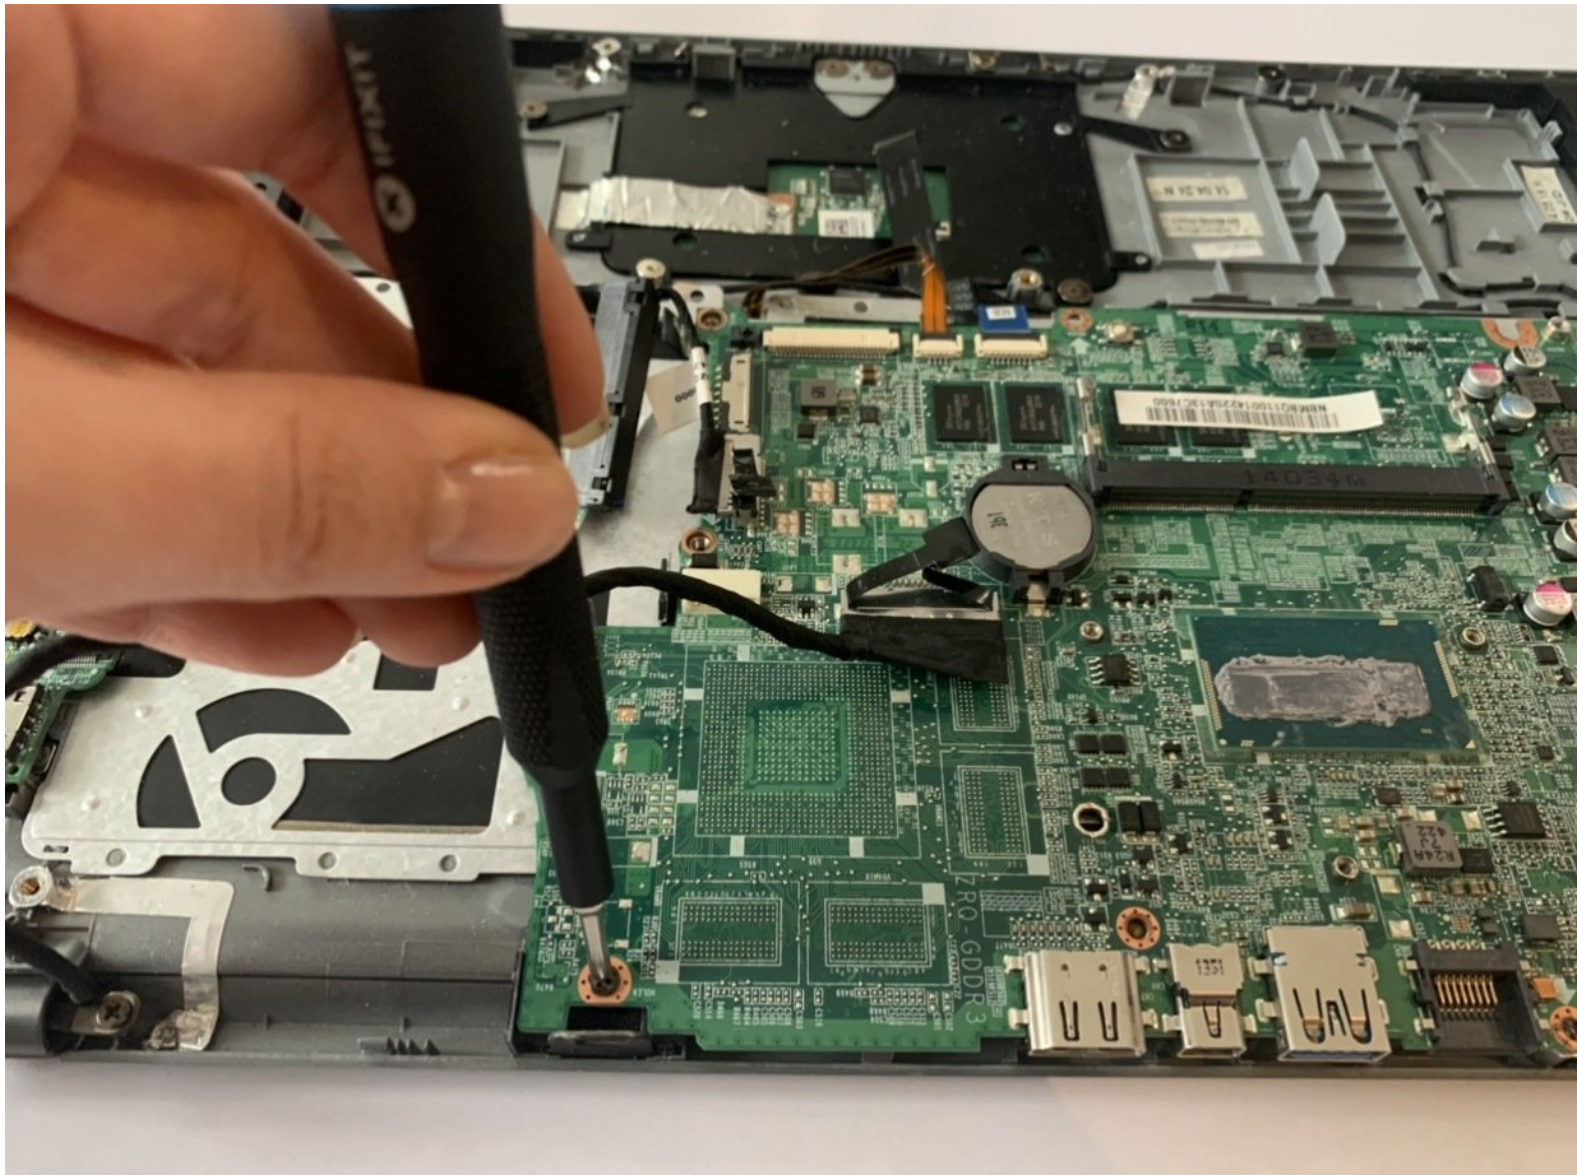

# INTRODUCTION

## How to replace a faulty motherboard in your Acer Aspire V5-473P-5602

The motherboard is the brain of the computer, and a faulty motherboard is a brain-dead system. Fans and drives may work if the motherboard is dead, but most of the time, nothing happens when you turn on the power. A number of things can cause the problem such as a burnt-out graphic chip or a damaged power jack. Check the power supply before disassembling your motherboard. It may be as simple as a bad power connection. If it does not work after using another power source, the motherboard is more than likely faulty.

- Keep yourself grounded to avoid shocking your components by using an anti-static mat OR an anti-static wristband.
- Carpet creates static, so if you do NOT have an anti-static mat or wristband, wear rubber sole shoes while standing on a hard surface floor.
- All computer components should remain in the anti-static bags they came in until ready for installation.
- Complete all 14 steps in order.
- Taking photos as you complete each step will help you keep track of where each component should be.



### TOOLS:



- [iFixit Opening Tool](#) (1)
- [Phillips #0 Screwdriver](#) (1)



### PARTS:



- [Acer AP13B3K and AP13B8K Replacement Laptop Battery](#) (1)

## Step 1 — Back Panel

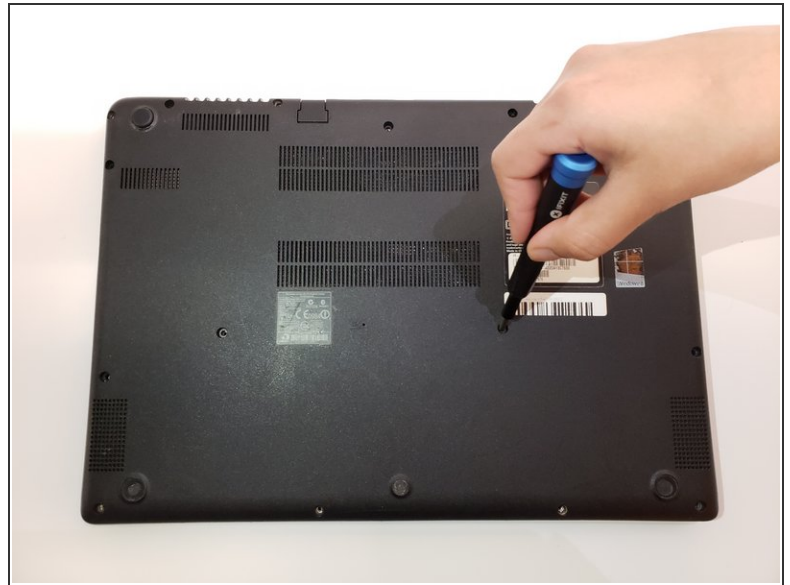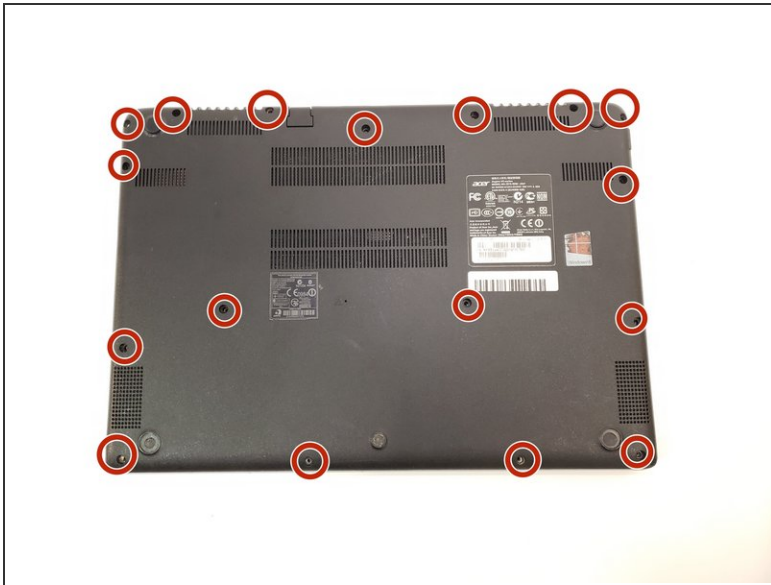


- Flip the laptop over so the back panel is facing upwards.
- Use the Phillips #0 screwdriver to remove seventeen 2.5mm screws.
- Remove the back panel from the laptop using an iFixit opening tool.

## Step 2 — Battery

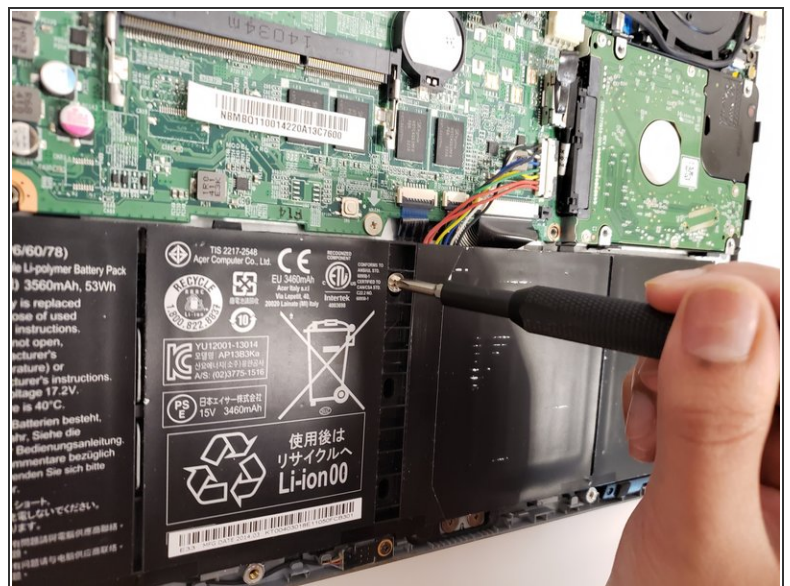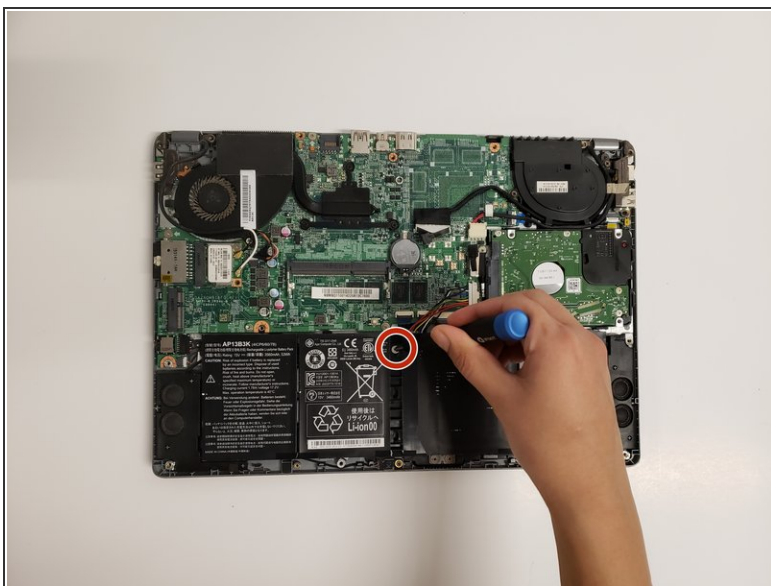


- Remove the Phillips #0 screw from the middle of the battery.

## Step 3

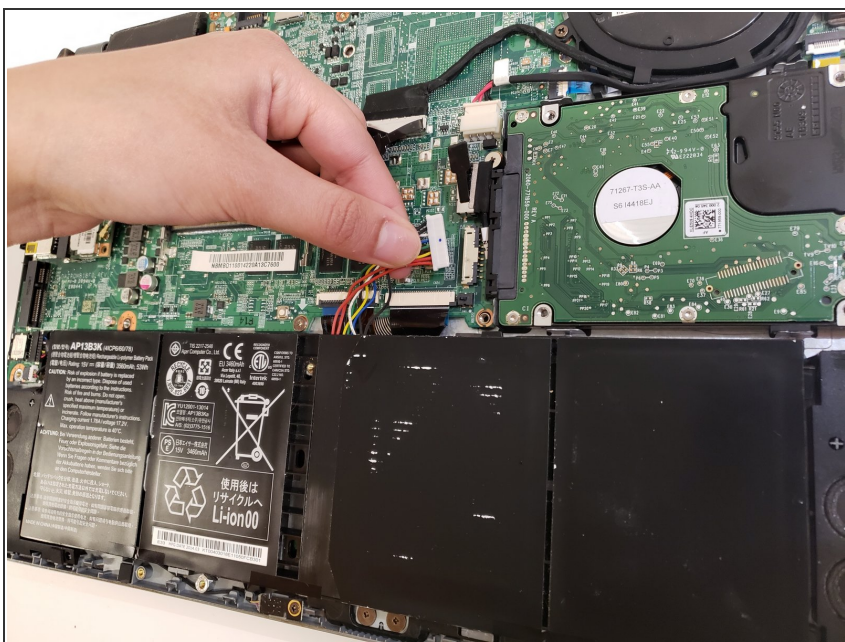


- Unplug the battery from the motherboard.

## Step 4

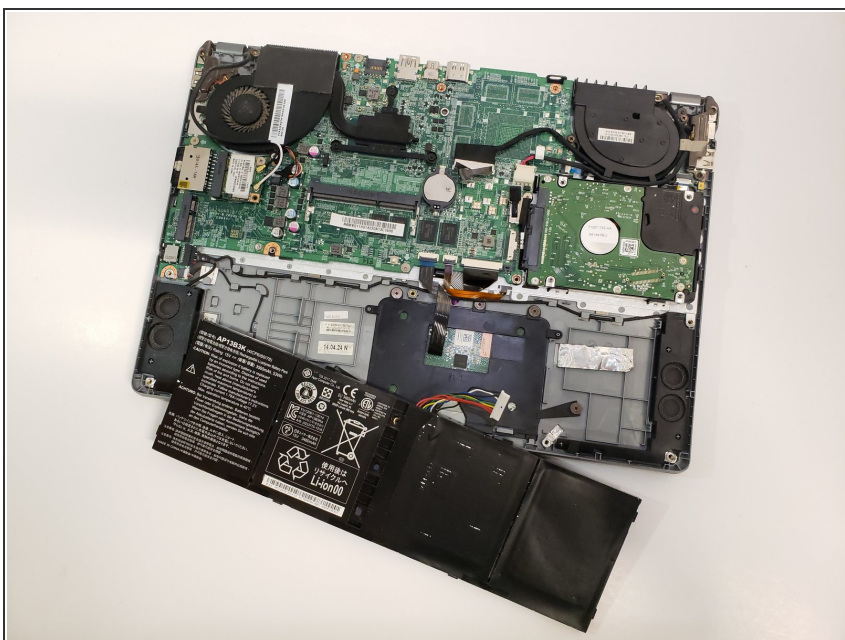

- Carefully take the battery out of the device.

## Step 5 — Hard Drive

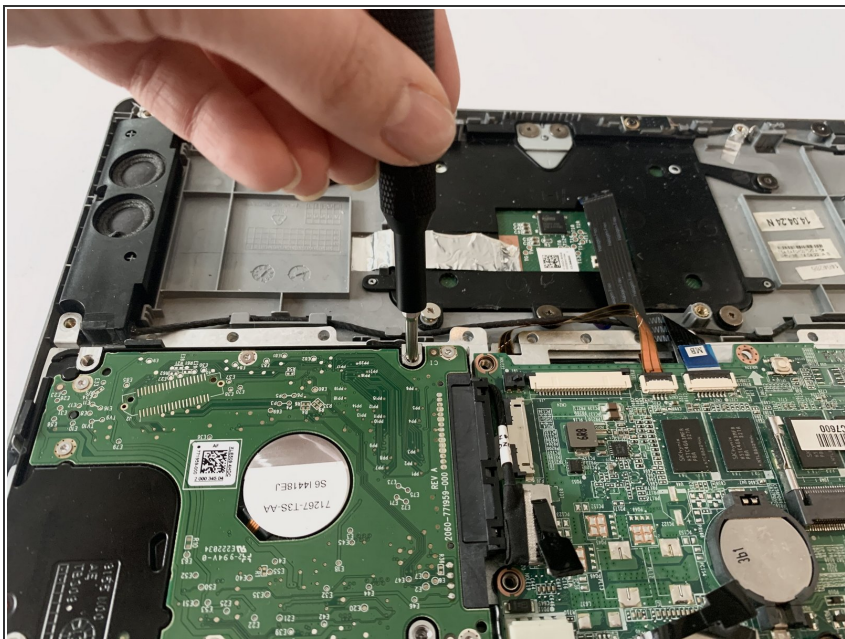

- Remove the four Phillips #0 screws from the hard drive.

## Step 6





- Gently unplug the hard drive connector.

## Step 7





- Remove the hard drive from the laptop.

## Step 8 — Fan

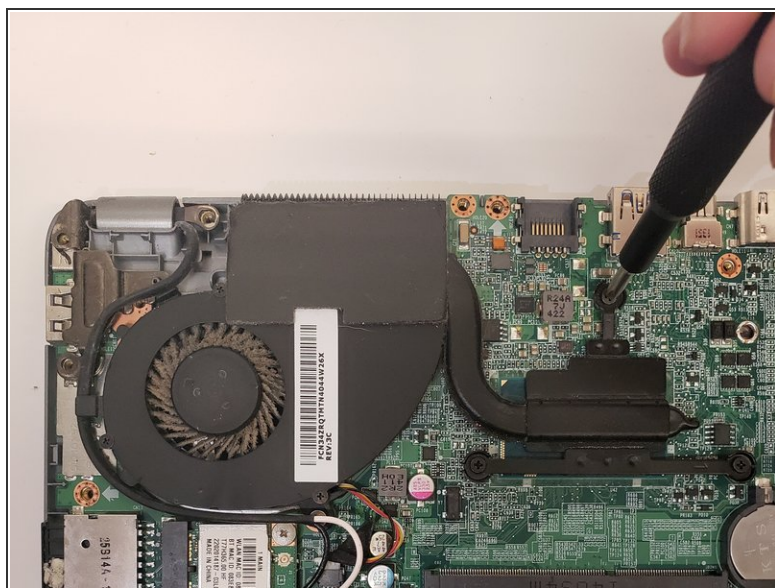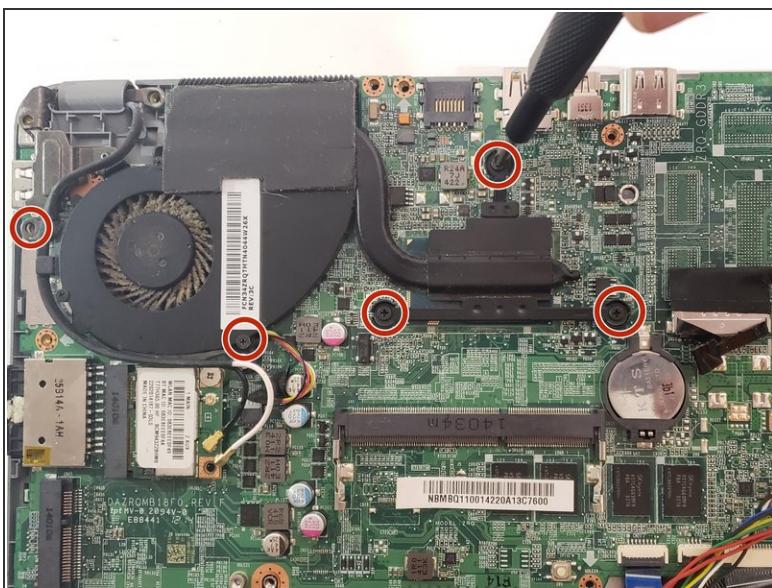


- Remove the five Phillips #0 screws that are holding the fan down to the base.

## Step 9

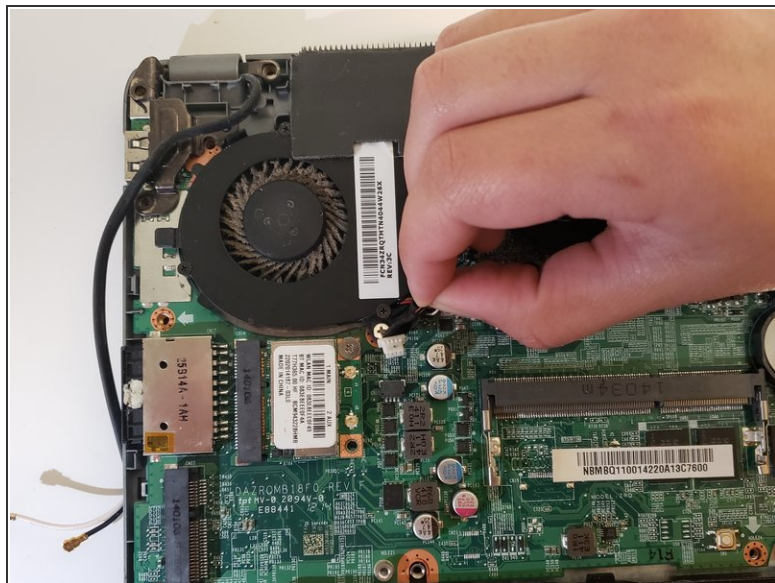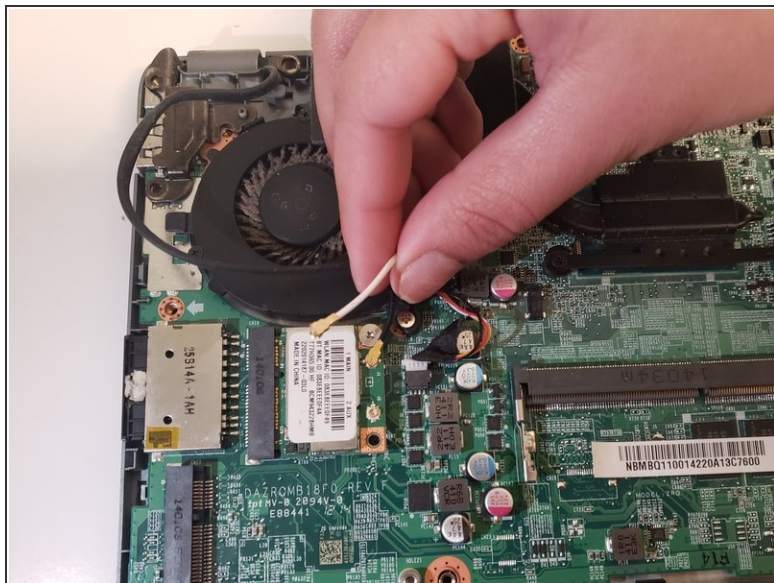


- Gently unplug the cables from the Wi-Fi card.

## Step 10

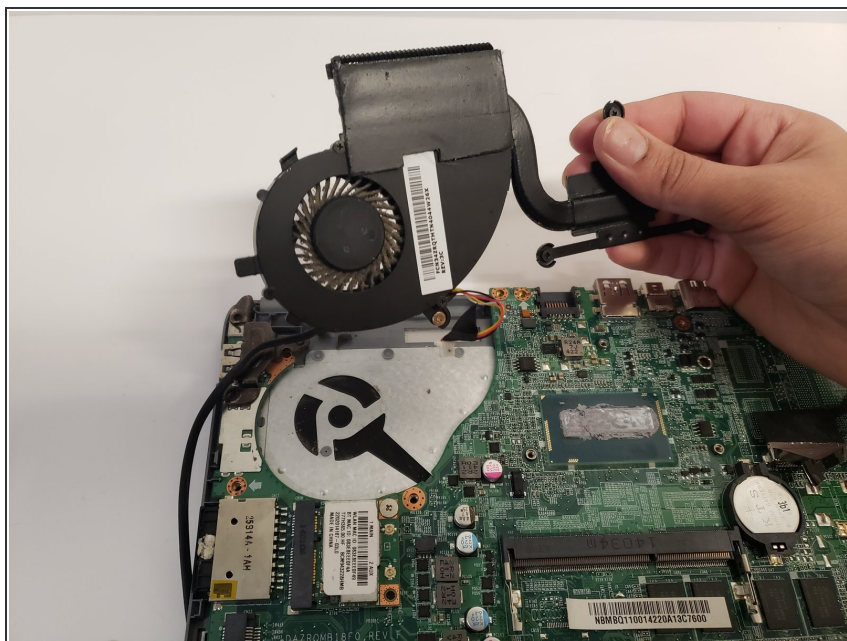


- Remove the fan from the laptop.

## Step 11 — Secondary Cooling Fan

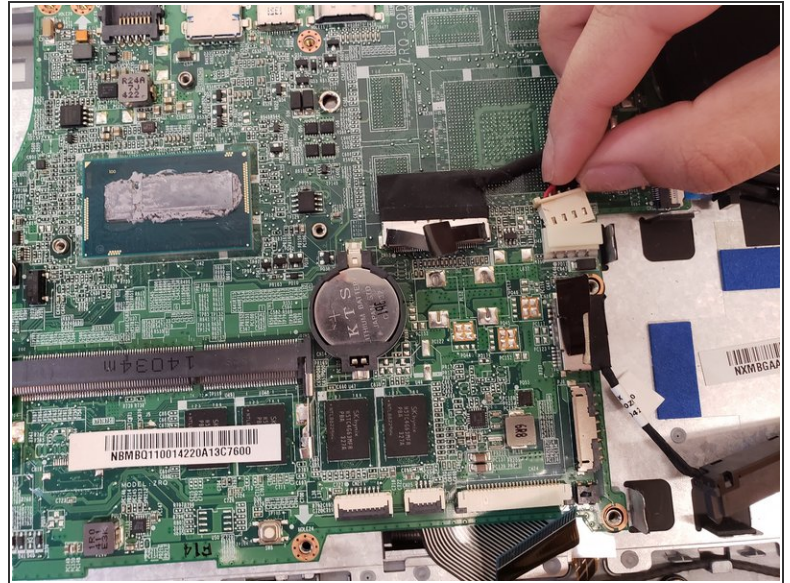


- Unplug the cable that connects to the fan to motherboard.

## Step 12

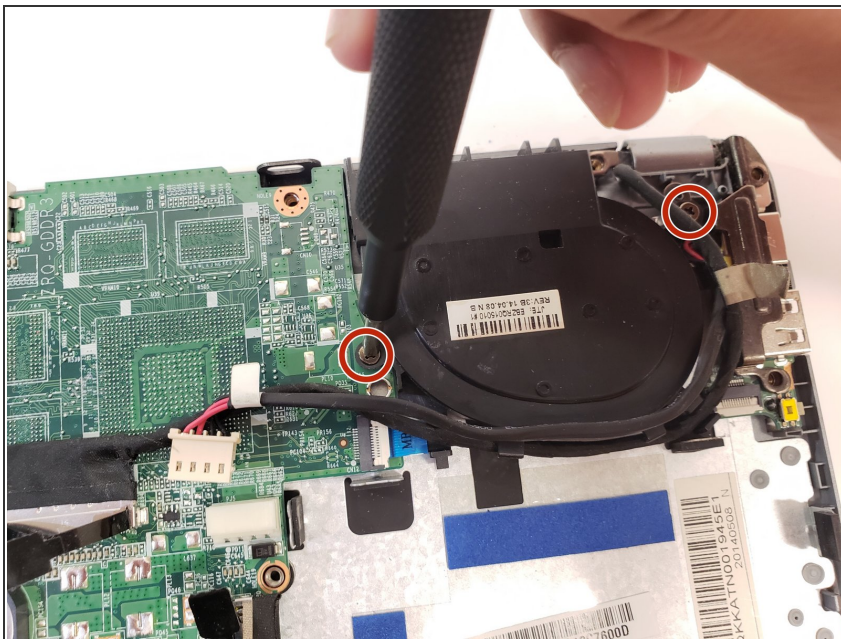


- Remove the two Phillips #0 screws that secure the fan to the base.
- Remove the fan from the laptop.

## Step 13 — Motherboard

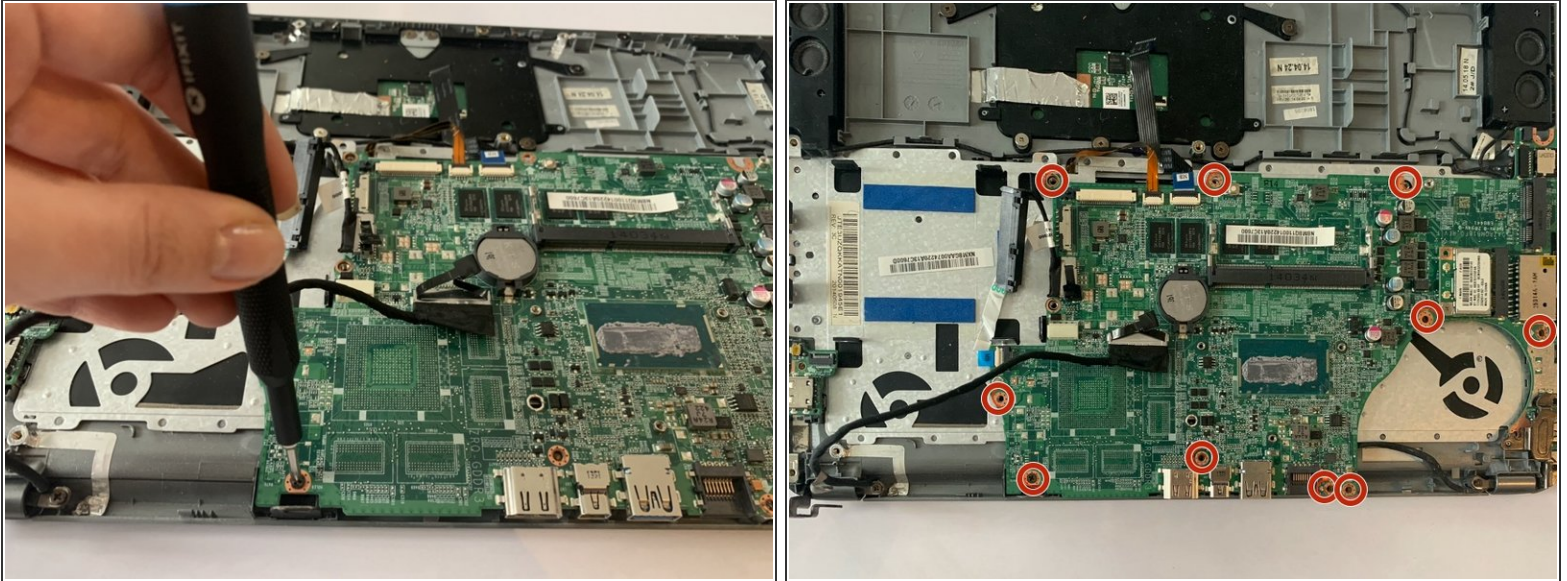

- Remove the ten Phillips #0 screws that attach the motherboard to the keyboard.

## Step 14

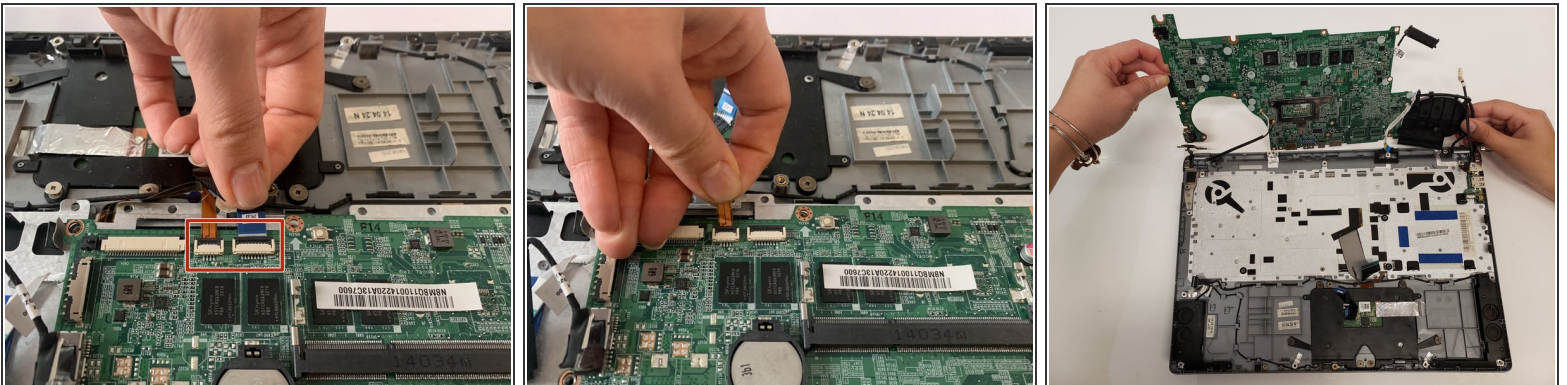

- Unplug the two data cables that attach the keyboard to the motherboard.
- Remove the motherboard from the laptop.

To reassemble your device, follow these instructions in reverse order.