



# Jazz Digi-Stix JDC11 Battery Replacement

Install new batteries into your device.


Written By: Katelyn Fry



## INTRODUCTION

This guide will aid the user in the installation of the batteries in this device. This guide is to be used if the batteries in the device die. When putting new batteries into the device, be sure that the batteries are orientated that right way as shown on the case.

## Step 1 — Battery

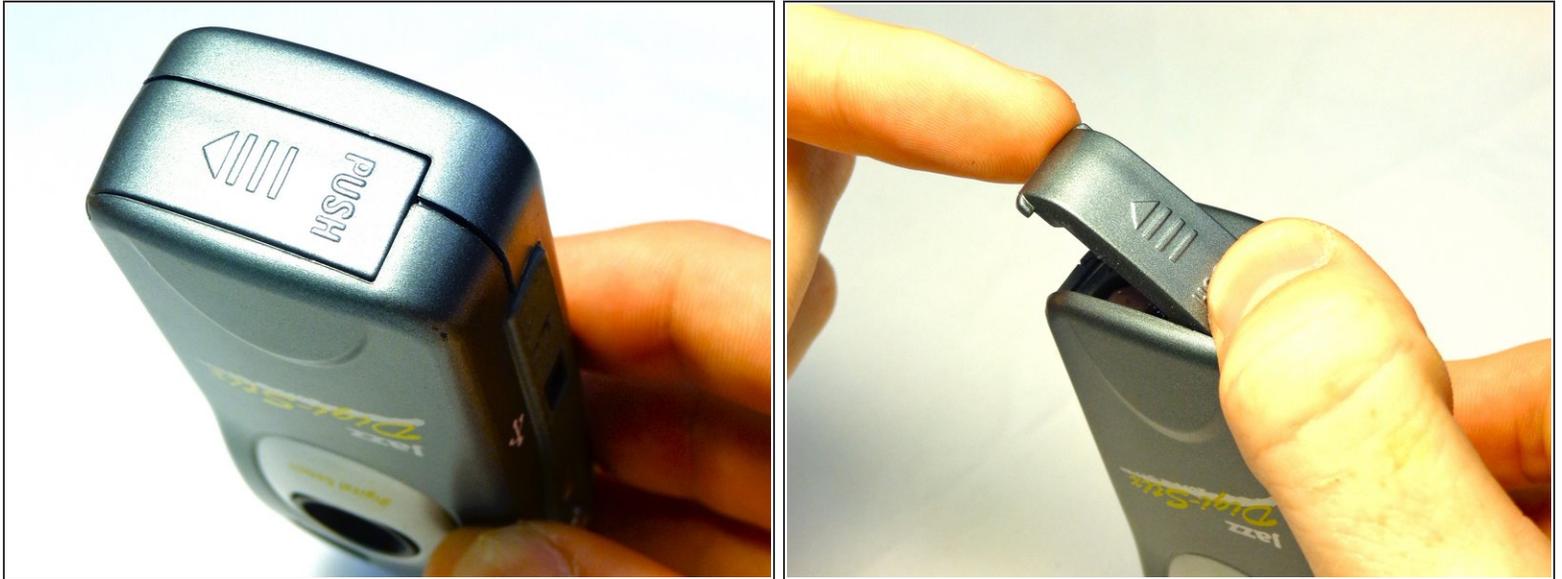

- Flip the device so that the bottom is facing upwards. Using thumb, push the tab on the bottom in the direction indicated by the arrow and then lift the unhinged part of the tab.

## Step 2



- Tilt device so that batteries slide out.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 02:52:09 AM (MST).

