



Nintendo WaveBird Wireless Controller Front Panel Replacement

Remove the front panel of the Nintendo WaveBird Wireless Controller.

Written By: JT Gryder



INTRODUCTION

This guide will help you remove the front panel of the controller. It is a prerequisite guide only.



TOOLS:

- [Y1 Tri-point Screwdriver](#) (1)
-

Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

Step 2



- Remove both batteries from the device.

Step 3 — Front Panel



- Remove the eight 9 mm screws from the back panel using the Tri-point Y1 screwdriver.
- ☑ During reassembly, firmly hold the panels of the controller together while replacing the screws so the panels do not separate.

Step 4



- Carefully turn over the controller and place it on a flat surface.
- Slowly separate the top panel from the bottom panel.
- i The buttons are loose and may fall off the motherboard.
- Once separated, set aside the top panel.
- ✦ During reassembly, make sure the front panel lines up with the buttons so they slide back into place.

To reassemble your device, follow these instructions in reverse order.