



Kobo Arc K107 Screen Replacement

How to remove the screen from the Kobo Arc K107.

Written By: Stephen Pehl



INTRODUCTION

Note that this is a teardown, so reversing this process is either very difficult or impossible. Only proceed if you have no desire to reassemble the device afterwards.



TOOLS:

- [Spudger](#) (1)
- [64 Bit Driver Kit](#) (1)


The star head screws and Philips head screws are the only ones used on the Kobo Arc.

Step 1 — Battery



- Peel the back cover off of the Kobo Arc by finding the lip in the cover and pulling back on it.

Step 2

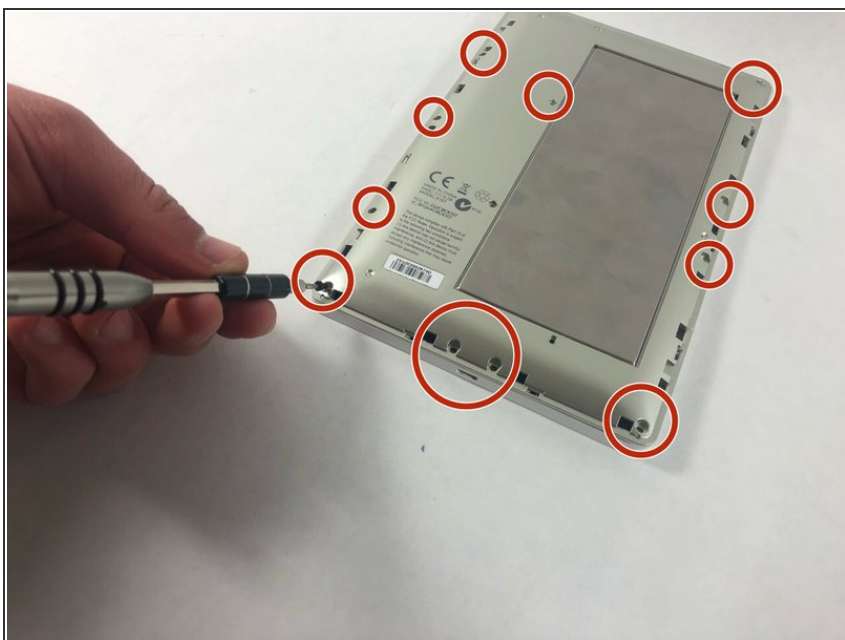


- Remove the screws from the midframe.

Step 3





- Use a nylon spudger to pry up the battery from the device.
- ⓘ It will give some resistance as it is glued down.
- ⚠ Always use plastic or nylon prying tools around the battery. Metal tools can puncture a battery, potentially causing a fire.

Step 4

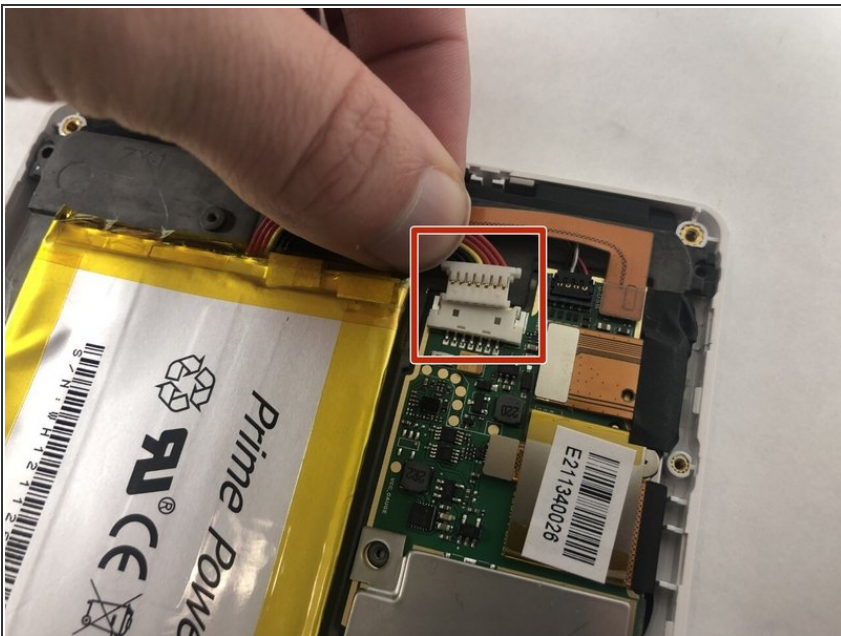

- Unplug the battery connector from the rest of the tablet.
- Remove the battery from the tablet.

Step 5 — Speaker

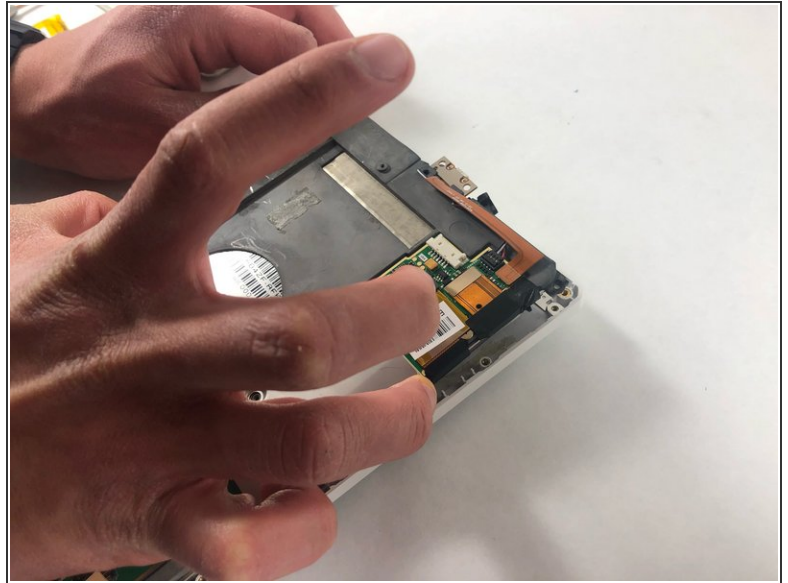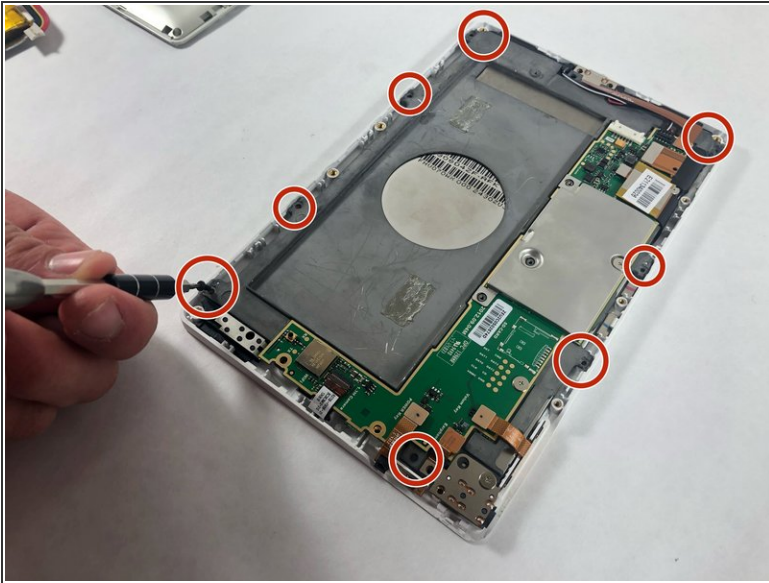

- Remove the screws that are attached to the grey plastic layer.
- Remove the gray plastic layer.

Step 6



- Disconnect the speakers from the tablet.

Step 7 — Screen



- Wedge a nylon spudger between the screen and the tablet.
- Slide the spudger around the edges of the screen and remove it from the device.

To reassemble your device, follow these instructions in reverse order.