



HP Elitebook 6930p RAM (Expansion Slot) Replacement

Installing RAM into the expansion slot

Written By: Richdave



INTRODUCTION

There are 2 RAM slots in the 6930p Laptop. One is the expansion slot and accessible from the underside of the device, the other is the default location for factory installed RAM and is located under the keyboard. **This guide focuses on the expansion slot**



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery Removal



- Flip laptop over and locate the battery release button
- Push release button to the left to release battery and gently pull battery from the laptop

Step 2 — RAM (Expansion Slot)



- Locate the RAM expansion slot cover on the bottom of the laptop
- Loosen the PM2.0×5.0 captive screw and remove the cover.

Step 3



- Install RAM module into the RAM slot on an angle of around 30 degrees
- Press the RAM module down with your fingers on each corner until it clicks into the 2 metal clips and is locked down
- Check to ensure the metal tabs are holding the RAM module down on both sides
- Reinstall the RAM cover

To reassemble your device, follow these instructions in reverse order.