



Lenovo Y50-70 Touch Hard Disk Drive Replacement

In this guide, the reader will go through the...

Written By: Summer Liampetchakul



INTRODUCTION

In this guide, the reader will go through the necessary instructions needed to replace a non-functioning hard disk drive in the Lenovo Y50-70 Touch Laptop.

This specific repair does not require any previous knowledge about computers and can be completed by a beginner using only a single Phillips #1 screwdriver and a small, plastic, prying tool.

When performing this repair, ensure you are in a static free environment so as not to provide an electrical shock to the computer and possibly further damage the device. It is also recommended to keep track of removed parts in a separate enclosed container so to not lose any necessary components needed to put the computer back together.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)



PARTS:


- [1 TB SSD](#) (1)
- [250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [Crucial MX500 2 TB SSD](#) (1)

Step 1 — Hard Disk Drive




- Use a Phillips #1 screwdriver to unscrew and remove the ten 6 mm screws on the bottom cover.
- Remove the bottom cover.

Step 2

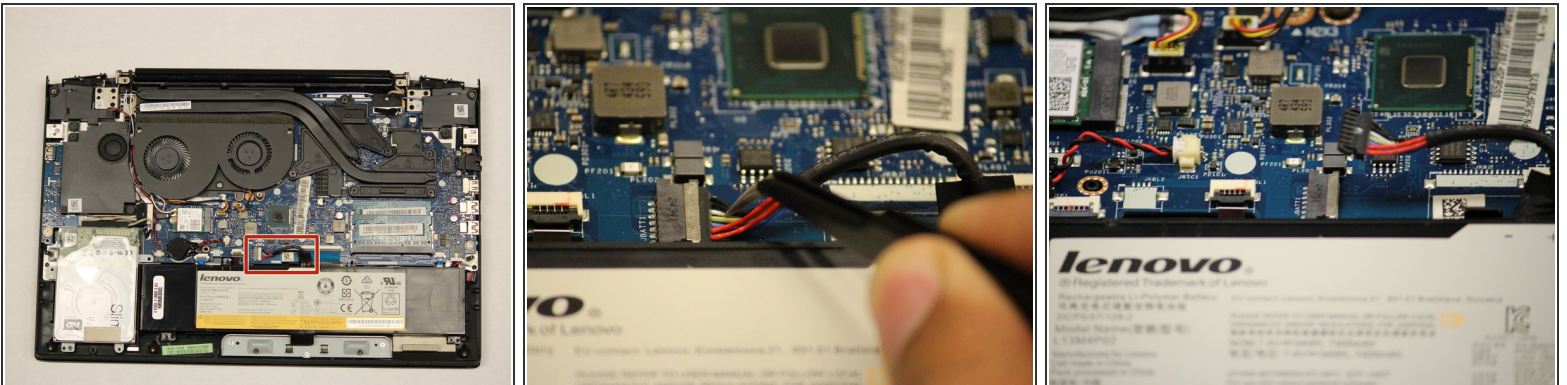


- Disconnect the battery from the motherboard.

Step 3

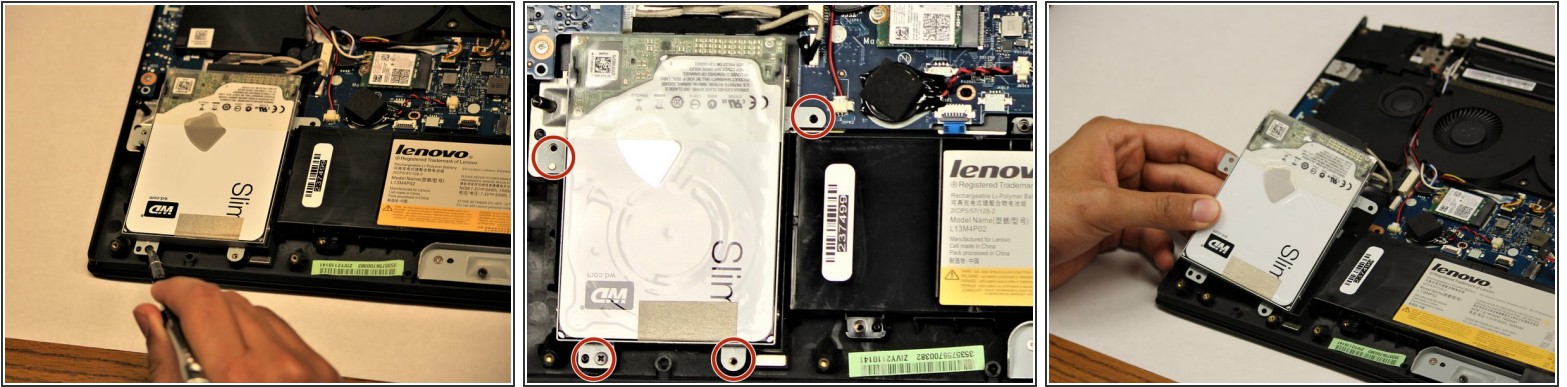

- Remove the four 6 mm screws from the disk drive.
- Lift the hard drive and pull it out to remove it.

Step 4

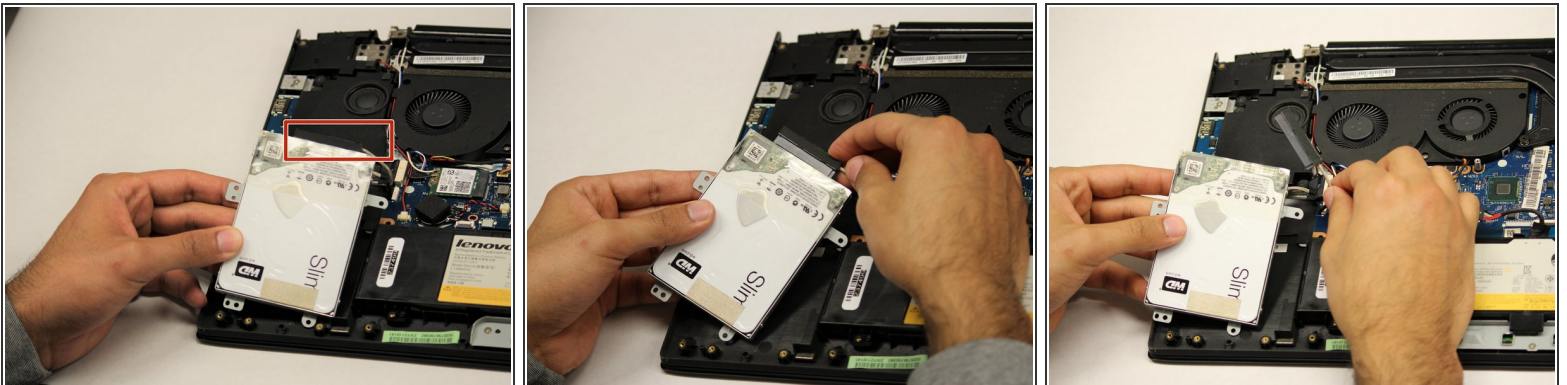

- Finally, unplug the hard drive from the motherboard by pulling to disconnect the highlighted cable.

To reassemble your device, follow these instructions in reverse order.