


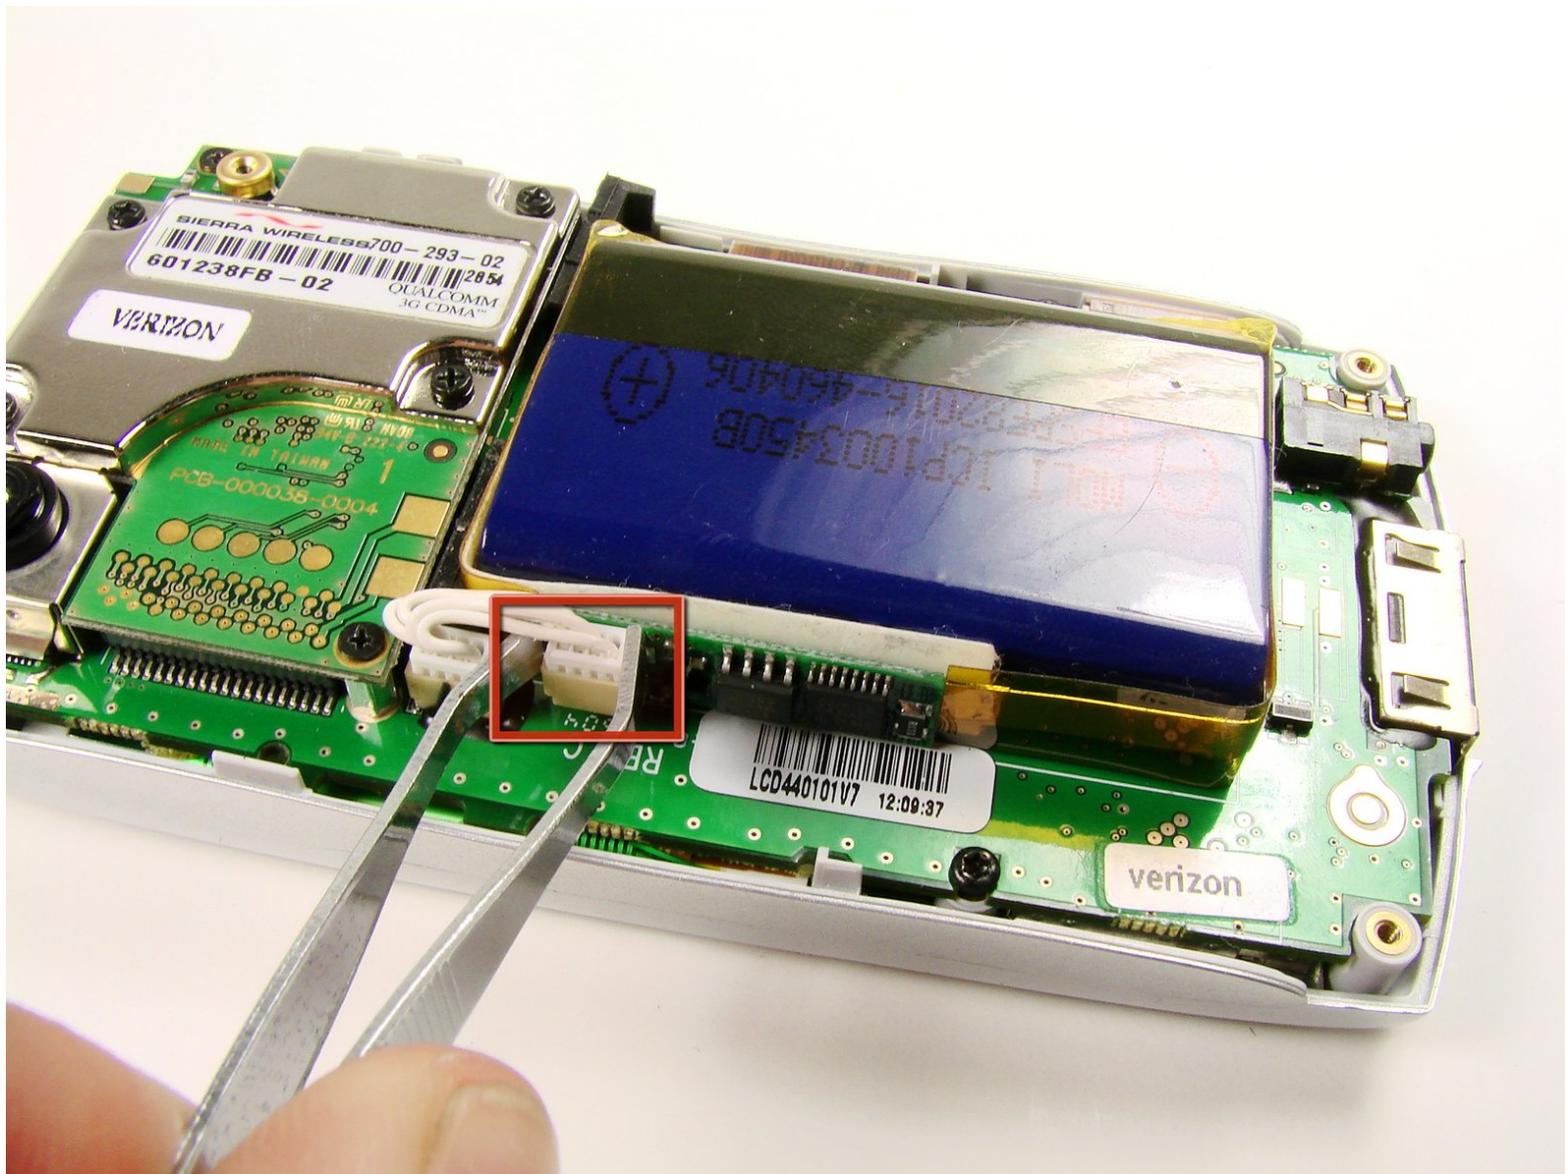

# Palm Treo 600 Battery Replacement

Written By: Clement Poisson



---

## INTRODUCTION

Follow this guide if the battery is dysfunctional and you want to replace it.

---

### TOOLS:

- [Tweezers](#) (1)
  - [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Back Case



- On the back of the device, locate the 3 rubber plugs, and use a plastic spudger to remove them.

## Step 2



- Use the T6 Torx Screwdriver to remove all 4 screws.
- ⓘ You have to first remove the Stylus to access the 4th screw.


## Step 3



- Using a plastic opening tool, carefully separate the front and back cases.


**i Note:** The antenna will detach from the phone.

## Step 4 — Battery

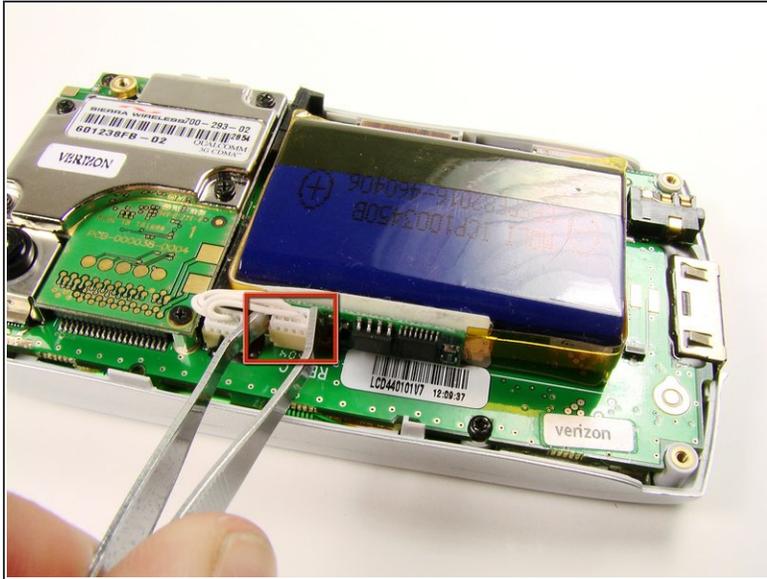

- Using metal tweezers, unplug small white plug.
- ☞ Pulling the white plug will disconnect the battery. Make sure the phone is off before you do this step.

## Step 5

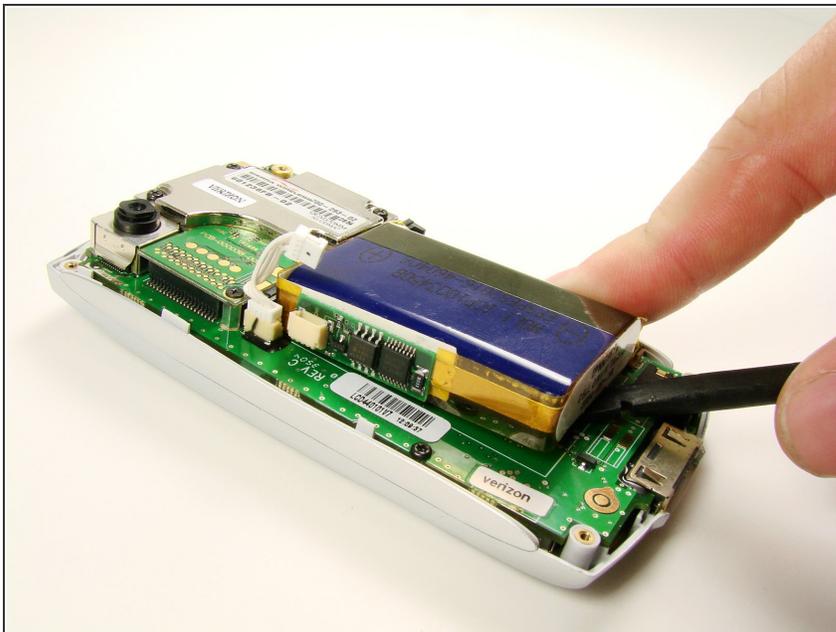

- Slide the flat side of the spudger under the battery and gently dislodge the battery by lifting the spudger up.
- ⓘ The battery may be glued to the phone.

To reassemble your device, follow these instructions in reverse order.