



Game Boy Advance Speakers Replacement

Written By: Adam



INTRODUCTION

Use this repair guide in order to replace the speakers.

TOOLS:

- [Desoldering Braid](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Lead-Free Solder](#) (1)
 - [Soldering Workstation](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
-


Step 1 — Remove the Battery Cover/Batteries



- Take the battery cover off by releasing the locking tab and hinging the cover away. Remove the batteries inside the cover


⚠ Do not forget to remove the batteries! This applies to working with any electronic device as working with live electricity may damage the device or cause malfunctions

Step 2 — Unscrew the Back Panel

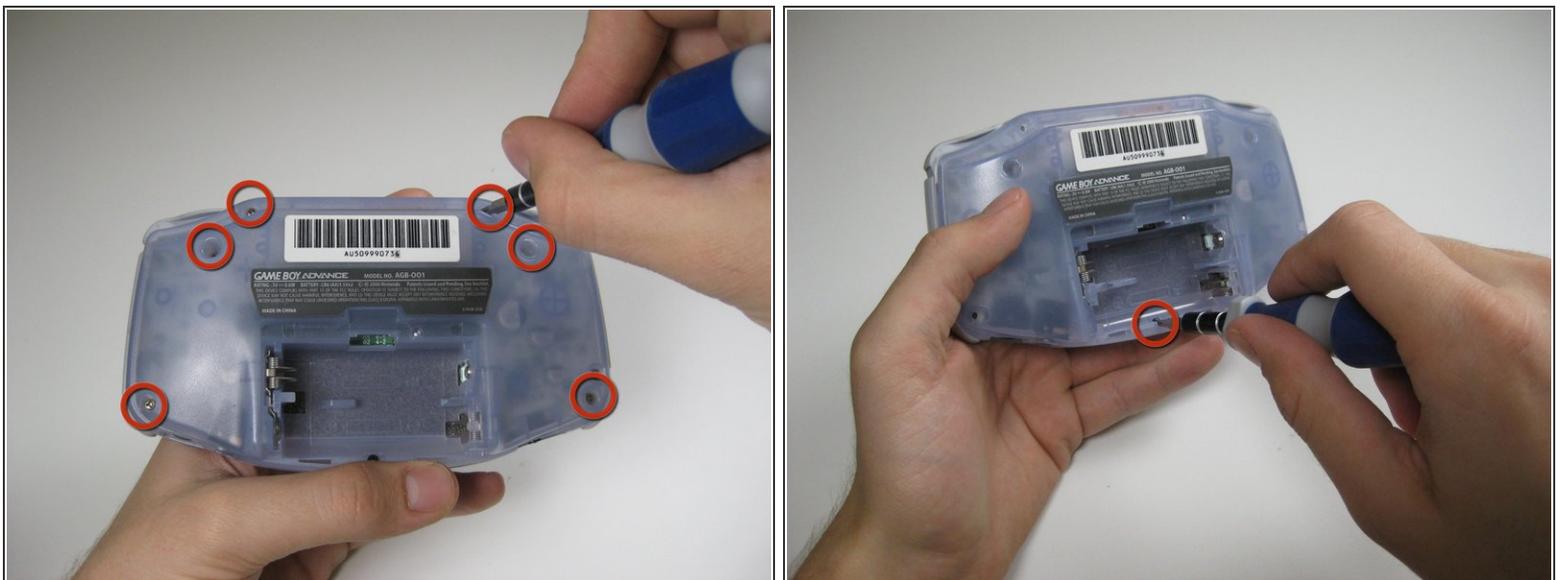

- Remove the six back panel screws using a Tri-wing Screwdriver.
- Remove bottom back panel screw with a Phillips #1 screw driver. (Image #2)

Step 3 — Remove the Back Panel

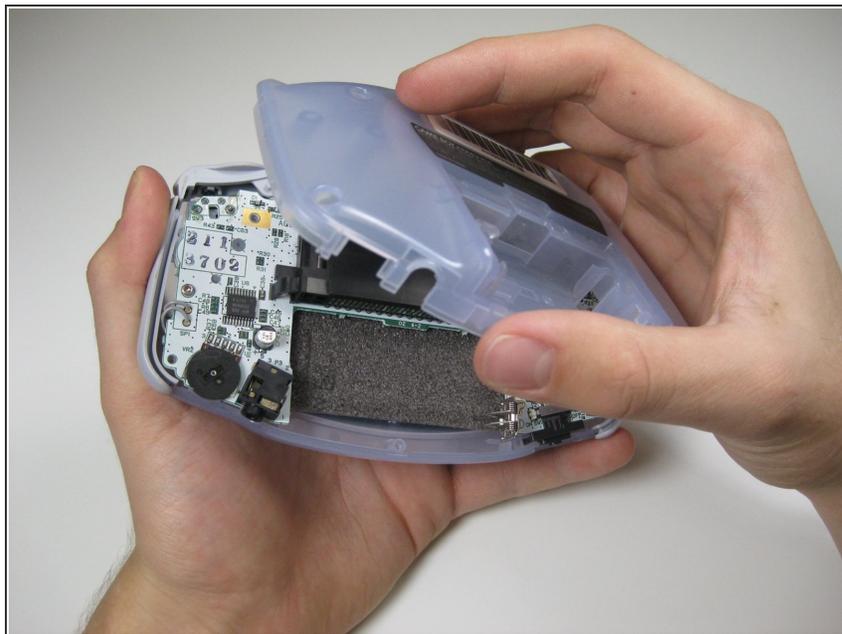

- Remove the back panel by pulling away with one hand and the front secured in the other hand.

⚠ Removal of the back panel may cause shoulder buttons and side panels to come loose and fall off.


Step 4 — Remove Triggers



- Remove left and right triggers by lifting and pulling them away from the system.
- Do the same for side panels

i **For finicky or jammed triggers only!** Adjust and correct triggers and reassemble. Most jammed triggers are caused by buttons misplaced or jammed in its enclosure.

Step 5 — Remove the On/Off Switch

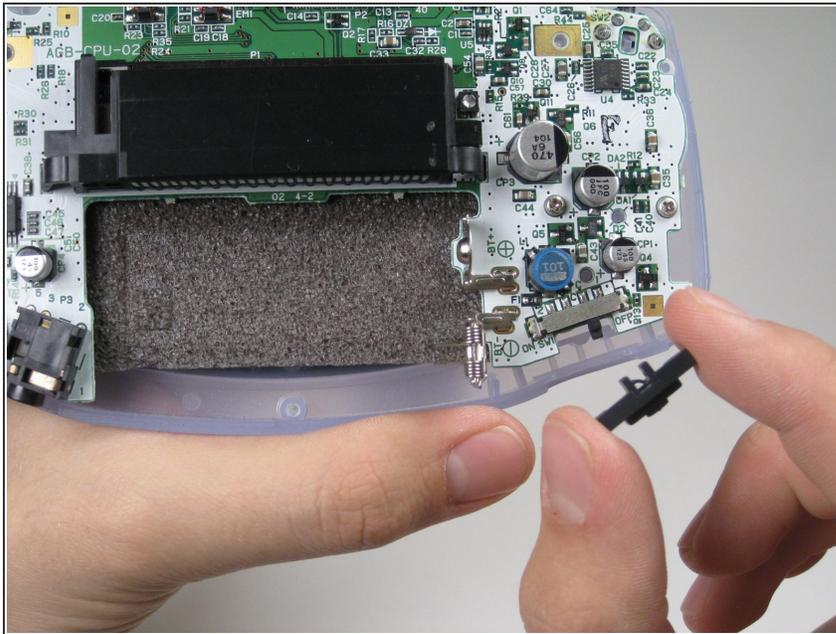

- Remove the gray **On/Off** Switch by pulling up and away from the unit. Replace with another switch if necessary.

Step 6 — Buttons




- Remove the rubber button pads from their pockets.
- Remove the plastic buttons and the D-pad from beneath the rubber pads with tweezers or by hand.

Step 7 — Speakers



- Using the tweezers, gently pull the ribbon from the logic board.

Step 8

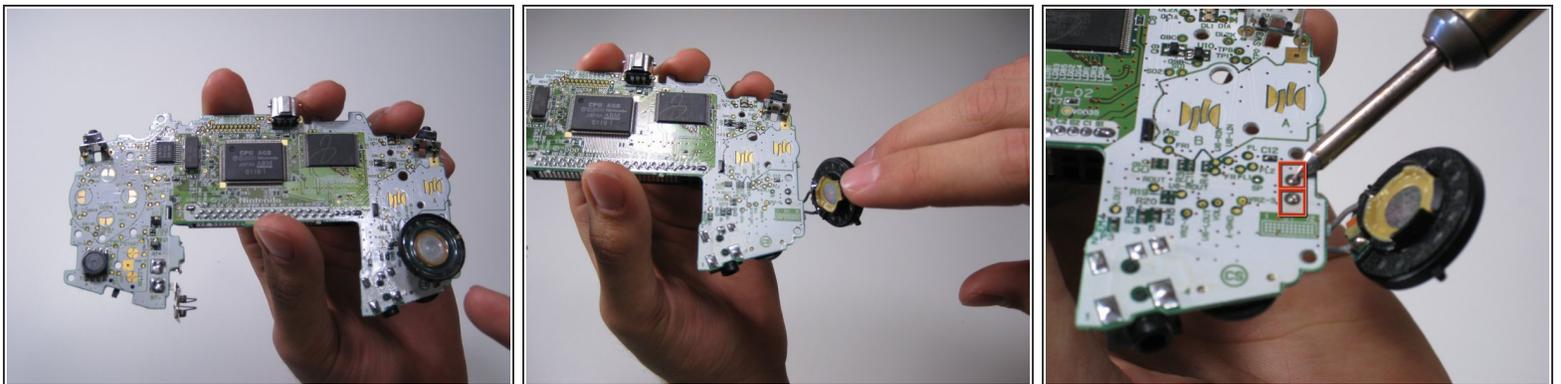

- Slightly move the speaker to the right and desolder the two wires from the logic board.

⚠ Beware of over heating the soldering kit will damage the logic board.