



Repairing AcuRite Intelli-Time Alarm Clock

Unresponsive Buttons

The buttons do not move when pressed

Written By: Nicholas Roppolo





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Opening the Device



- Flip device upside down and remove the 4 foam pads at each corner.

Step 2



- Remove the 4 screws using a Philips Screwdriver.

Step 3




- Gently lift the case off of the body and set down in a safe place.

Step 4 — Repairing AcuRite Intelli-Time Alarm Clock Unresponsive Buttons



- Unscrew Circuit board attached to the top of the case with the one screw in the center. Be careful not to strip the screw/break the circuit board.

Step 5

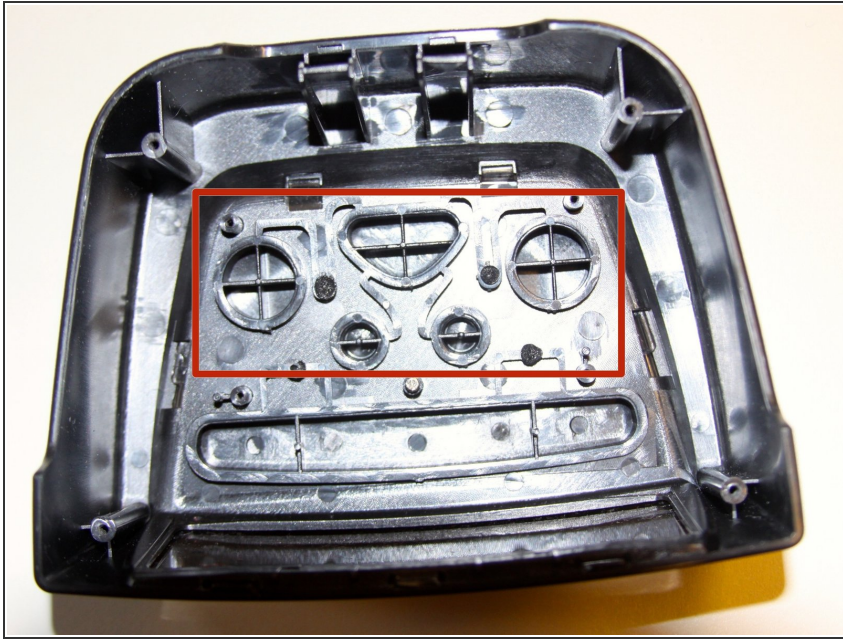

- Make sure all of the buttons are move-able.

Step 6



- Press buttons on circuit board while listening for a click.

Step 7



- If everything works on the inside, that might mean you need a new circuit board.

To reassemble your device, follow these instructions in reverse order.